ACCESSORY CRUISER WINDSCREEN KIT

KIT P/N 2879574; 2879575; 2879576

Application

All MY14 Indian Cruiser Motorcycles

NOTE: Before you begin, read these instructions and check to be sure all parts and tools are accounted for in package. Please retain these installation instructions for future reference and parts ordering information. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown below.

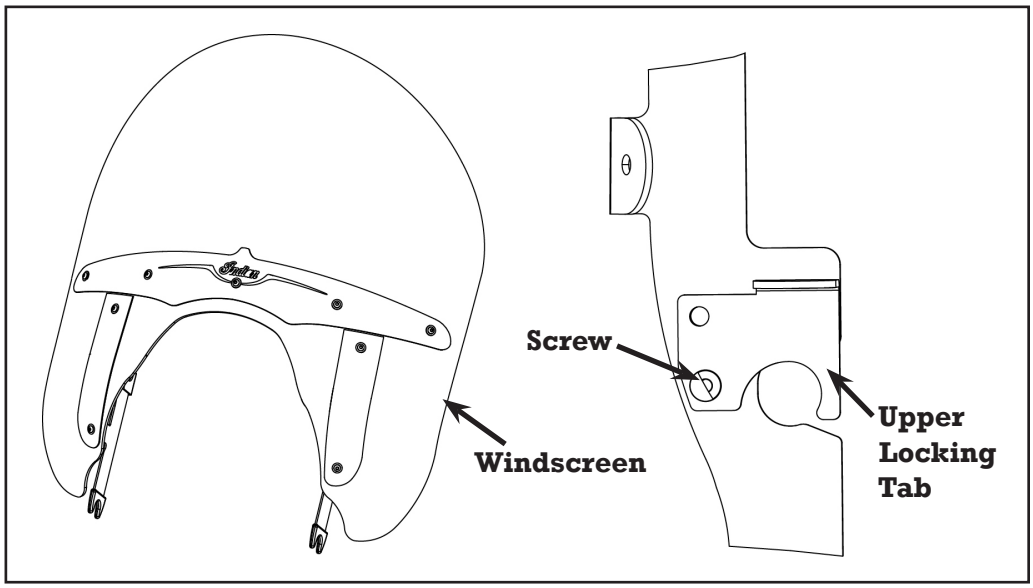

Kit Contents:

Quantity	Part Description	Part Number
1	Cruiser Windscreen, Low	2635092
Or		
1	Cruiser Windscreen, Mid	2634939
Or		
1	Cruiser Windscreen, Tall	2635093
And		
1	Instructions	9924354

You will need to supply:

Protective Cloth

INSTALLATION INSTRUCTIONS

NOTE: Protect all finished surfaces during these operations.

Removal

1. If installing a replacement accessory windscreen, remove windscreen by locating and opening upper locking tabs. While holding on the sides of the windscreen and standing in front of the vehicle, pull a short distance until the top mounts disengage from the top two mounting spools. Lift straight up to disengage the lower windscreen mounts from the lower spools.

Installation

1. While holding the sides of the windscreen and standing in front of the vehicle, locate and place the lower mounts of the windscreen over the lower mounting spools on the front suspension.
2. Open the two upper locking tabs.
3. Rotate the windscreen about the lower spools until the upper windscreen mount snaps into place over the upper mounting spools on the front suspension.
4. Close the upper locking tabs until they lock into place.
5. Optional: Add M6 screws through locking tabs for theft deterance.

CAUTION: Do not use glass cleaner, water or soil repellents, petroleum or alcohol based cleaners as the product can damage the Lexan (plastic) material.

CAUTION: The Lexan Plastic is easily scratched. Protect during installation.