

DRIVER SEAT KIT



P/N 2881765

APPLICATION


Indian Motorcycles with the Thunderstroke 111 Engine

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

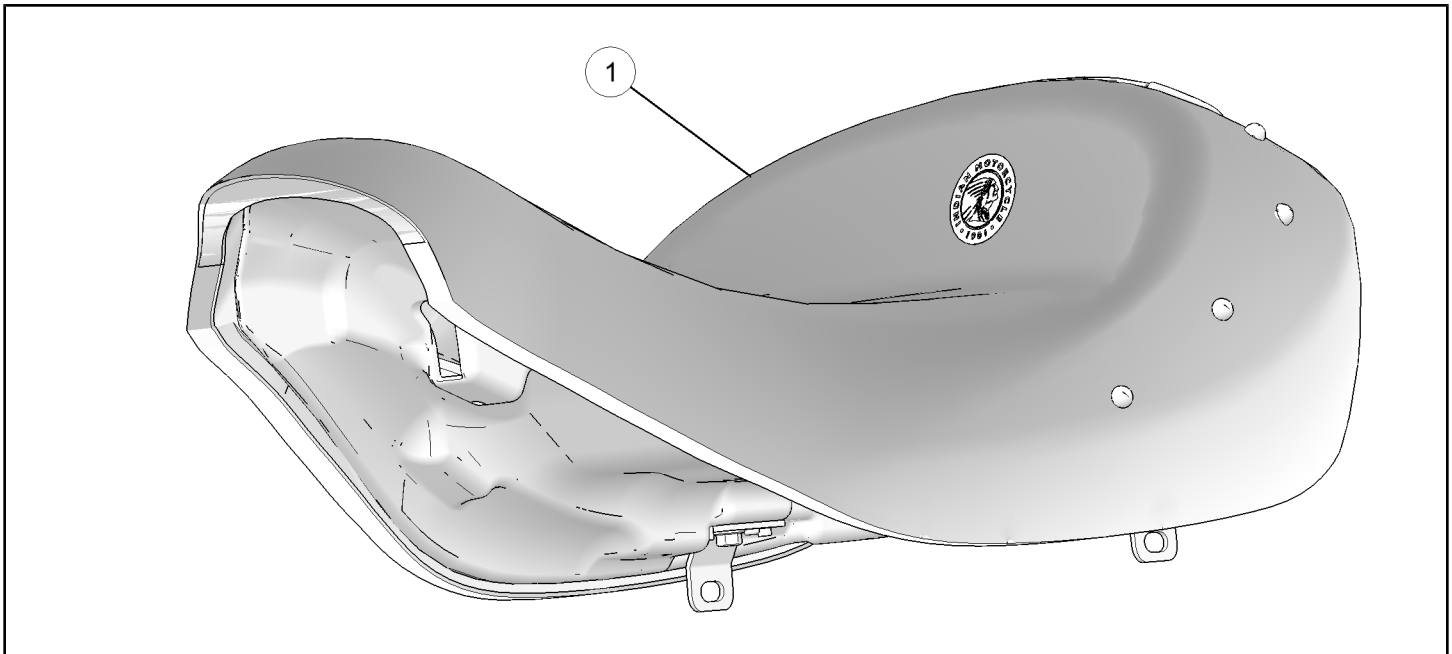

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Driver Seat	2687234
	1	Instructions	9926863

TOOLS REQUIRED

- M6 Allen Head Wrench
- M5 Allen Head Wrench
- Torque Wrench

IMPORTANT

Your Indian DRIVER SEAT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


ASSEMBLY TIME

Approximately 15 minutes


INSTALLATION INSTRUCTIONS

STOCK SEAT REMOVAL

1. If driver seat has valanced flaps, lift up flaps to access the seat's mounting bolts (A). Use the M6 Allen wrench to remove bolts as shown.

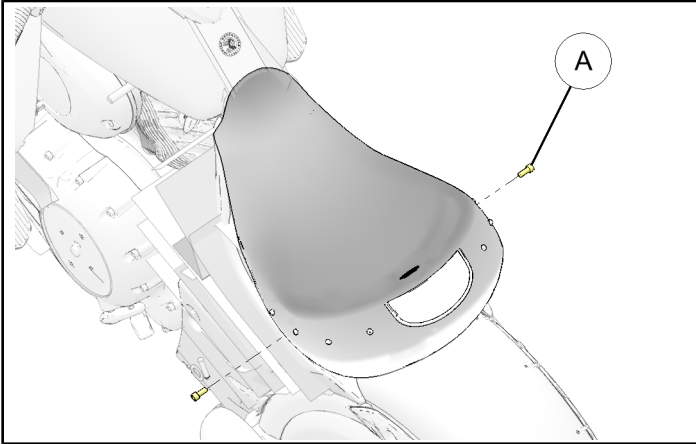

2. If equipped with passenger seat, remove rear bolt (B), metal washer (C) and plastic washer (D) with M5 Hex.

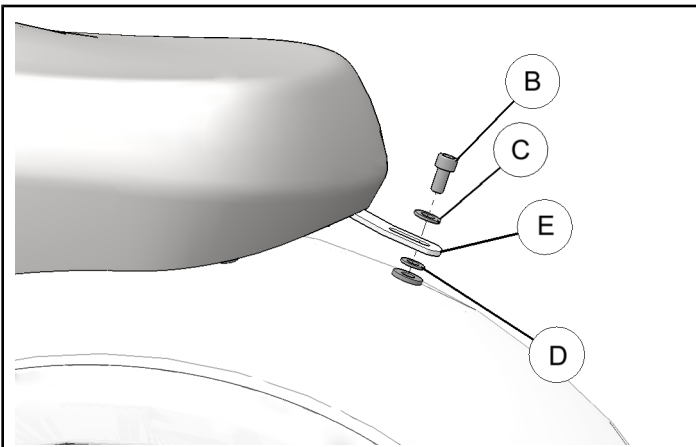


3. After removing rear passenger seat bolt place a cloth under the passenger seat bracket (E) to protect the rear fender paint.
4. Lift up on the seat (s) and slide toward rear of bike.

DRIVER SEAT ASSEMBLY

1. Re-install driver seat ① mounting bolts (A) using M6 hex key socket and torque to following specification.

TORQUE

18 ± 2 ft. lbs. (24.4 ± 2.7 Nm)

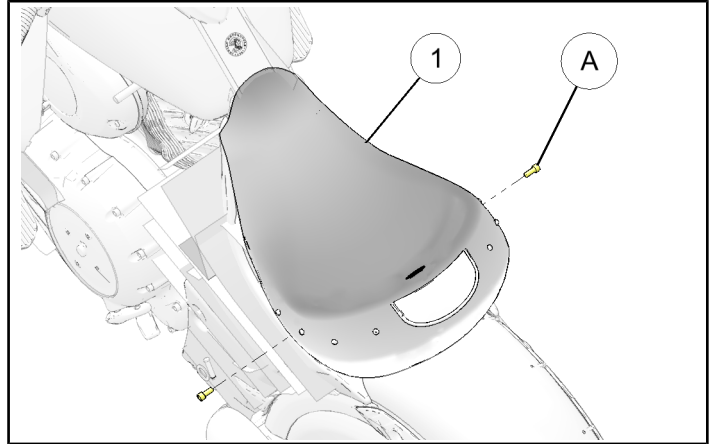

⚠ WARNING

Seat must be properly installed for safe operation of motorcycle. Improper installation could lead to loss of control, and result in serious injury or death.

Clean the seat with warm water, mild soap and a soft cloth. Let air dry.

NOTE

Leather will lose oils and condition with time and exposure to the elements. Leather Dressing will add back many of the oils that are lost from exposure to the weather. Apply dressing with a clean dry cloth. Use generously and allow to soak in. Allow to dry overnight. Wipe off excess. Under normal conditions annual application is sufficient.