


Installation

1. Remove existing screw from battery mount. See Figure 1.
2. Route wiring harness as shown and loosely start screw into threaded hole on vehicle.
3. Install existing screw from step 1 back into the hole it came from and other screw into remaining bracket mount hole.
4. Starting with the screw under the wiring harness, torque all screws to 90 +/- 9 in.lb (10.2 +/- 1.0 Nm).
6. Replace seat and torque seat screws to 18 +/- 2 ft.lb (24.4 +/- 2.7 Nm).

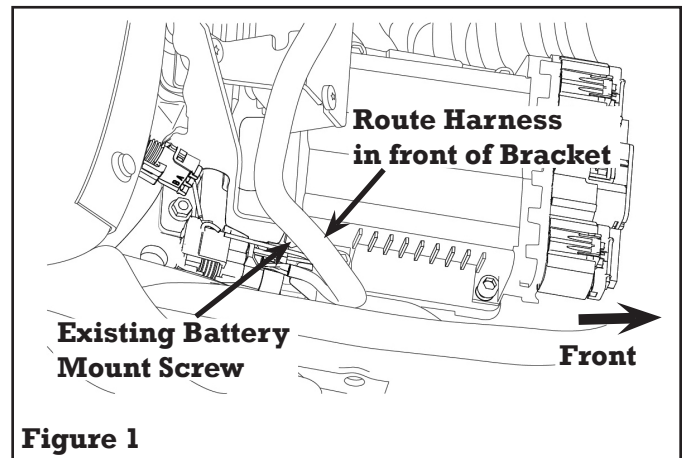

WARNING: Wiring harness must be routed properly or severe damage to your vehicle will occur.

WARNING: Ensure frame tabs are engaged in seat base pockets when installing seat.

WARNING: Re-torque all fasteners after 500 miles.