

AIRBOX PAD KIT



P/N 2884770; 2884771


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.indianmotorcycle.com.

KIT CONTENTS

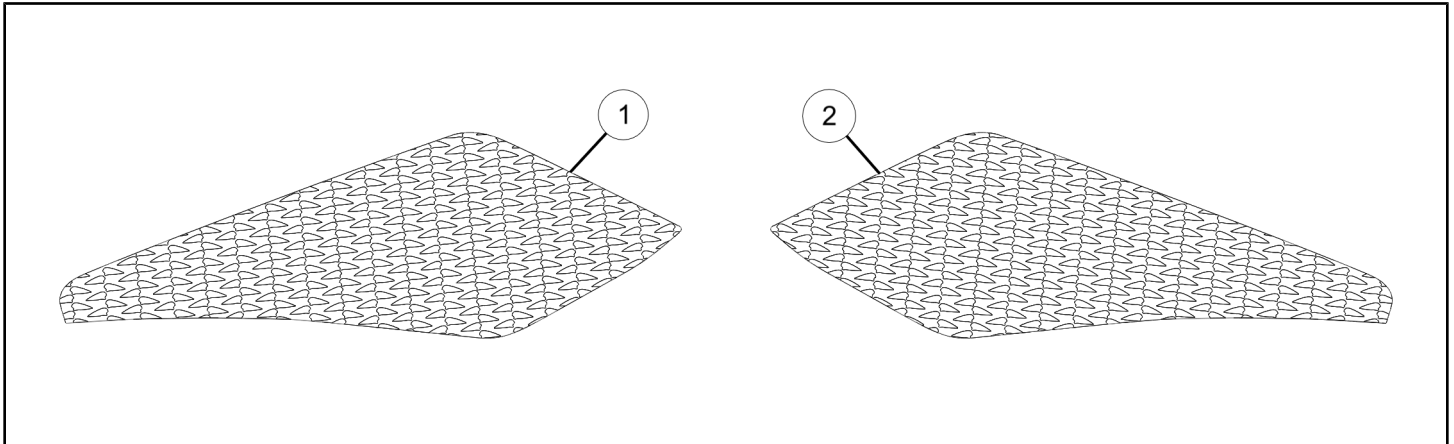

CLEAR AIRBOX PADS P/N 2884770

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Pad-Airbox, Left-Hand	5417395
2	1	Pad-Airbox, Right-Hand	5417396

BLACK AIRBOX PADS P/N 2884771

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Pad-Airbox, Left-Hand	5417397
2	1	Pad-Airbox, Right-Hand	5417398

TOOLS REQUIRED

- Safety Glasses
- Heat Gun (or equivalent)

IMPORTANT

Your Indian Motorcycle® Airbox Pad Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL

1. Park motorcycle on a flat surface, fully extend kickstand, and make sure vehicle is stable.
2. Turn key to OFF position and remove key.

ACCESSORY INSTALLATION

NOTICE

Right-hand pad shown; left-hand pad similar.

IMPORTANT

Allow airbox pad adhesive to cure 24-72 hours before riding.

1. Make sure airbox cover is clean of debris. Allow airbox cover to air dry if water or a cleaning solution was used to clean.
2. Test-fit airbox pad with contours of airbox cover.
3. Peel backing from rear of pad and align with rear part of airbox cover.
4. Slowly apply along bottom contour of air box cover.

TIP

Use heat gun or equivalent to remove air bubbles.

IMPORTANT

Airbox pad and vehicle components can be damaged by excessive heat. Always use caution when using heat gun to prevent damage to accessory or vehicle.

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

