

FRONT FENDER TRIM KIT


KIT P/N 2880102



Application

All MY14 Indian Chieftain Motorcycles

NOTE: Before you begin, read these instructions and check to be sure all parts and tools are accounted for in package. Please retain these installation instructions for future reference and parts ordering information. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown below.

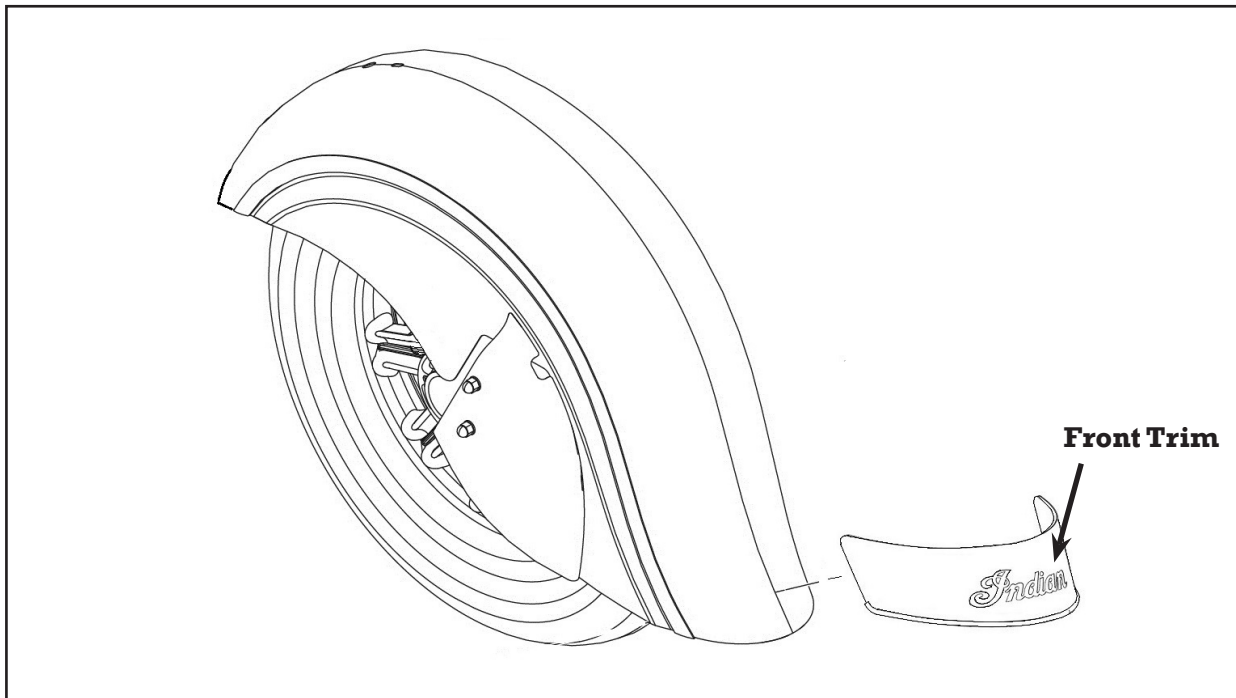

Kit Contents:

Quantity	Part Description	Part Number
1	Front Trim	2686039
1	Instructions	9924996

You will need to supply:

Cleaning Solution and Cloth

APPROXIMATE ASSEMBLY TIME: 18 minutes

INSTALLATION INSTRUCTIONS

NOTE: Protect finished surfaces for these operations.

Vehicle Preparation Instructions:


1. Clean the rear surface of the front fender to remove any dust, dirt or grime.

Installation:

2. Test-fit fender trim to fender, orienting the trim by aligning the lower edge of the fender to the lower edge of the trim. Repeat this step several times, ensuring that you will be able to correctly position the trim on the fender when the adhesive backing is removed.

IMPORTANT: The adhesive used to adhere the trim to the fender is very aggressive. If you do not position it correctly, it will not be possible to remove or reposition the trim without damaging the trim or the fender finish.

WARNING: The trim must not extend beyond the lower edge of the front fender. Improper installation could impede steering. See Figure 1.

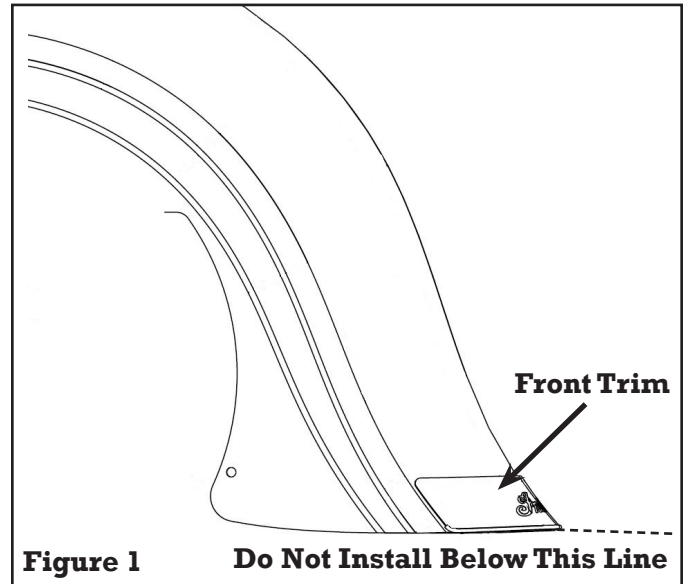

3. Remove the adhesive backing from the fender trim.
4. Align the lower edge of the fender to the lower edge of the trim, place in position as determined in Step 2 and apply firm pressure for 20 seconds over all surfaces to complete installation.

Clean front fender trim with warm water, mild soap and soft cloth. Let air dry.

NOTE: Leather will lose oils and condition with time and exposure to the elements. Leather Dressing will add back many of the oils that are lost from exposure to the weather. Apply dressing with a clean dry cloth. Use generously and allow to soak in. Allow to dry overnight. Wipe off excess. Under normal conditions annual application is sufficient.