

BRAKE BANJO BOLT COVER KIT



P/N 2880923

APPLICATION


All Full Size Non Fairing Bikes

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

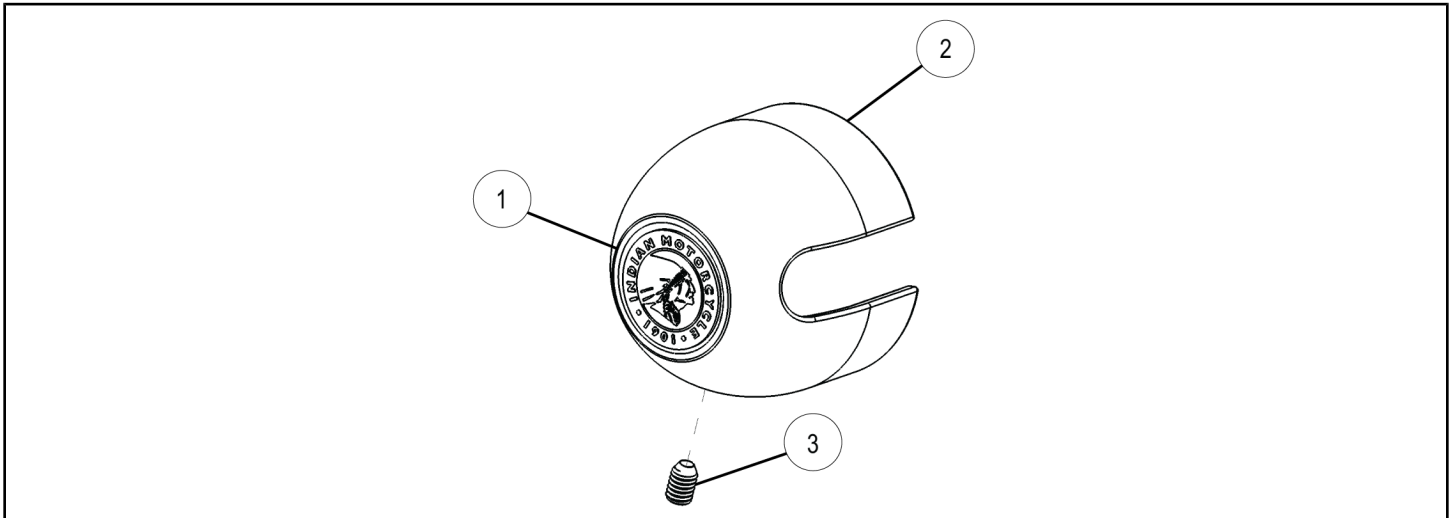

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Plate - Emblem, Dipstick	5257416
2	1	Brake Banjo Bolt Cover	5633349
3	1	Set Screw	7518449
	1	Instructions	9925900

TOOLS REQUIRED

- Torque Wrench
- 2 mm Hex Wrench

IMPORTANT

Your Indian BRAKE BANJO BOLT COVER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 2 minutes

INSTALLATION INSTRUCTIONS

IMPORTANT

This kit not to be installed on Roadmaster or Chieftain models.

Bike Preparation (If necessary)

1. Clean brake banjo bolt.

Installation

1. Slide brake banjo bolt cover ② on the brake banjo bolt (A) from front to back ensuring that the slot on the side slides around brake line.



2. Once brake banjo bolt cover has bottomed out on the bolt head, (you will feel a hard stop) torque set screw to below specification.

TORQUE

18 ± 3 in-lbs. (2.03 ± 0.34 Nm)