# HIGHWAY BAR CLOSEOUTS KIT

## P/N 2881125



### **APPLICATION**

INDIAN MOTORCYCLES WITH CHIEF HIGHWAY BAR

## **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown below.

## KIT CONTENTS

Ref	Qty	Part Description	Part Number
1	1	Cover- Highway Bar, Soft, LH	2686664
2	1	Cover- Highway Bar, Soft, RH	2686665
	1	Instructions	9926109

#### **TOOLS NEEDED**

No tools required

#### APPROXIMATE ASSEMBLY TIME

10 min


#### **IMPORTANT**

Your Indian HIGHWAY BAR CLOSEOUTS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation Steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

 Locate the LH Highway Bar Closeout (1). With the logo facing the rider, attach the closeout to the left side of the highway bar and secure the snaps, as shown in the figure.

Repeat for the RH Highway Bar Closeout (2). See figure associate with Step 2.

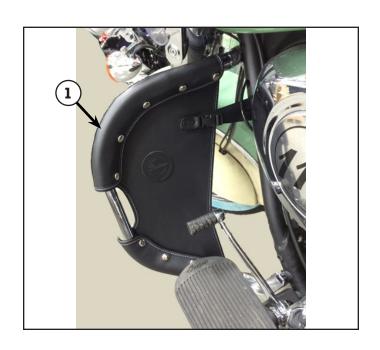

2. Connect the straps (B). The straps can either be connected to the clip on the opposite closeout, or to the frame (A). See figures. Tighten the straps until they are snug.

