

BLACK BOLT KIT



P/N 2882229 OR 2882230

APPLICATION


All MY2014 and Newer Indian Motorcycles with a Factory Installed Fairing.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

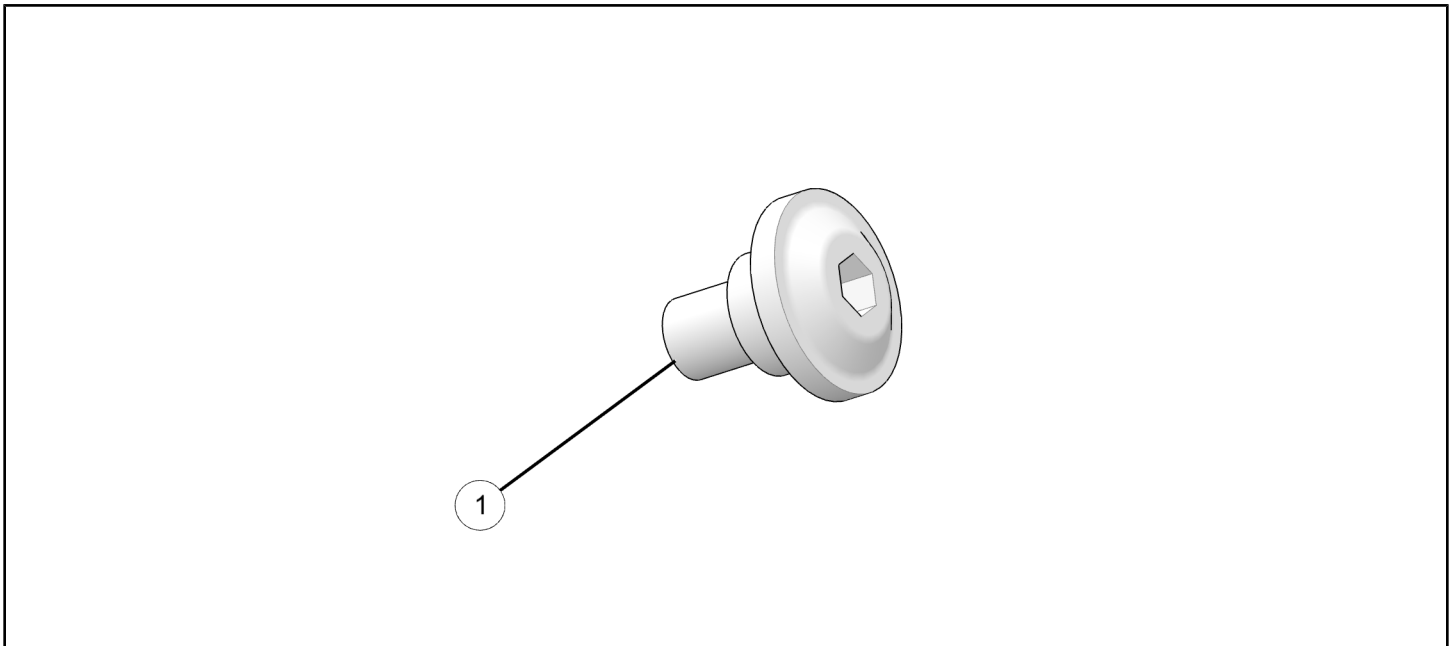

REF	QTY	PART DESCRIPTION	PART NUMBER
1	2	Black Bolt (Kit PN 2882229 for Headlight Bezel)	7520510
	5	Black Bolt (Kit PN 2882230 for Windshield)	
	1	Instructions	9927454

TOOLS REQUIRED

- 4mm Hex Key

IMPORTANT

Your Indian BLACK BOLT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 5 minutes

INSTALLATION INSTRUCTIONS

NOTE


Protect all finished surfaces during these operations.

1. Remove bolts one at a time from headlight bezel or windshield. Replace with new black bolts ① supplied in the kit. Torque to specification.

TORQUE

36 ± 6 in. lbs. (4.0 ± 0.6 Nm)

For Headlight Bezel

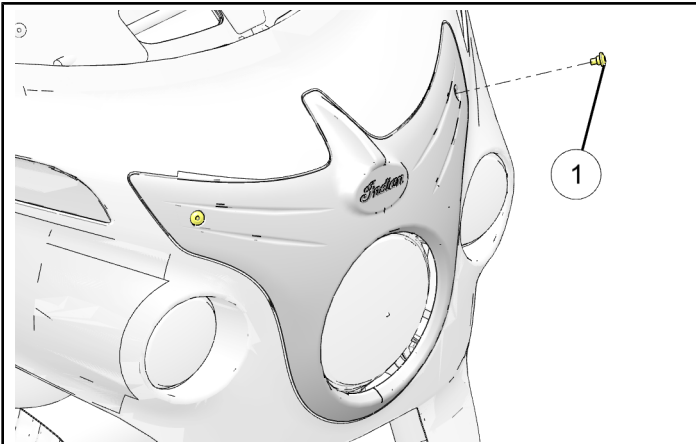

For Windshield

