

# FENCE POST CARRIER KIT



**P/N 2882192**

## APPLICATION


Verify accessory fitment at [Polaris.com](http://Polaris.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

This Kit includes:

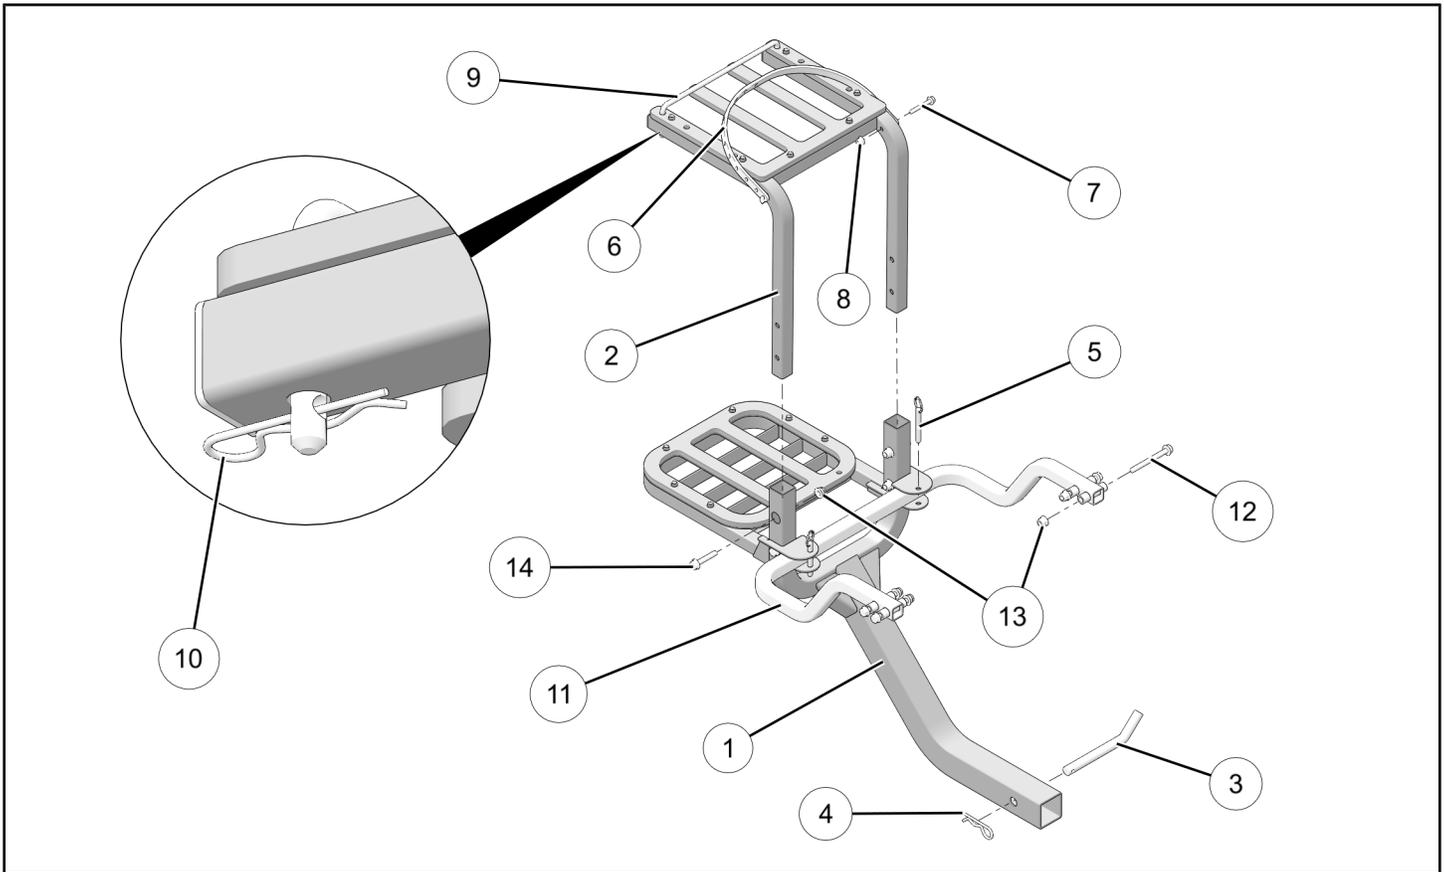

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Frame, Lower	-
2	1	Frame, Upper	-
3*	1	Hitch Pin, Bent - M15.7 X 90	-
4	1	Clip, Hairpin (Hitch Pin)	-
5*	2	Pin, Quick Release - M8 X 50	-
6*	1	Strap, Rubber	-
7	1	Screw, Hex Flange - M6 X 1.0 X 45	-
8	1	Nut, Hex Flange - M6 X 1.0	-

REF	QTY	PART DESCRIPTION	PART NUMBER
9*	1	Retainer Rod	-
10	2	Clip, Hairpin (Retainer Rod)	-
11	1	Support, Frame	1023045
12*	4	Screw, Hex Flange - M8 X 1.25 X 80	-
13*	8	Nut, Hex Flange - M8 X 1.25	-
14*	4	Screw, Hex Flange - M8 X 1.25 X 45	-
	1	Instructions	9927352

Items marked (\*) are included in Hardware Kit PN 2206456.

## TOOLS REQUIRED

- Safety Glasses
- Socket Set, Metric
- Wrench Set, Metric

## IMPORTANT



Your Fence Post Carrier Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME

Approximately 10–15 minutes

## INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into “PARK”. Turn key to “OFF” position and remove from vehicle.
2. If Rear Brushguard Kit (PN 2878840, sold separately) is installed, then proceed to Step 3. Otherwise, install support ⑪ to vehicle frame using four each screws ⑫ and nuts ⑬ as shown.
3. Insert lower frame ① into vehicle receiver, then secure using hitch pin ③ and hairpin clip ④ as shown.

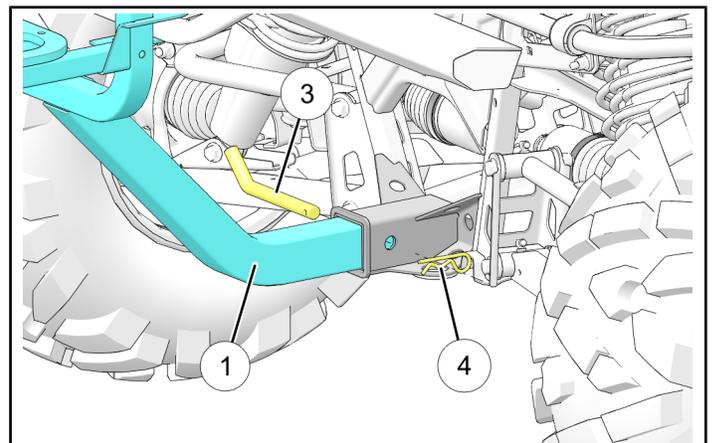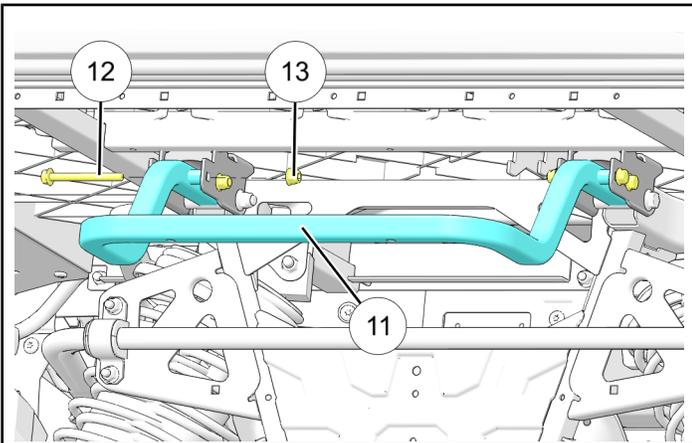


- Attach lower frame ① to support ⑪ or rear brushguard, as applicable, using two quick release pins ⑤ as shown.

**NOTE**

Illustration shows attachment to rear brushguard. Attachment to support ⑪ similar except pins pass through holes in support.

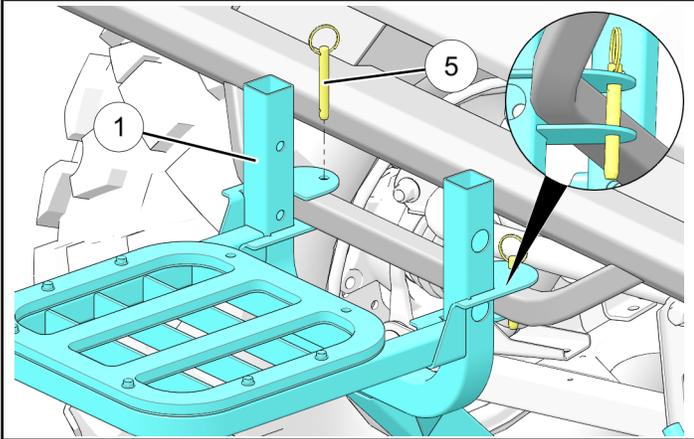


- Insert upper frame ② into lower frame ①, then secure using four each screws ⑭ and nuts ⑬ as shown.

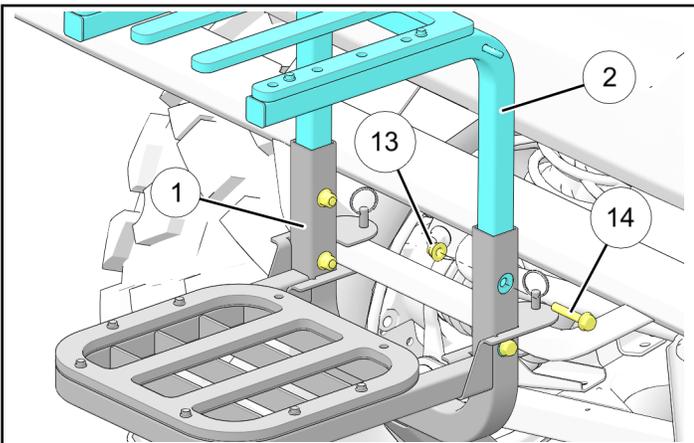

- Install strap ⑥ to upper frame ② using screw ⑦ and nut ⑧ as shown.

**IMPORTANT**

Strap is used to minimize post vibration during transport. Strap is NOT intended to retain posts during transport. Retainer rod ⑨, installed in next step, provides post retention.

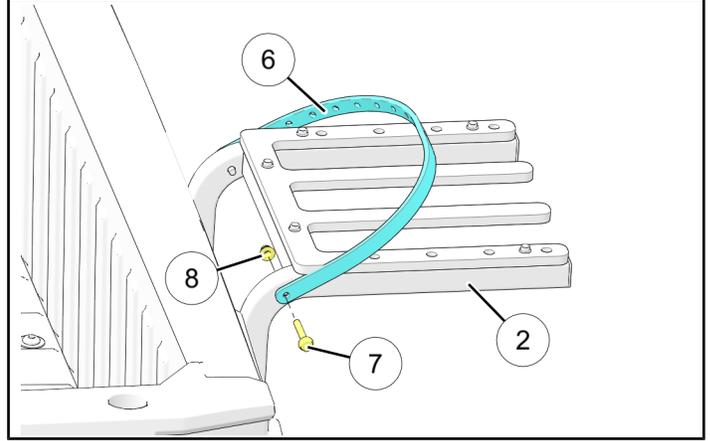

- After inserting fence posts in carrier install retainer rod ⑨ as far forward as possible, then secure using two hairpin clips ⑩ as shown.

Wrap strap ⑥ around posts, then secure to hook ①.

**IMPORTANT**

Maximum Capacity: 12 fence posts

**NOTE**

Four retainer rod positions available; rear position shown.

