

SINGLE GUN MOUNT KIT



P/N 2881049


APPLICATION

ALL RANGER MODELS

BEFORE YOU BEGIN

Read these instructions thoroughly and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

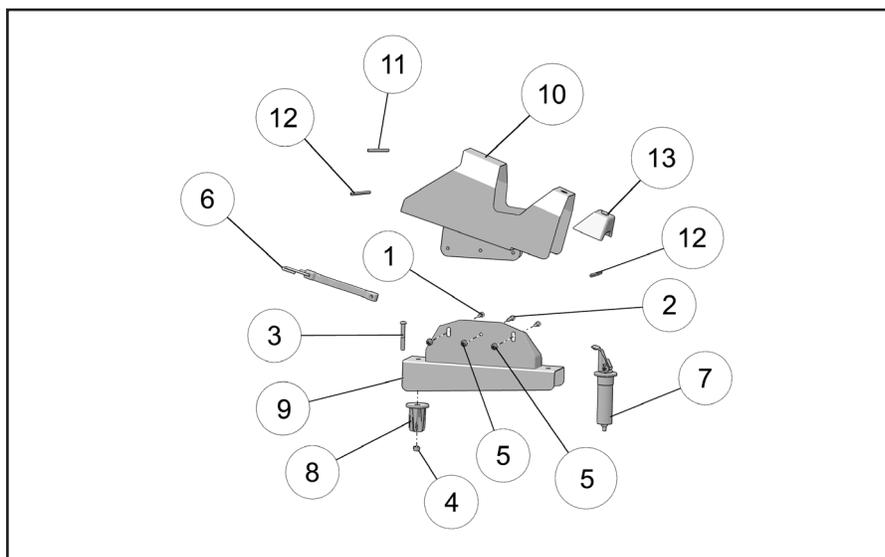

Ref	Qty	Part Description	Part Number
1	2	Cap Screw-M6X1.0X20, Button Head Socket	-
2	1	Cap Screw-M6X1.0X35, Button Head Socket	-
3	1	Cap Screw-M8X1.25X60, Button Head Socket	-
4	1	Hex Nut-M8x1.25, Nylon	-
5	3	Hex Lock Nut-M6X1.0, Flange Nylon	-
6	1	5" Elastic Attach	-
7	1	Latch Assembly, System	-
8	1	Retainer	-
9	1	Gun Scabbard, Welded	-
10	1	Gun Scabbard, Top Plate	-
11	1	Trim	-
12	2	Trim	-
13	1	Rubber Block	-
	1	Instructions	9926502

TOOLS NEEDED

Safety Goggle

Torx Wrench Set

APPROXIMATE ASSEMBLY TIME


15 mins

IMPORTANT


Your Polaris *RANGER* SINGLE GUN MOUNT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


1. Insert the rubber block (13) in the main body (10), with the help of a screwdriver push the nipple into the hole.

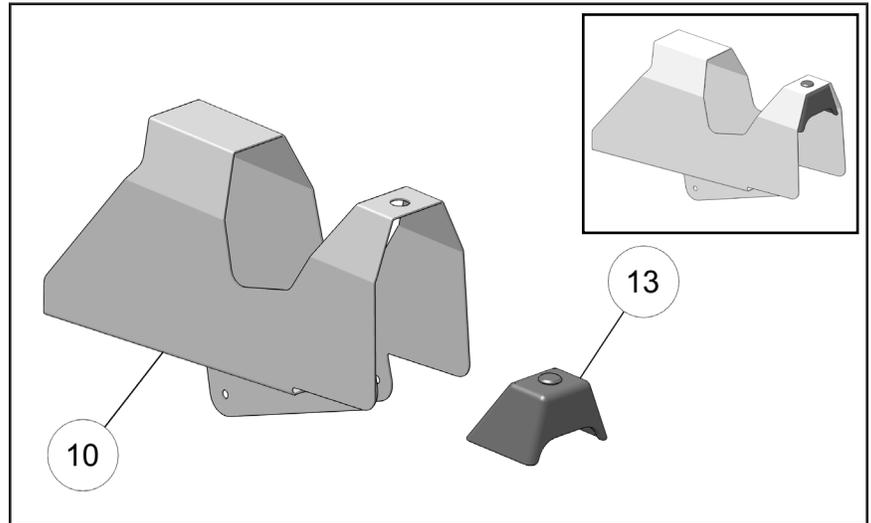


2. Install three plastic trims (11 and 12) on the main body.

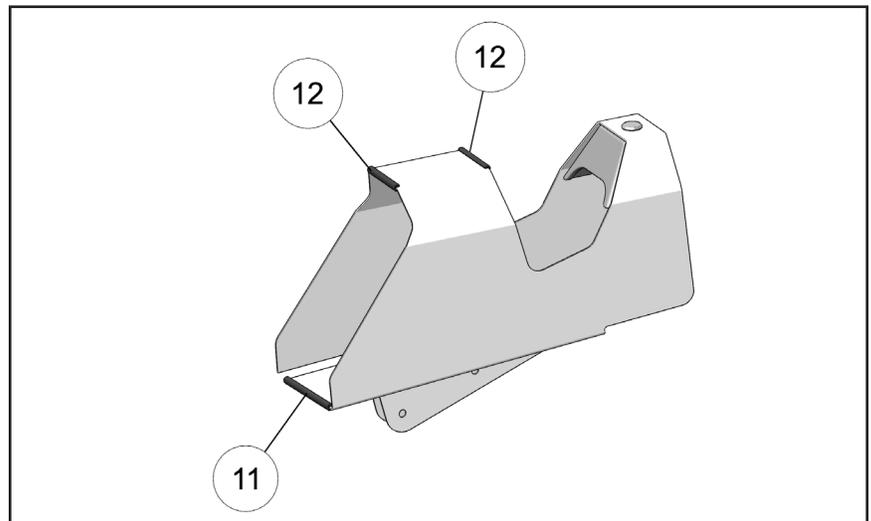


3. Assemble the retainer (8) to the base stand with the M8 bolt (3) and nut (4) as shown.

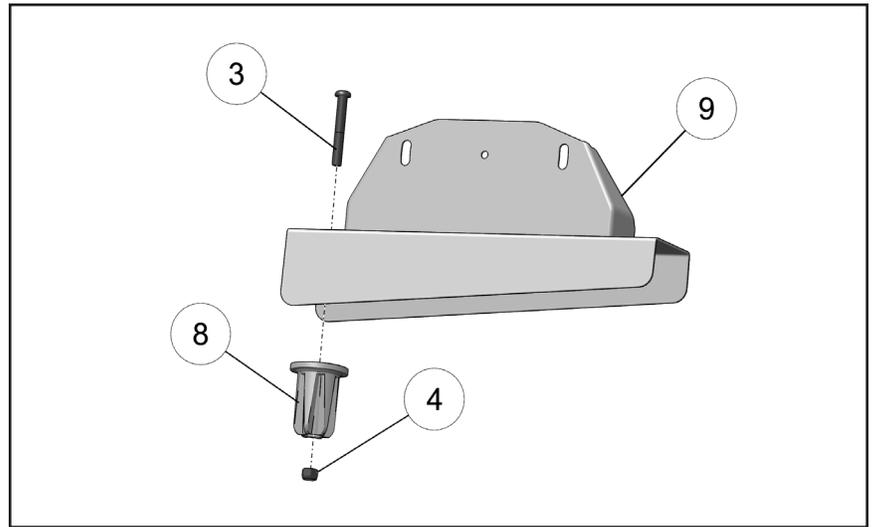


4. Install the lock & ride (7) onto the base stand by following their included instructions.

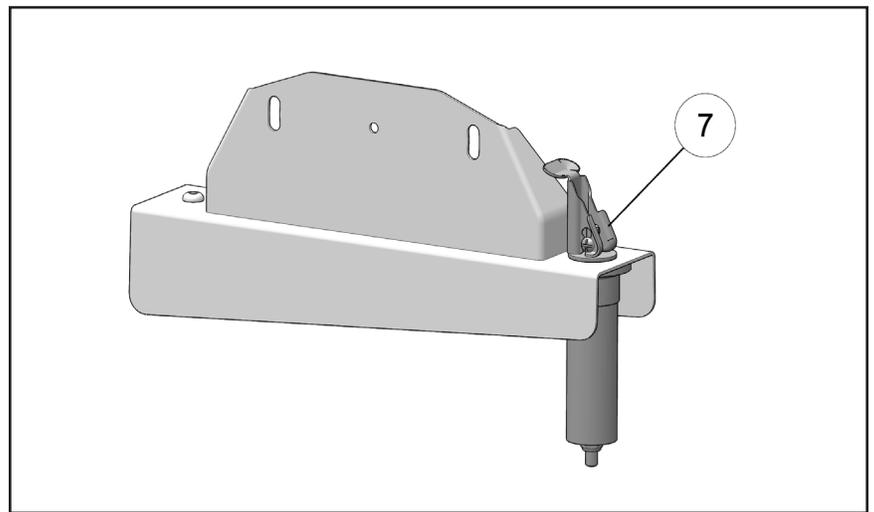

5. Attach the main body (10) on the base stand (9) with two M6 screws (1) and two M6 nuts (5). Finger tight only.

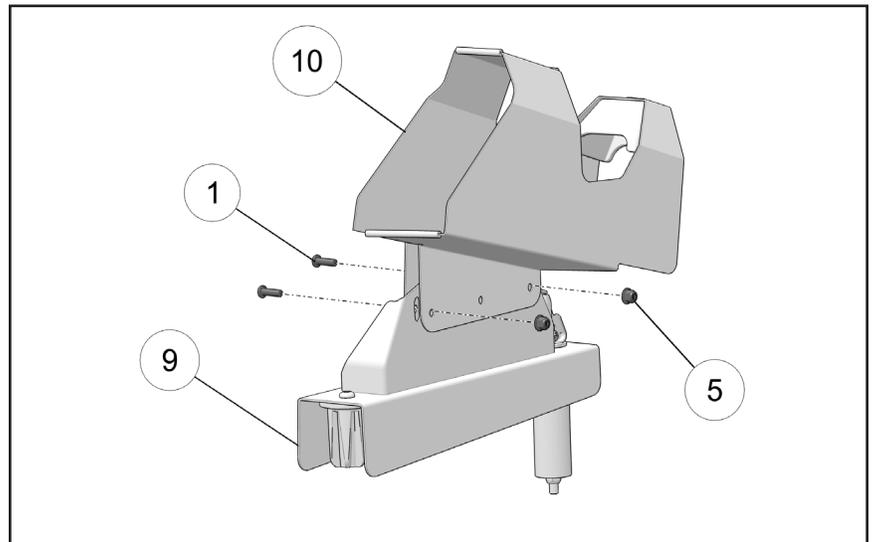

6. Assemble the center M6 bolt (2) and the rubber strap (6) as shown. Finger tighten only.

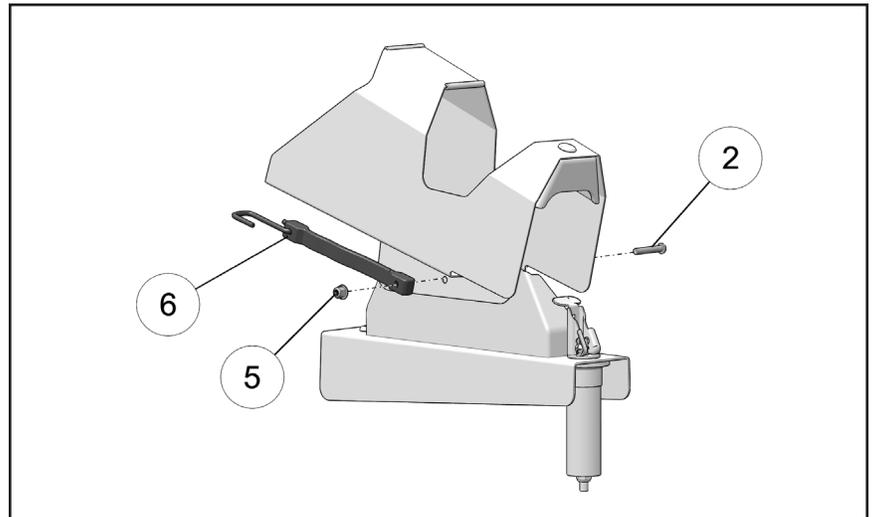

7. Install the gun scabbard on the vehicle as desired and put your gun in it.
8. Lock your gun boot with the rubber strap.
9. Adjust the angle position for your gun and tighten all the bolts and screws. Check for interference between gun boot and vehicle.

