

# REAR BUMPER KIT


P/N 2878710



## Application

ALL 2009 AND NEWER SPORTSMAN XP 550/850 MODELS

Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. The following instructions contain details required to install the contents of this kit.

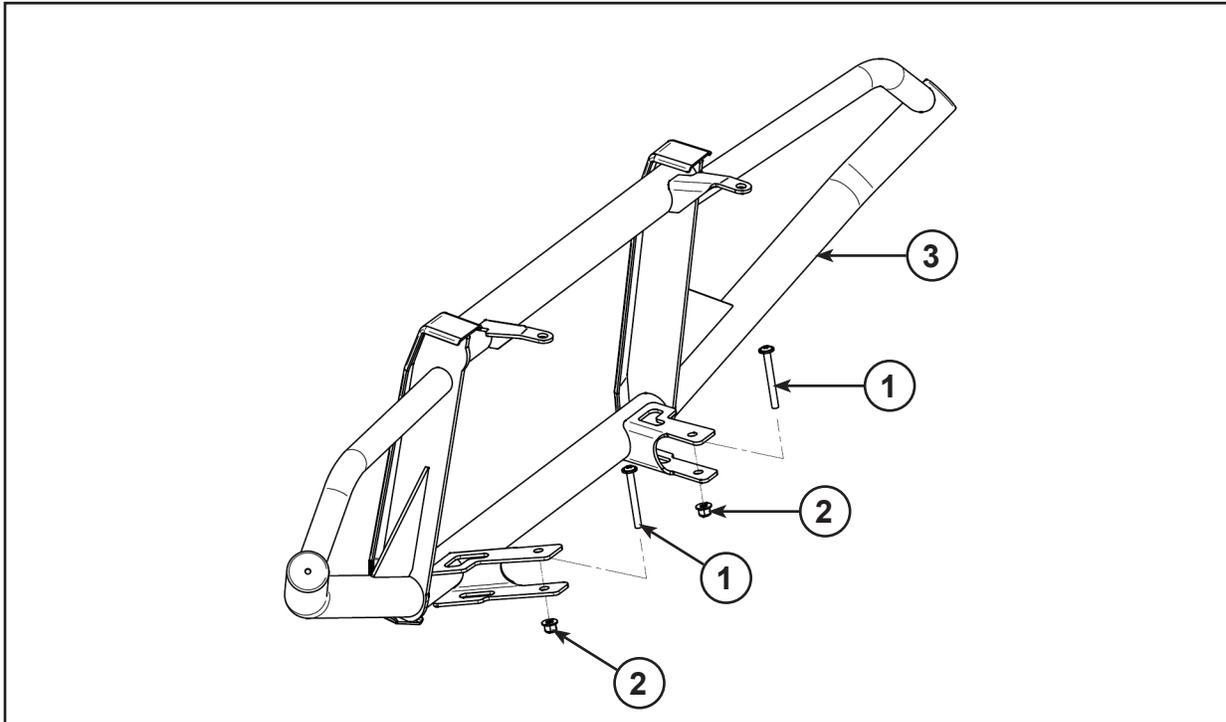

## Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	2*	M6 x 55 mm Flanged Button-Head Cap Screws	-
2	2*	M6 Hex. Nylon Nut	-
3	1	Rear Bumper	-
	1	Instructions	9925010

Items marked (\*) are included in Hardware Kit PN 2205231.

## Tools Required:

Metric Wrench or Socket  
Torx 30 Socket


4 mm Hexagonal Wrench

**APPROXIMATE ASSEMBLY TIME:** 10 minutes

**IMPORTANT:** Your Polaris accessory is exclusively designed for your vehicle. Before beginning, please read these instructions and make sure that all parts and tools are at your disposal. Keep these instructions for future reference or for any information requests. To facilitate installation, make sure that your vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS:

1. Remove and keep the two original machine screws holding the plastic piece. Figure 1.

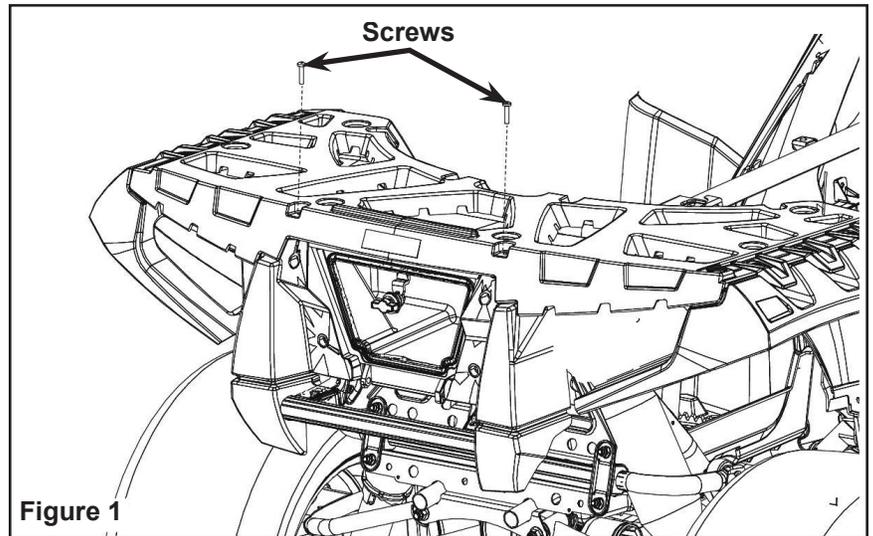

2. Place the bumper using the two screws removed at Step 1, the two button head cap screws and the two nylon nuts supplied with the kit (screw the first threads only). Figure 2.
3. Tighten all bolts and nuts.

