

REVERSE BEEPER HARNESS KIT

P/N 2880173



POLARIS®

Application

RANGER 570 AND RANGER 570 CREW

Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	1	Reverse Beeper Harness	2412784
	1	Instructions	9925158

Tools Required:

Small Screw Driver

Side Cutter

Needle Nose Pliers

APPROXIMATE ASSEMBLY TIME: 15 minutes

IMPORTANT: Your Polaris REVERSE BEEPER HARNESS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown. Before you begin, thoroughly review the instructions. Ensure you have all the required tools and the skills necessary to complete this installation.

INSTALLATION INSTRUCTIONS:

1. Unplug the ECU connector. Figure 1.




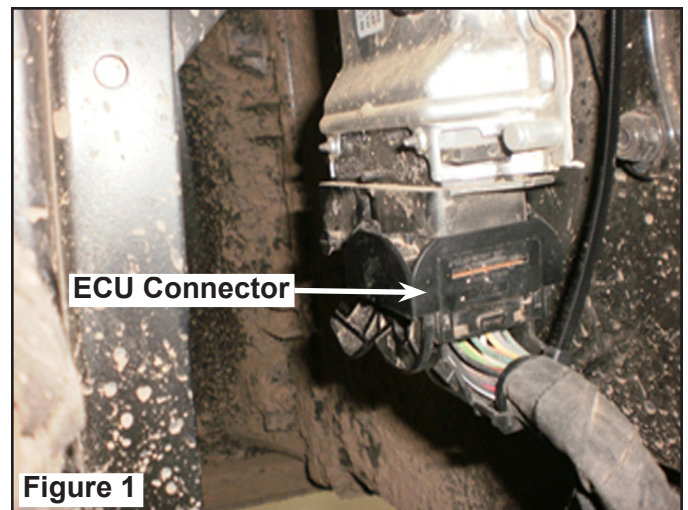


Figure 1


2. Cut zip tie located on the cover of the ECU connector. Figure 2.

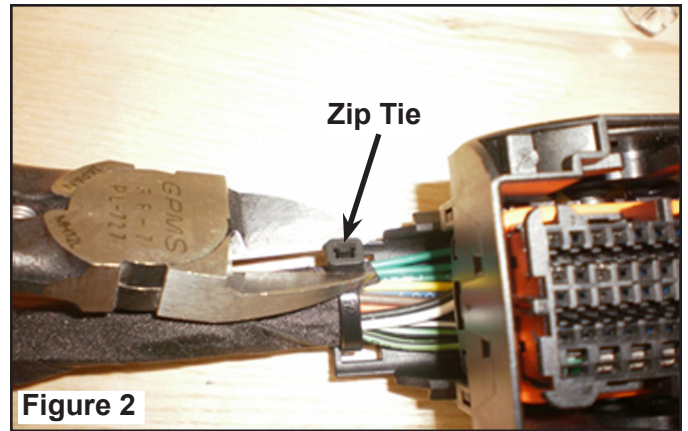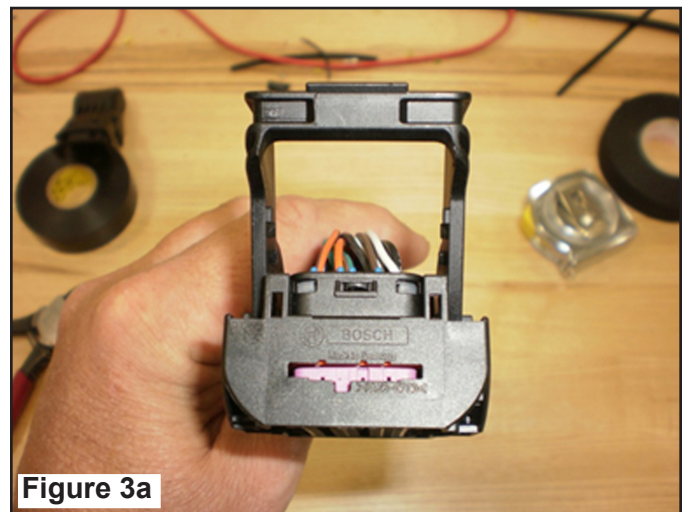




3. Remove the back cover. Figure 3 and Figure 3a.

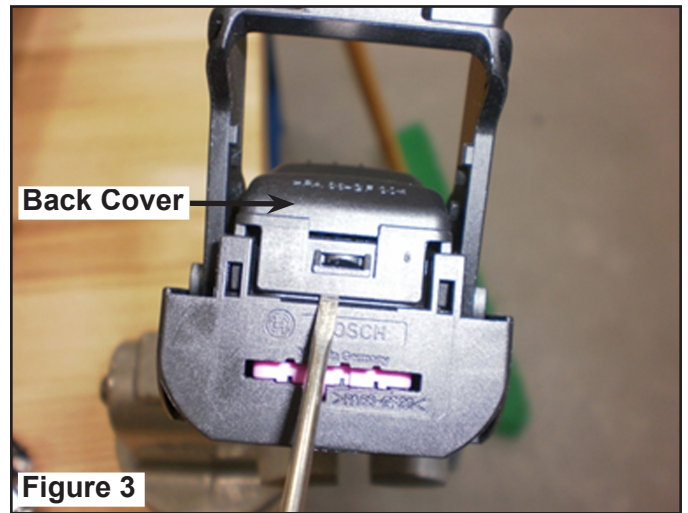


4. Remove the purple TPA (push) from the connector.
Figure 4 and Figure 4a.

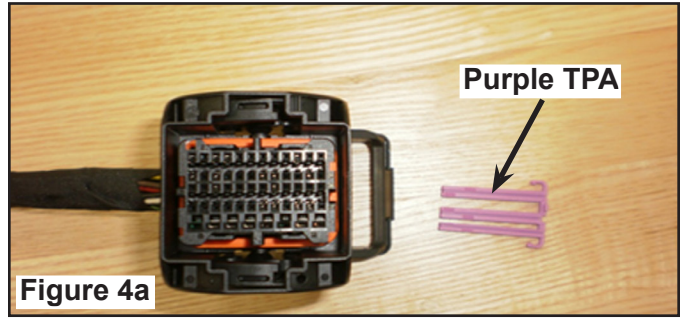



5. Locate cavity 54 on the connector and remove (pull) green cavity plug.
Figure 5, Figure 5a and Figure 5b.

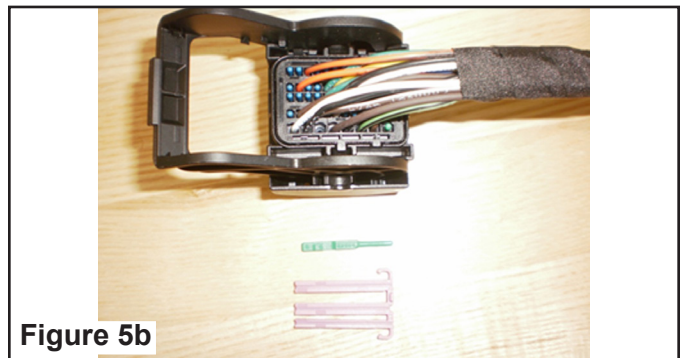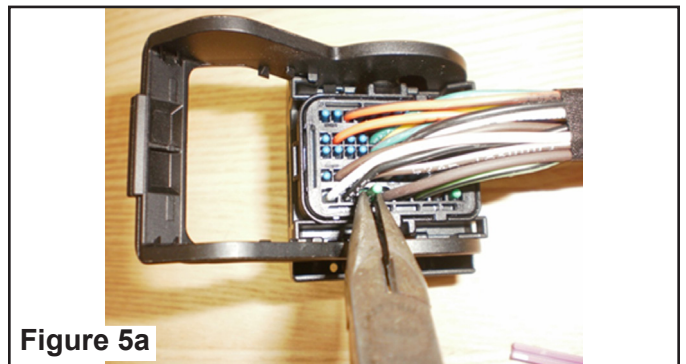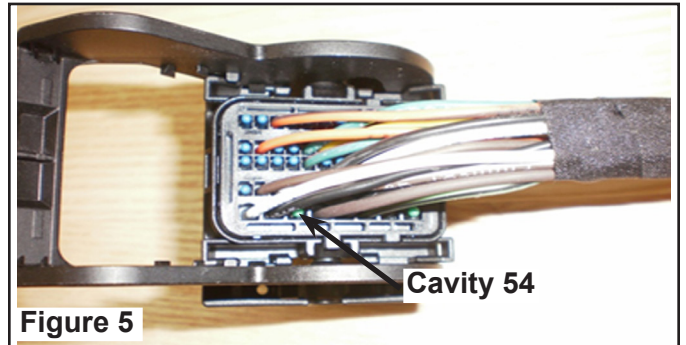

6. Insert the terminal end from the jumper harness into cavity 54 on the connector. It should easily slide in and “click” into place. Terminal will only go in one way. Figure 6.

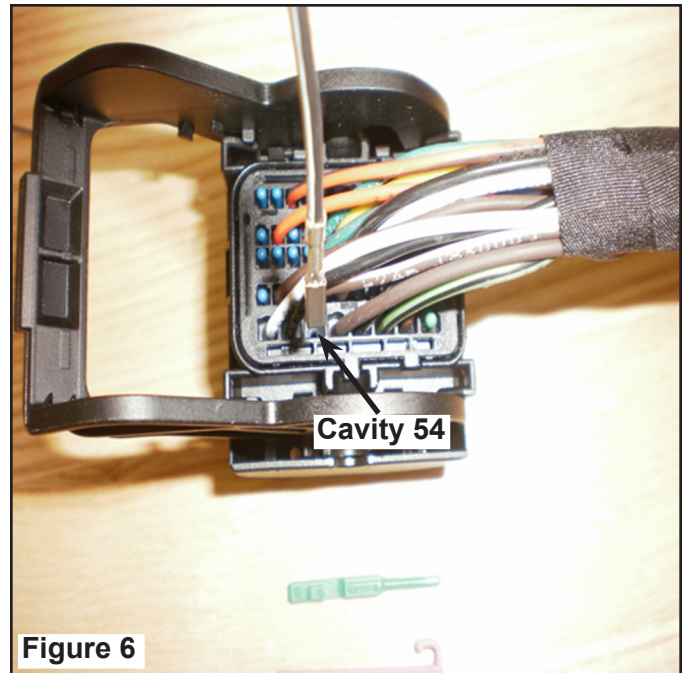

7. Insert the purple TPA back into the connector making sure it seats properly. If the terminal is not pushed in all the way, the TPA will not fully seat. Figure 7 and Figure 7a.

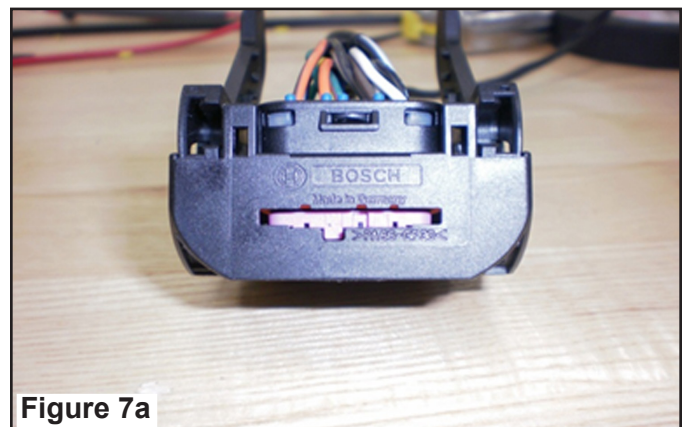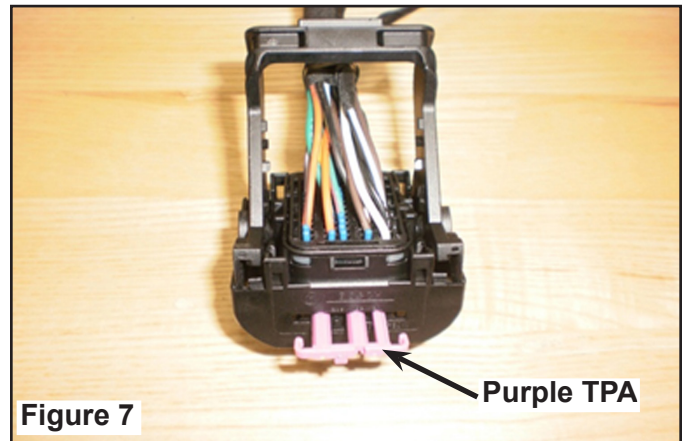

8. Put the cover on connector. Figure 8.

9. Zip tie cover to harness wire bundle.

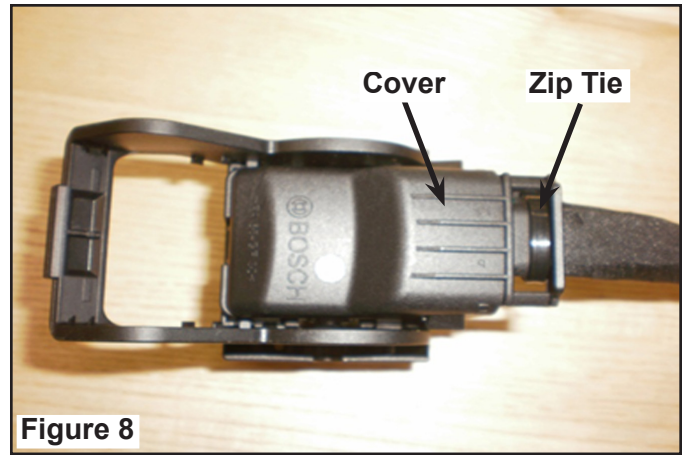


Figure 8

10. Place the connector back on ECU and latch. Figure 9.

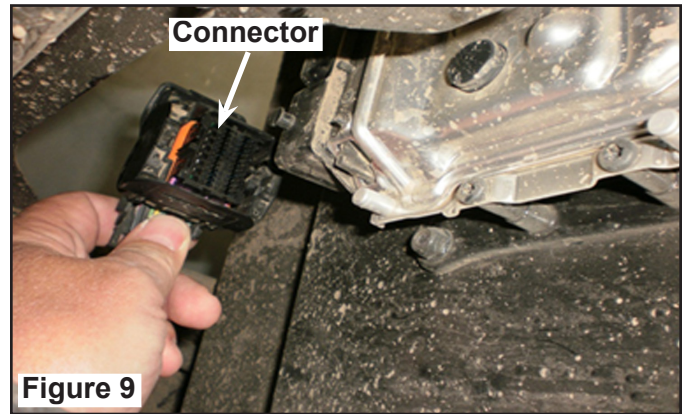


Figure 9

11. Make sure the jumper harness wire follows existing harness routing and tie adjacent to existing ties on the harness. Figure 10.

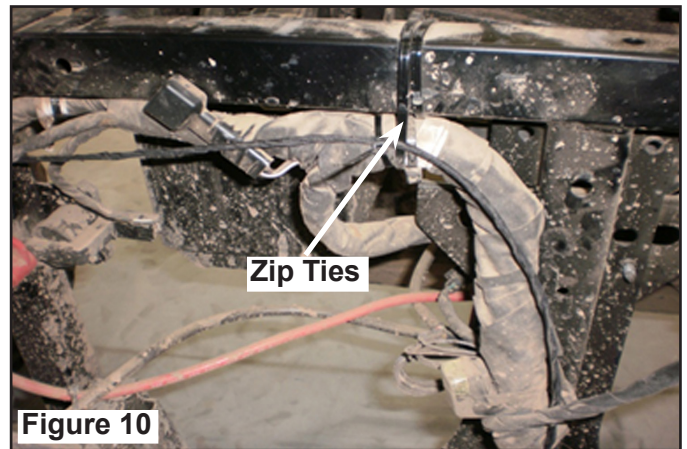


Figure 10

12. Disconnect the main harness from the box harness. Zip tie main harness connector to the harness for support. Figure 11.



13. Plug in jumper harness connectors and attach the connector (Push fastener into hole in frame) to the frame. Figure 12.

NOTE: Push the fastener (Xmas tree) into the hole in frame.

14. Attach the beeper to 1/4" terminals.

