

REAR RACK EXTENDER KIT


P/N 2879891



Application

ALL 2009 AND NEWER SPORTSMAN XP 550/850 MODELS

Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. The following instructions contain details required to install the contents of this kit.

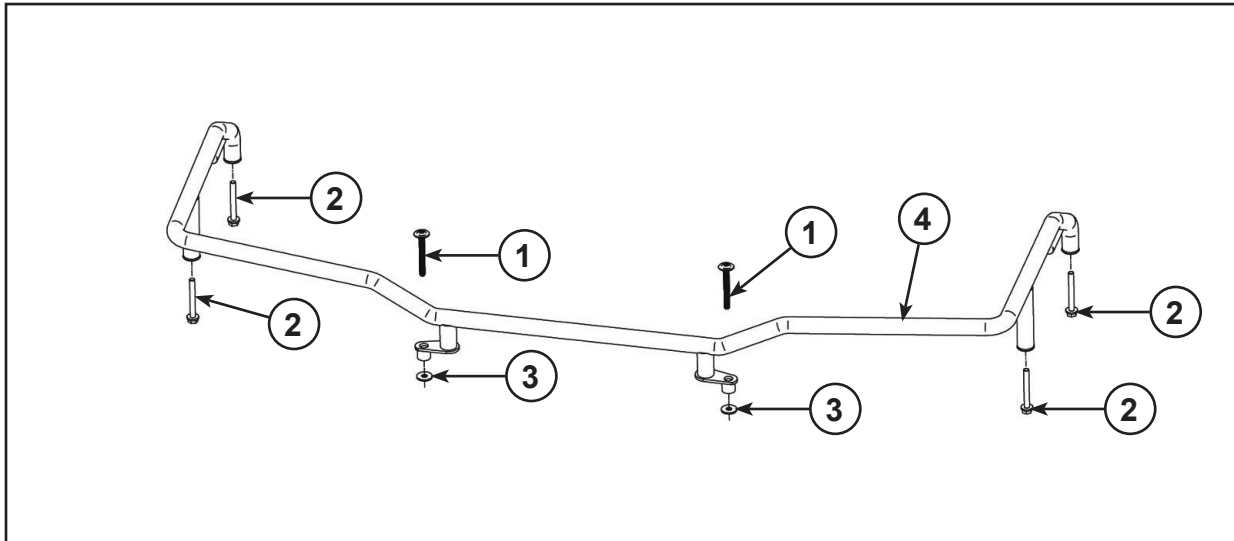

Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	2*	M6-1.0 x 55 mm Flange Button Head Torx Cap Screw	-
2	4*	M6 x 50 mm Flange Hex. Screw	-
3	2*	M6 Flat Washers	-
4	1	Rear Welded Rack Extender	-
	1	Instructions	9925012

Items marked (*) are included in Hardware Kit PN 2205227.

Tools Required:

Metric Wrench or Socket Set


Torx 30 Socket

APPROXIMATE ASSEMBLY TIME: 10 minutes

IMPORTANT: Your Polaris accessory is exclusively designed for your vehicle. Before beginning, please read these instructions and make sure that all parts and tools are at your disposal. Keep these instructions for future reference or for any information requests. To facilitate installation, make sure that your vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS:

1. Remove and discard the six original machine screws and the four original nuts holding the rack. Figure 1.

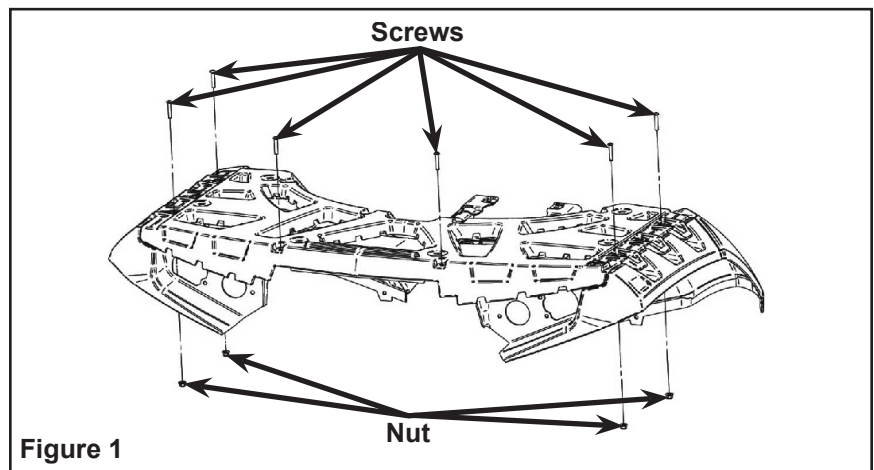

2. Pre-assemble the two button head Torx cap screws from the center and the two flat washers on the rack extender (screw the first threads only). Figure 2.

NOTE: If a (PN 2878710) bumper is installed on the same vehicle, the bumper attachment will replace flat washers, which will not need to be assembled.

3. Place the rack extender using the four hex flange machine screws included in the kit (screw the first threads only).
4. Tighten all screws.

