

# GLACIER PRO BLADE (60") KIT

P/N 2879638


Application

Plow Frame No. 2879630



**POLARIS**<sup>®</sup>

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

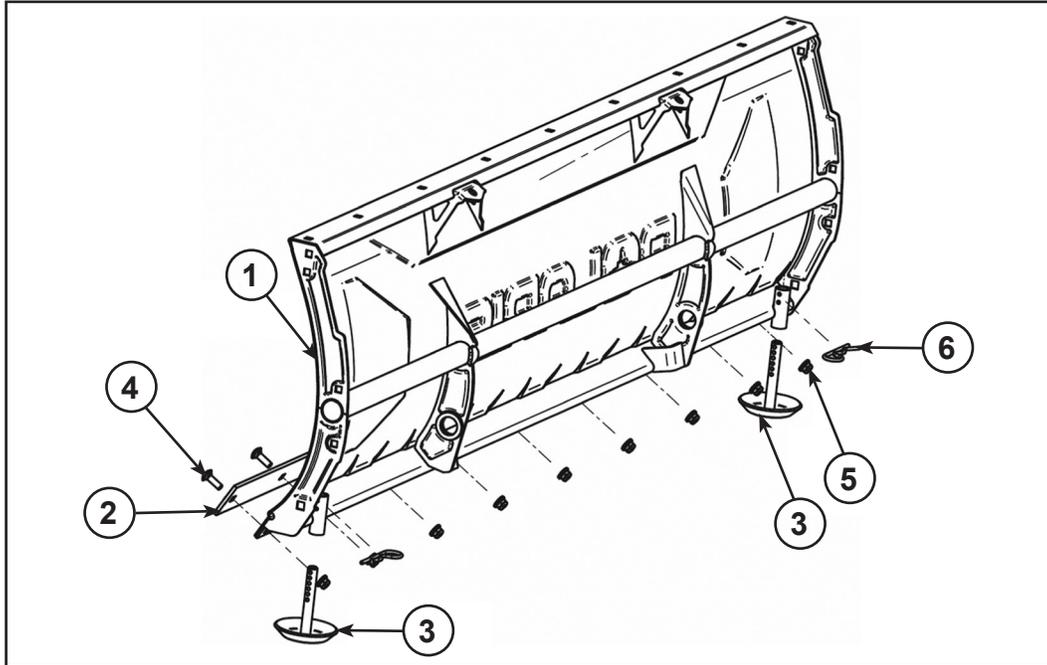

## Kit Contents:

Ref.	Qty.	Part Description	Part Number
1	1	Blade (60 in)	-
2	1	Wear Bar	2871806
3	2	Skid Shoe	2205071
4	9	M8-1.25 x 25 mm Carriage Bolt	-
5	9	M8-1.25 Nylon Nut	-
6	2	R-Pin	2205070
	1	Instructions	9925027

## Tools Required:


13 mm Wrench and Socket

**APPROXIMATE ASSEMBLY TIME:** 30 minutes

**IMPORTANT:** Your Polaris accessory is exclusively designed for your vehicle. Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information. Installation of any item is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS:

1. Assemble as illustrated. Figure 1.

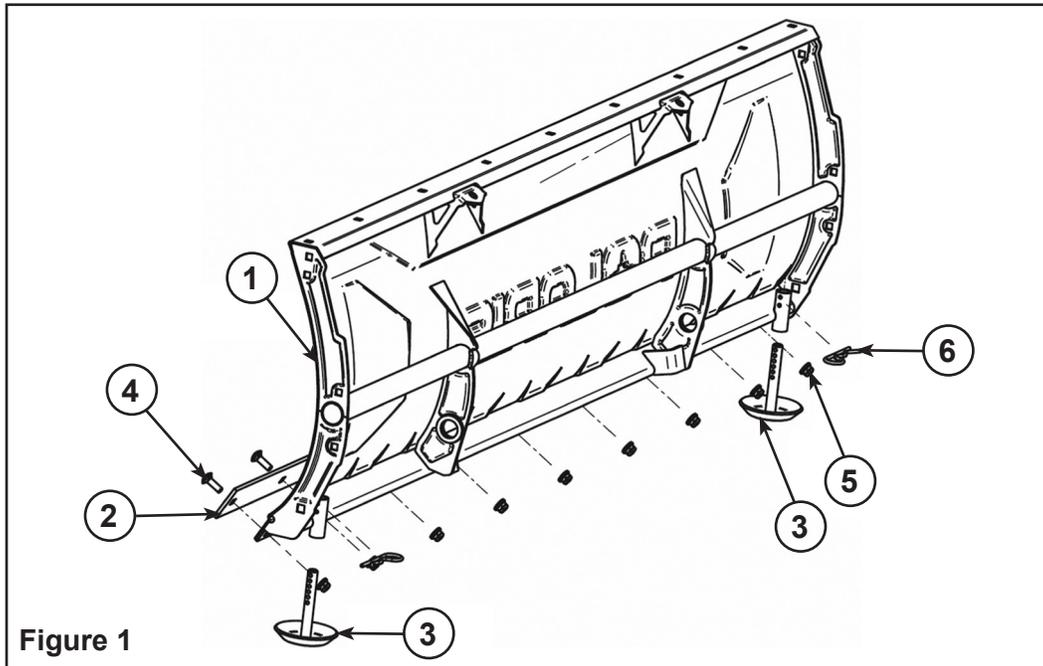

## SPARE KITS

Ref.	Part Description	Wear Bar Kit P/N 2871806	Skid Shoe Kit P/N 2205071	R-Pin Kit P/N 2205070
1	Blade (60 in)	-	-	-
2	Wear Bar	1x	-	-
3	Skid Shoe	-	2x	-
4	M8-1.25 x 25 mm Carriage Bolt	9x	-	-
5	M8-1.25 Nylon Nut	9x	-	-
6	R-Pin	-	2x	2x