

BED BOX KIT



P/N 2881312

APPLICATION


All Full-Size *RANGER* MY13 and Newer

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

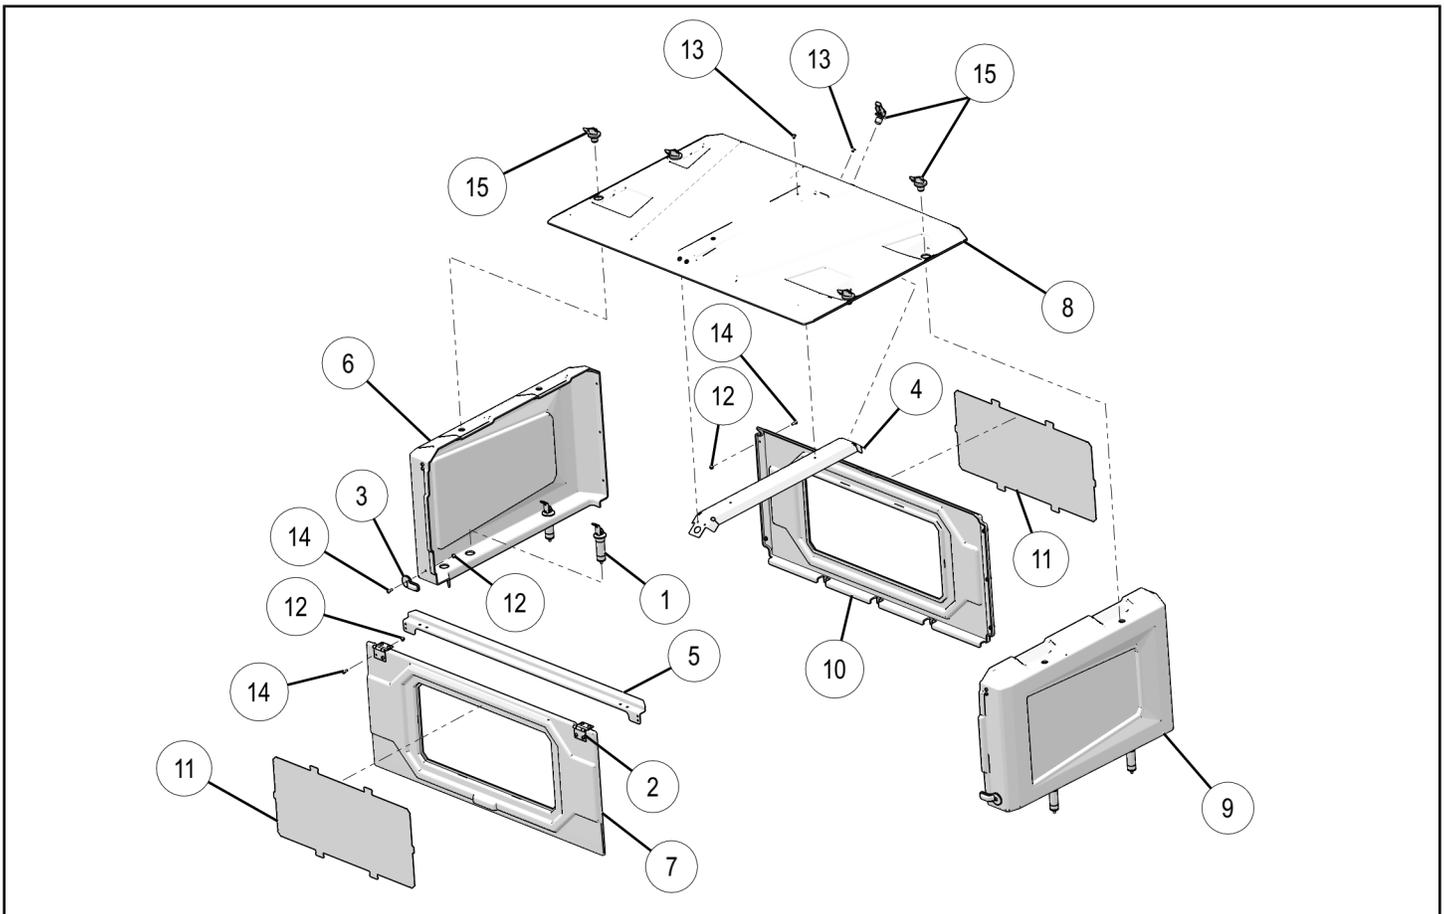

REF	QTY	PART DESCRIPTION	PART NUMBER
1	4	Expansion Anchor, Large	2875250
2	2	Hinge	-
3	2	Latch	-
4	1	Bracket, Top Support	5262052
5	1	Bracket, Rear Support	5262053
6	1	Panel, LH	5452384
7	1	Panel	5452385

REF	QTY	PART DESCRIPTION	PART NUMBER
8	1	Panel, Top	5452386
9	1	Panel, RH	5452672
10	1	Panel	5452673
11	2	Glass	-
12*	20	Nut, Hex Flange - M6 X 1.0	-
13*	6	Rivet	-
14*	20	Screw, Torx® - M6 X 1.0 X 20	-
15	5	Expansion Anchor, Small	-
	1	Instructions	9926594

Items marked (*) are included in Hardware Kit PN 2206132.

TOOLS REQUIRED

- Safety Glasses
- Torx® Driver Set
- Socket Set, Metric
- Wrench Set, Metric

IMPORTANT

Your BED BOX KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 30 minutes

INSTALLATION INSTRUCTIONS



NOTE

This bed box kit may be used in two ways: either as a simple bed cover using only top panel ⑧, or as a full bed box using all panels.

2. Install top panel ⑧ to vehicle until expansion anchors ① are fully seated, then depress upper cams to lock in place. If installation is loose, release affected cam lock, tighten nut at base of expansion anchor, and re-engage cam lock.

BED COVER INSTALLATION

1. Insert four large LOCK & RIDE® expansion anchors ① in top panel ⑧ as shown.

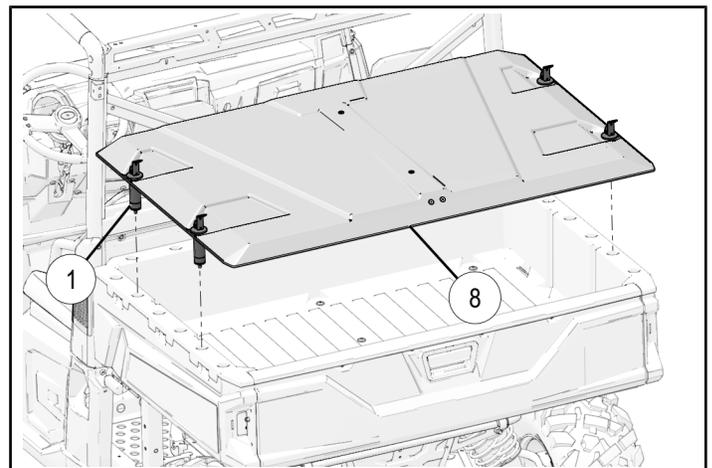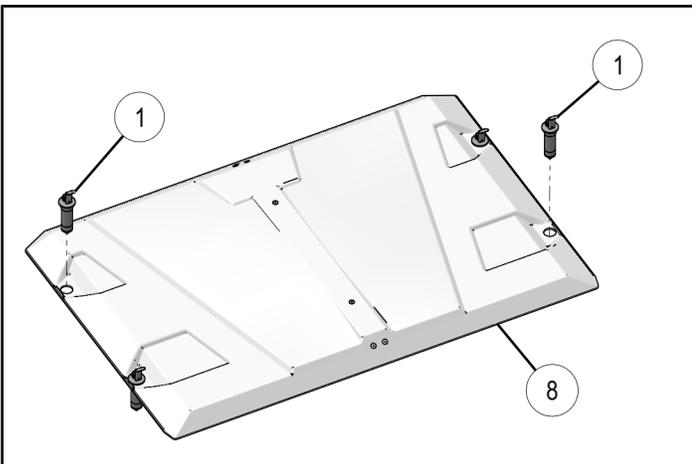

BED BOX INSTALLATION


NOTE

It is recommended that two people assemble and install this bed box kit.


NOTE

Some components may be pre-assembled.


1. Place vehicle in "PARK". Turn key to "OFF" position and remove from vehicle.
2. Install front panel ⑩ to side panels ⑥ ⑨ using three screws ⑭ and nuts ⑫ per side as shown.

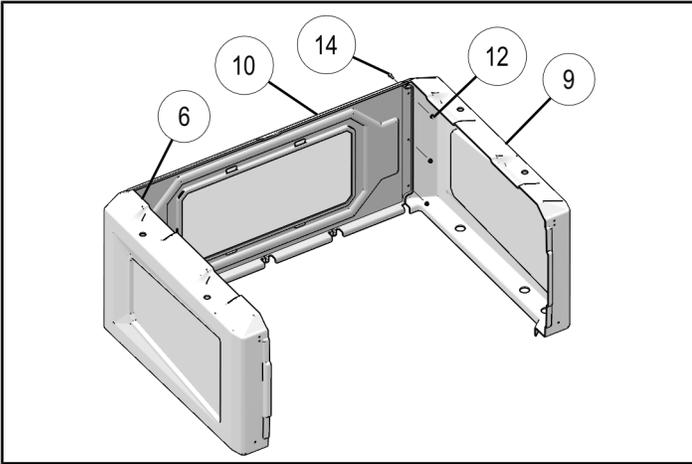


3. Install rear support bracket ⑤ to side panels ⑥ ⑨ using two screws ⑭ and nuts ⑫ per side as shown.

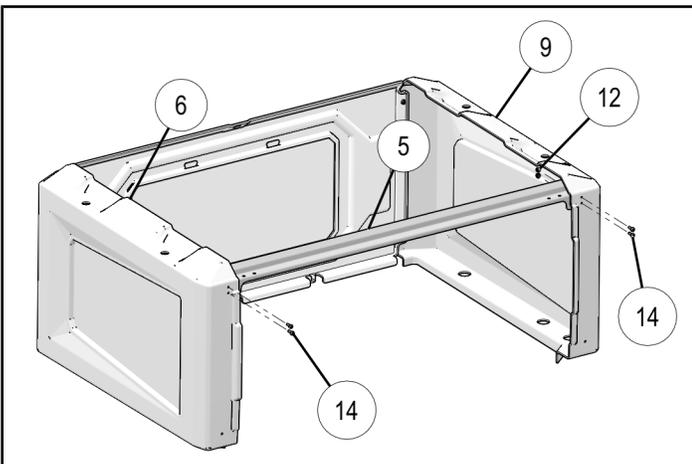


4. Insert four large LOCK & RIDE® expansion anchors ① in LH and RH side panels ⑥ ⑨ as shown.

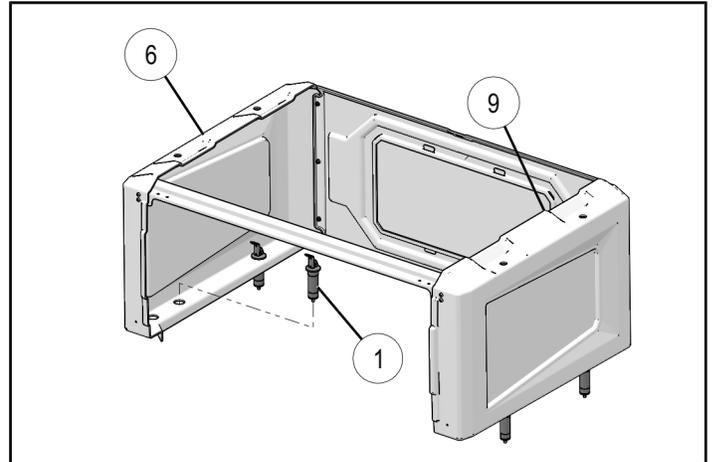


5. Install bed box assembly to vehicle until expansion anchors ① are fully seated, then depress upper cams to lock in place. If installation is loose, release affected cam lock, tighten nut at base of expansion anchor, and re-engage cam lock.

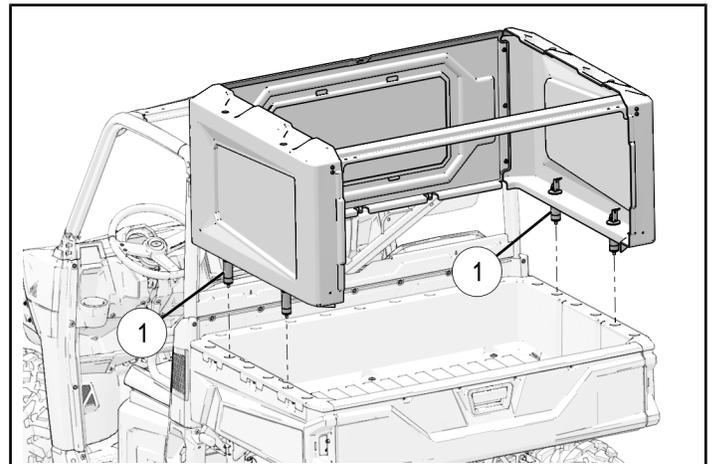


6. Install two hinges ② to rear support bracket ⑤ using two screws ⑭ and nuts ⑫ per side as shown.

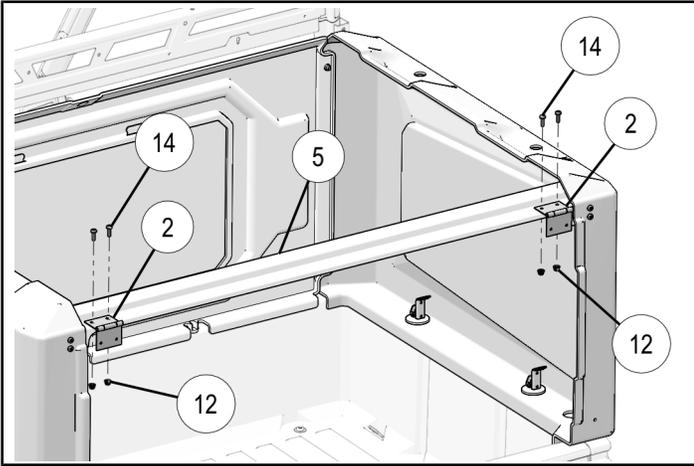


9. Insert five small LOCK & RIDE® expansion anchors ⑮ in top panel ⑧ as shown.

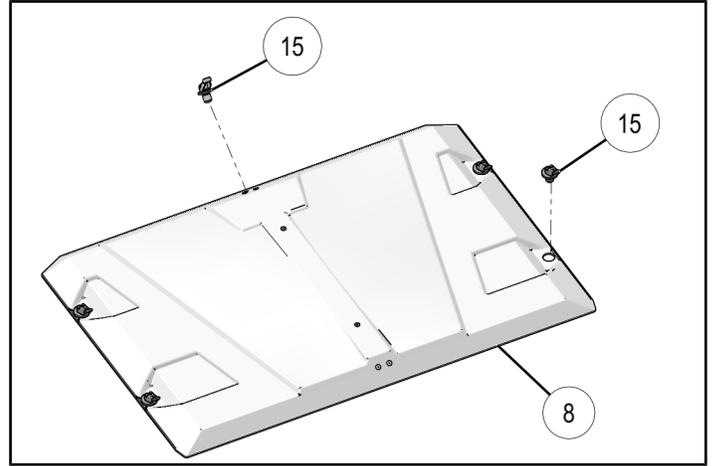

7. Install latch ③ to each side panel ⑥ ⑨ using one screw ⑭ and nut ⑫ per side as shown.

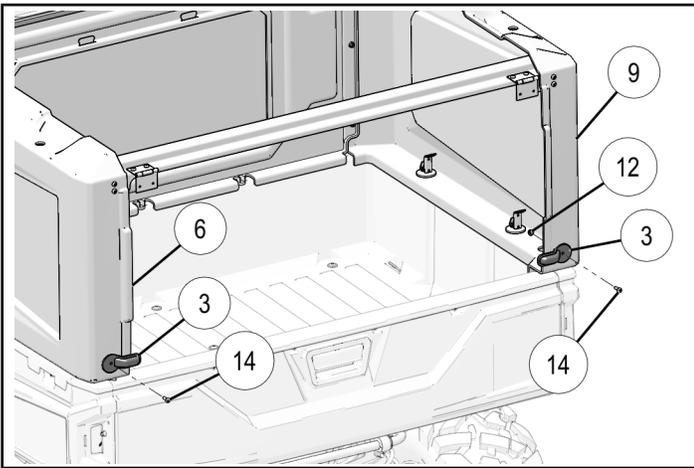

10. Install top panel ⑧ to LH and RH side panels ⑥ ⑨ and front panel ⑩ until expansion anchors ⑮ are fully seated, then depress upper cams to lock in place.

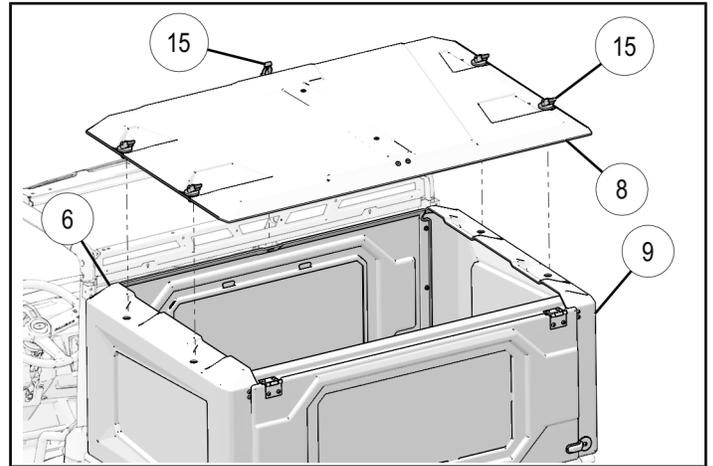

8. Install rear panel ⑦ to hinges ② using two screws ⑭ and nuts ⑫ per side as shown.

