

# Lock n' Ride Cab Roof KIT PN 2879109




## Application Polaris RGM

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

### Kit Components:

QTY.	Part Description
1	Roof
10	10-24 x 5/8" Torx Screw
4	10-24 x 2" Torx Screw
4	Spacer
7	Snap Clamp

Tools Needed:  
T25 Torx Driver

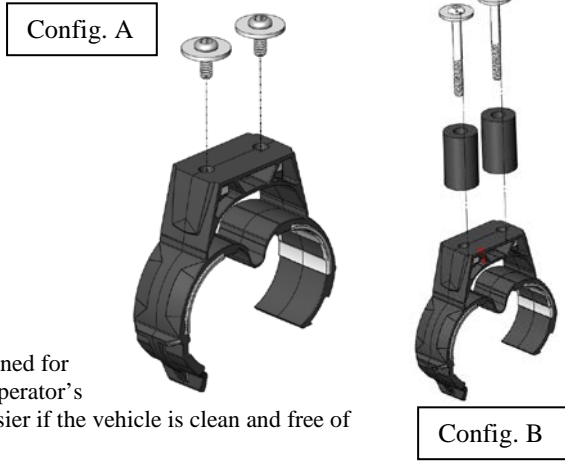

**IMPORTANT:** Your Polaris accessory kit is exclusively designed for your Polaris vehicle. Please read the installation instructions and operator's manual thoroughly before beginning. Installation of any item is easier if the vehicle is clean and free of debris.

**Approximate Installation Time:** 30 Minutes

### INSTALLATION INSTRUCTIONS

1. If applicable, install the cab doors, rear panel, and windshield before proceeding.
2. Refer to Configuration A. Use (10) 5/8" torx screws to attach (5) snap clamps in the A locations in Fig. 1.
3. Refer to Configuration B. Use (4) 2" torx screws to attach (4) spacers and (2) snap clamps in the B locations in Fig. 1.
4. Align the roof with the top of the cab frame bars. Once all clamps have aligned with the frame bars, press down on each clamp to snap into place.
5. Tighten all hardware.

**IMPORTANT:** Do not use glass cleaners and solvents such as ammonia, alcohol, and petroleum distillates.

**Maintenance:** Periodically check all fasteners for tightness and re-torque as required.

#### Cleaning:

1. Use an indirect high pressure water supply to rinse the large dirt particles from the roof.
2. Once the majority of dirt is removed, use warm soapy water and a cotton terry cloth to wash all roof components.
3. Rinse thoroughly and allow to air dry.

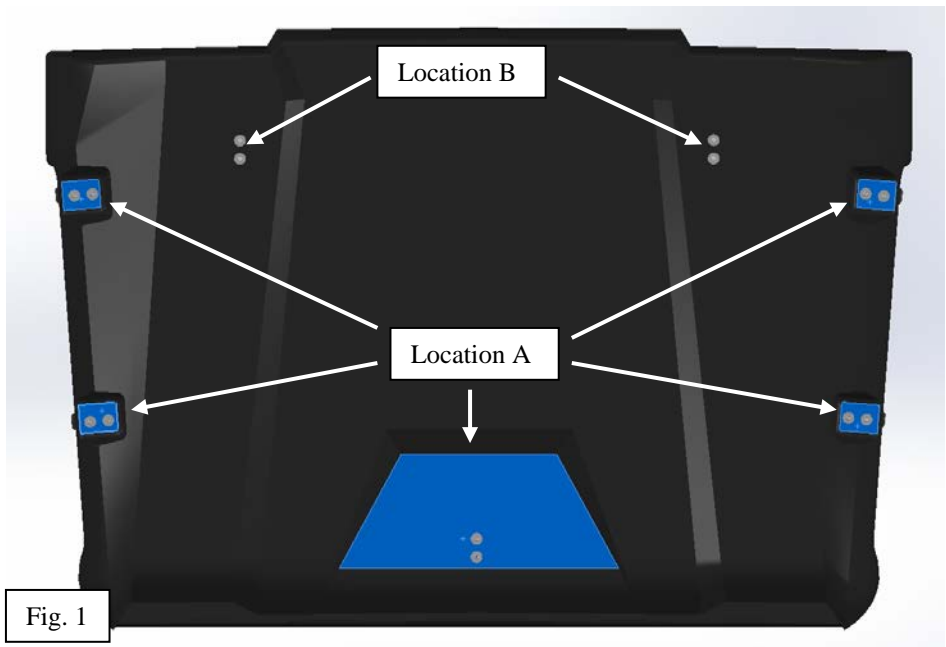


Fig. 1