




SPORTSMAN FENDER BAG

INSTALLATION INSTRUCTIONS

1. Place the mesh bag on the desired fender. Remove the rack.
2. Refer to the template and photo 1. Mark where the straps will rivet to the fender.
3. Mark, drill and pop rivet the straps to the location. And connect the bag to the straps as seen in photo 2 & 3.
4. If installing on the fender with the gas filler neck, remove the panel and thread the strap with the loop through the hole as seen in photo 4.
5. Connect the bottom J-channel strap to the footwell as seen in photo 5.

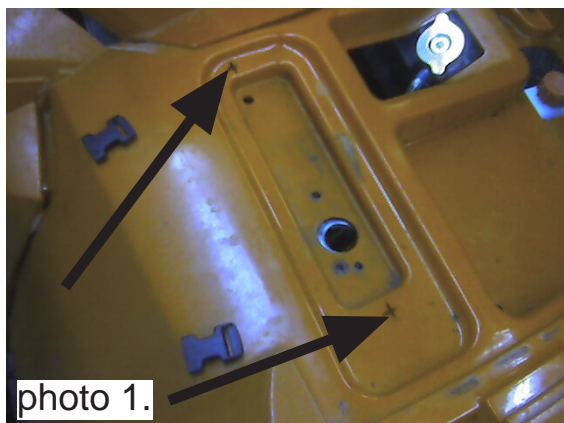

WARNING:

Load capacity: 3 lbs.

Do not carry sharp or pointed objects in the bag.

WARRANTY INSTRUCTIONS

Your new Polaris accessory is guaranteed by Polaris against any defects in material and workmanship for one full year from the date of purchase. Should any problems arise, please contact your dealer. No warranty card is necessary.