

# SPORTSMAN FENDER BAG



**P/N 2876604**

## APPLICATION

2009–2015 SPORTSMAN 850 / XP 1000 MODELS

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts are accounted for in package. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Fender Bag	2876604
	1	Instructions	9925896

## TOOLS REQUIRED

- Pop Rivet Gun
- 3/16" Drill Bit

## APPROXIMATE ASSEMBLY TIME

10 minutes

## IMPORTANT

Your SLINGSHOTSPORTSMAN FENDER BAG is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

1. Remove the front Rack or Front Cargo Box.
2. Position the fender bag on the left or right fender.

3. Disconnect the straps from the bag. Position the straps and mark the holes, drill and pop rivet the straps in location.



4. Connect the bag to the straps.




#### NOTE

Where the self-adhesive Velcro falls on the fender, clean the area with isopropyl alcohol and allow to dry. Peel the backing off the self-adhesive Velcro and adhere to the area.

Maximum Velcro adhesion will occur in 24 hours at room temperature.

5. Connect the bottom J-channel strap to the foot well as shown.

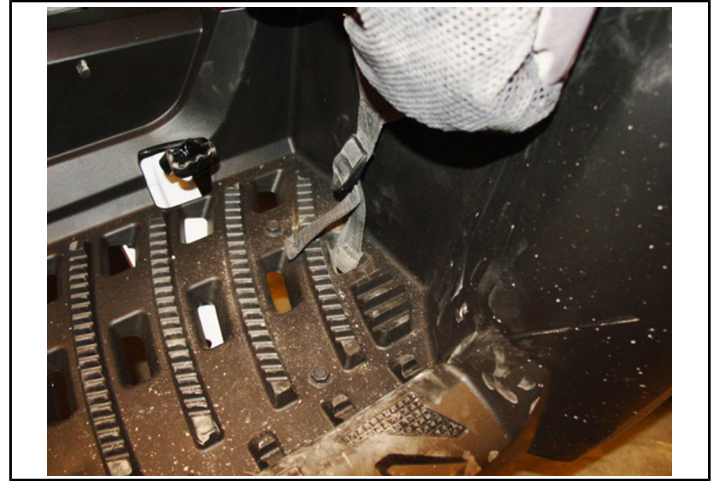

#### ⚠ WARNING

Load Capacity: 3 lbs (1.36 Kg).  
Do not carry sharp or pointed objects in the bag.