

FRONT STORAGE BOX KIT

P/N 2877951



POLARIS
The Way Out.®

Application

Sportsman XP

Before you begin, read these instructions and check to be sure all the parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

This kit includes:

Qty	Part Description	Part Number
1	Box Assembly	N/A
2	Long L&R Kit Anchors	2877784
2	Guide-Rack, L&R	5438790
2	Brkt-Mount, Rack, Front, Upper	5253978
2	Brkt-Mount, Rack, Front, Lower	5253979
2	Spacer-Rub, 12.5mm ID x 19mm OD x 6mm	5813557
2	Spacer-.437 Dia OD x .083 Wall	7556540
2	Scr-#14x1 Hi/Lo-PH-PN TRX-M	7519189
1	Instructions	9923179

IMPORTANT: Your Polaris accessory is designed exclusively for your vehicle. Please read the instructions thoroughly before beginning. Installation of any item is easier if the vehicle is clean and free of debris.


NOTE: Removal/installation of the front rack & accessory storage box is easiest with only one person. It works best if that person stands in front of the vehicle.

IMPORTANT: For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence as shown on the attached instructions.

Approximate Assembly Time: 10 minutes

INSTALLATION INSTRUCTIONS

1. Release the two Lock & Ride anchors holding the front rack to the ATV.

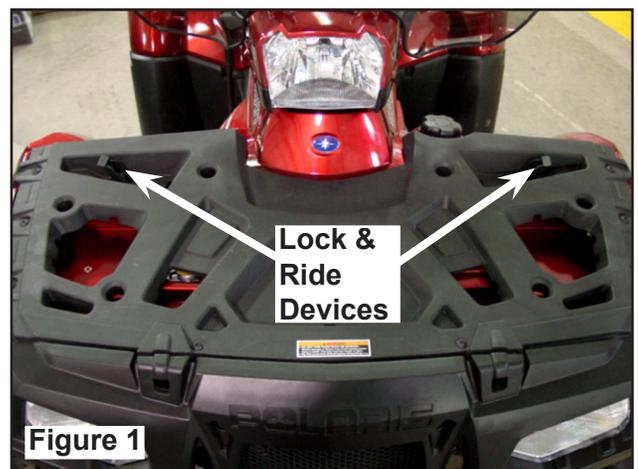

2. Lift up on the rear of the rack about 4 inches.




3. Slide the rack rearward. It should now be free from the front anchor points.

4. Remove the rack from the ATV and set aside.



5. Assemble the two long Lock & Ride anchors (PN 2877784 included with the front box assembly) through the base of the box per the instructions included with the Lock & Ride anchor kits. There is no self adjusting required for these Lock & Ride devices.

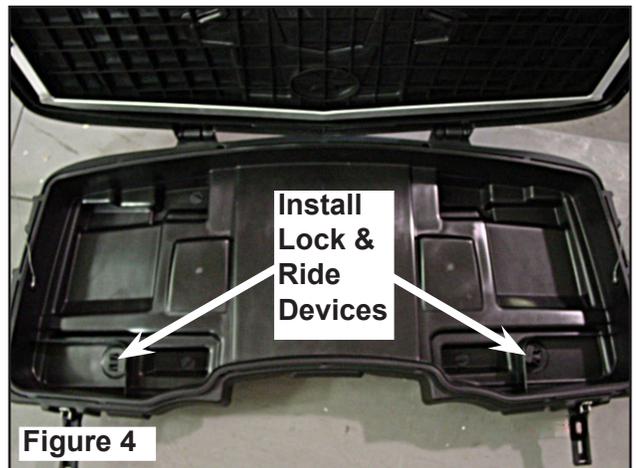

- Install front rack guide. If you have a MY09 Sportsman XP or a MY10 Sportsman XP Touring or X2 you will need the metal four piece rack guide components (See Figure 6). For all other Sportsman XP vehicles, you will need the plastic rack guide (See Figure 5).

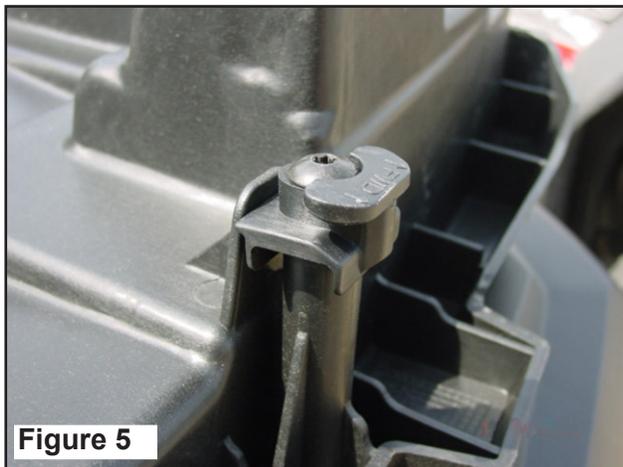


Figure 5

MY10 Sportsman Single / All MY11 and later Sportsman XP (Single, X2, and Touring)


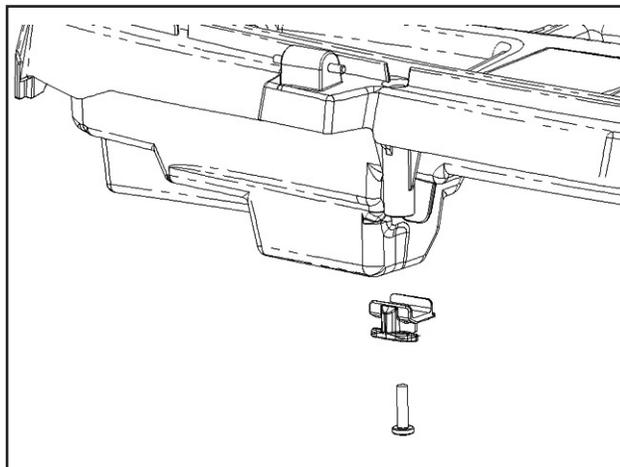


Figure 6

MY09 Sportsman Single / MY10 Sportsman XP Touring and X2

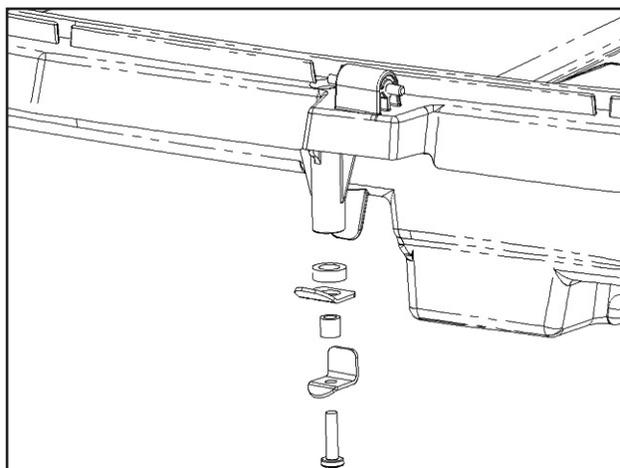

- Install the box assembly in the opposite manner you removed the front rack by holding the rear of the box about 4 inches higher than the front. Position the front box latches in line with the rack support and slide the rack forward until the latches catch and you can not move any further forward.


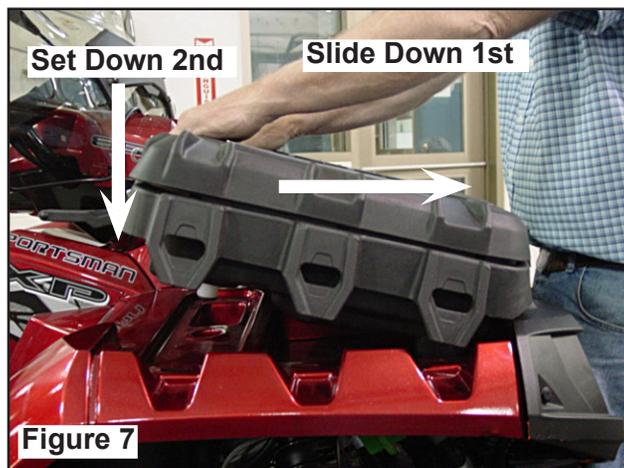


Figure 7

- Lower the rear of the box and make sure it fits flat on the front of the vehicle.



- Verify that the box is properly installed. **NOTE:** The front of the box must be secure in the front rack support, check this by trying to lift up on the front of the box. If the box comes loose, repeat the process starting from Step 6.

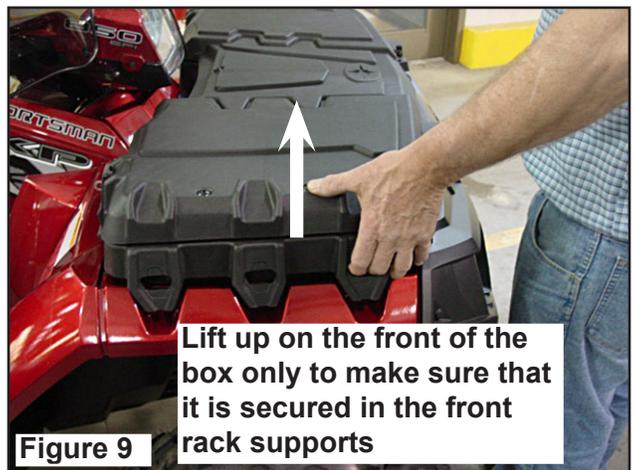

- Lock the box to the vehicle by pushing down on the box and folding over the Lock & Ride latches.

