

NERF BARS KIT

P/N 2879974


APPLICATION

RANGER 570, RANGER ETX

POLARIS

ENGINEERED PARTS
ACCESSORIES & APPAREL

Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

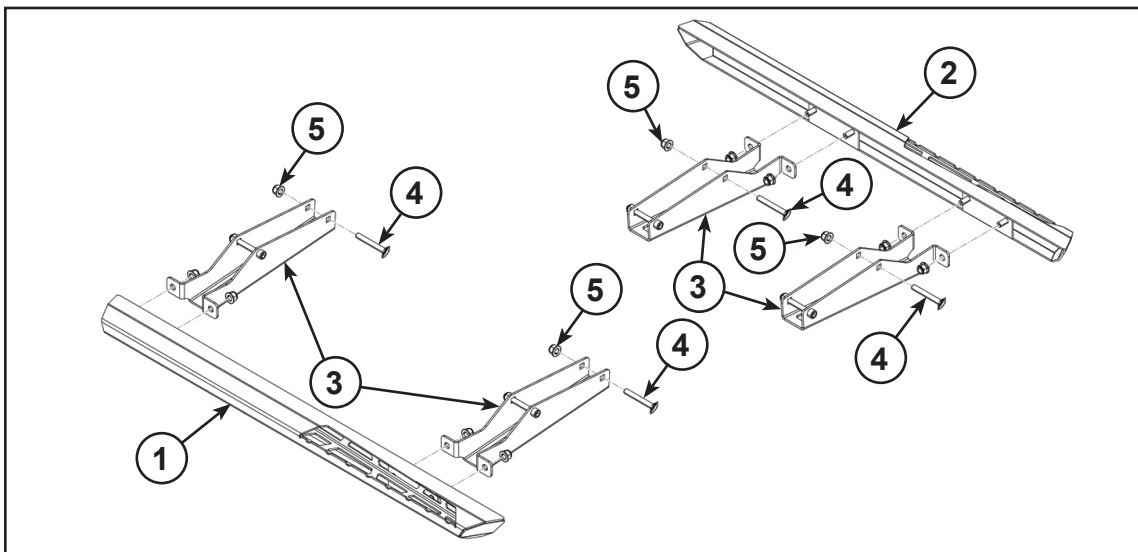

Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	1	NERF Bar Weldment, LH, GT	1020655
2	1	NERF Bar Weldment, RH, GT	1020660
3	4	Bracket Mount, NERF, GT	5259513
4	8	Carriage Bolt - M8X1.25X60	7517518
5	16	Flange Nut-M8X1.25, Nyloc	7547454
	1	Instructions	9925425

Tools Required:

Metric Socket Set


Torx Wrench Set

APPROXIMATE ASSEMBLY TIME: 10 minutes


IMPORTANT: Your Polaris NERF BARS are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety and to ensure a satisfactory installation, perform all installation steps correctly and in the sequence shown.

INSTALLATION INSTRUCTIONS:

1. Park the vehicle. Turn key to "OFF" position and remove from the vehicle.
2. Clamp the two mount brackets (PN 5259513) to chassis by assembling four carriage bolts (PN 7517518) and nuts (PN 7547454) using Torx wrench and socket. Tighten to torque 16 ft. lbs. (21.7 Nm). Figure 1.

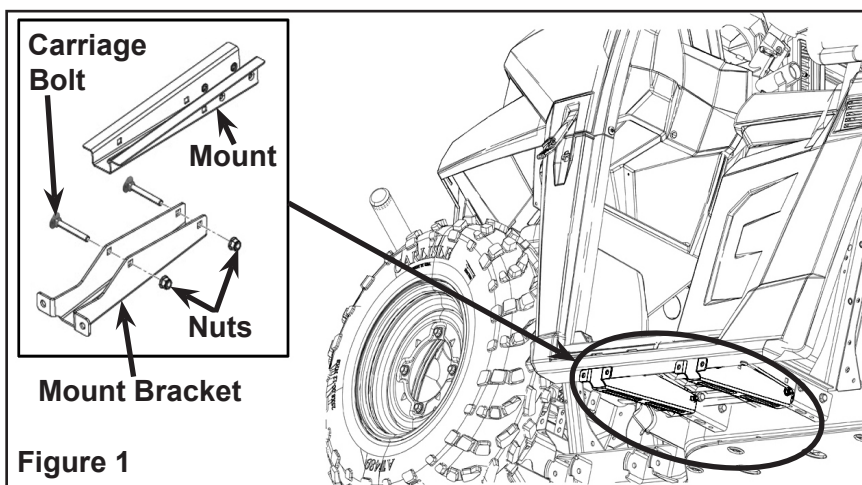

3. Align the LH NERF bar (PN 1020655) on to the mount brackets. Figure 2.

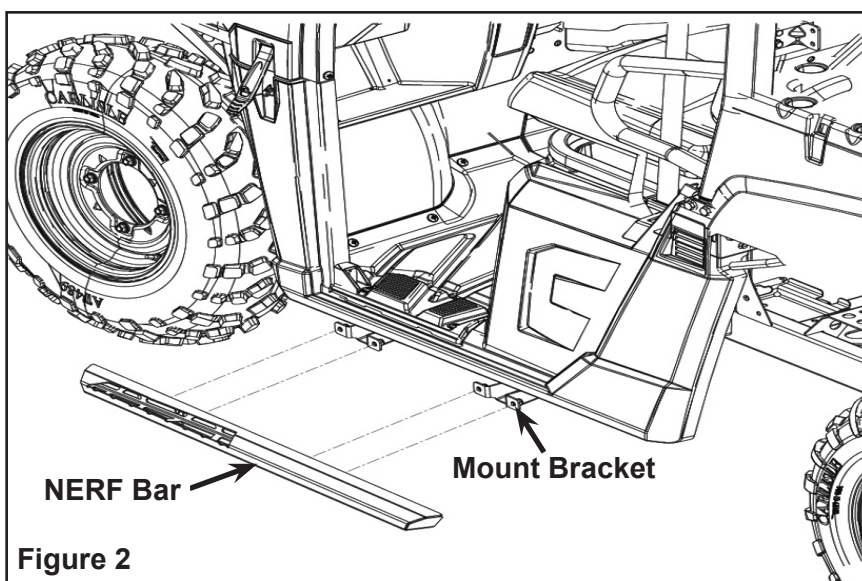

4. Assemble the four nuts (PN 7547454). Tighten to torque 16 ft. lbs. (21.7 Nm). Figure 3.
5. Repeat the Steps 2-4 for RH NERF bar (PN 1020660) on the RH side of the vehicle.

