


FOR THE DOORS:

19-Insert the fiber rods into the sleeves sewn to the top. Do this by curling the rod and guiding it through the front. Slip the rod into the front clips (installed in operation 1). Attach the rear clips to the rod and use the rod to leverage the installation on the rear frame tube. The fiber rod will help to install and remove the tube by pulling sideways.

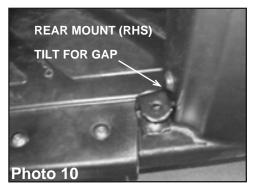


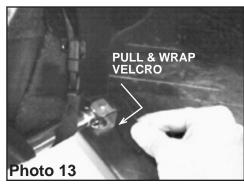

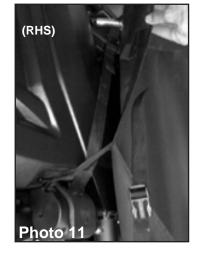





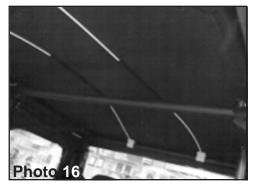



HINTS & WARNINGS

Warning: This cab was NOT designed for trailering at highway speeds. Do not trailer at highway speeds unless there is an appropriately designated trailer cover.

- Do not turn the jaw alides outward. Slightly moving the jaw slides forward or backward may be necessary for better alignment.
 Door may need to be closed quickly from the inside so that all magnets connect properly.
- If excessive pooling from rain or snow occurs it is suggested to use fiberglass rod and gray clips. As seen in Photo 16.
- Doors are not intended to bear weight or restrain occupants in vehicle.
- Doors contain powerful magnets. Keep away from any magnetic sensitive items or materials.
- Instructions need to be followed for an accurate fit. The installation of the top can affect how the doors fit. The top mounts for the door can be moved forward and back to center the magnets.

WARRANTY INSTRUCTIONS:

Your new Polaris accessory is guaranteed against any defects in material or workmanship for one full year from the date of purchase. Should any problems arise, please contact your dealer. No warranty card is necessary.