

REAR STORAGE BOX KIT



P/N 2884853; 2884854; 2884856

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.polaris.com.


REQUIRED SOLD SEPARATELY

Only parts for installation of the Rear Storage Box Kit are included. For complete installation of *Audio Rear Storage Box*, P/N 2884856, the following additional kit is required (sold separately):

- *Rear Accessory Power Harness Kit*, P/N 2889070, or 2889071.

KIT CONTENTS


REAR STORAGE BOX KIT, P/N 2884853

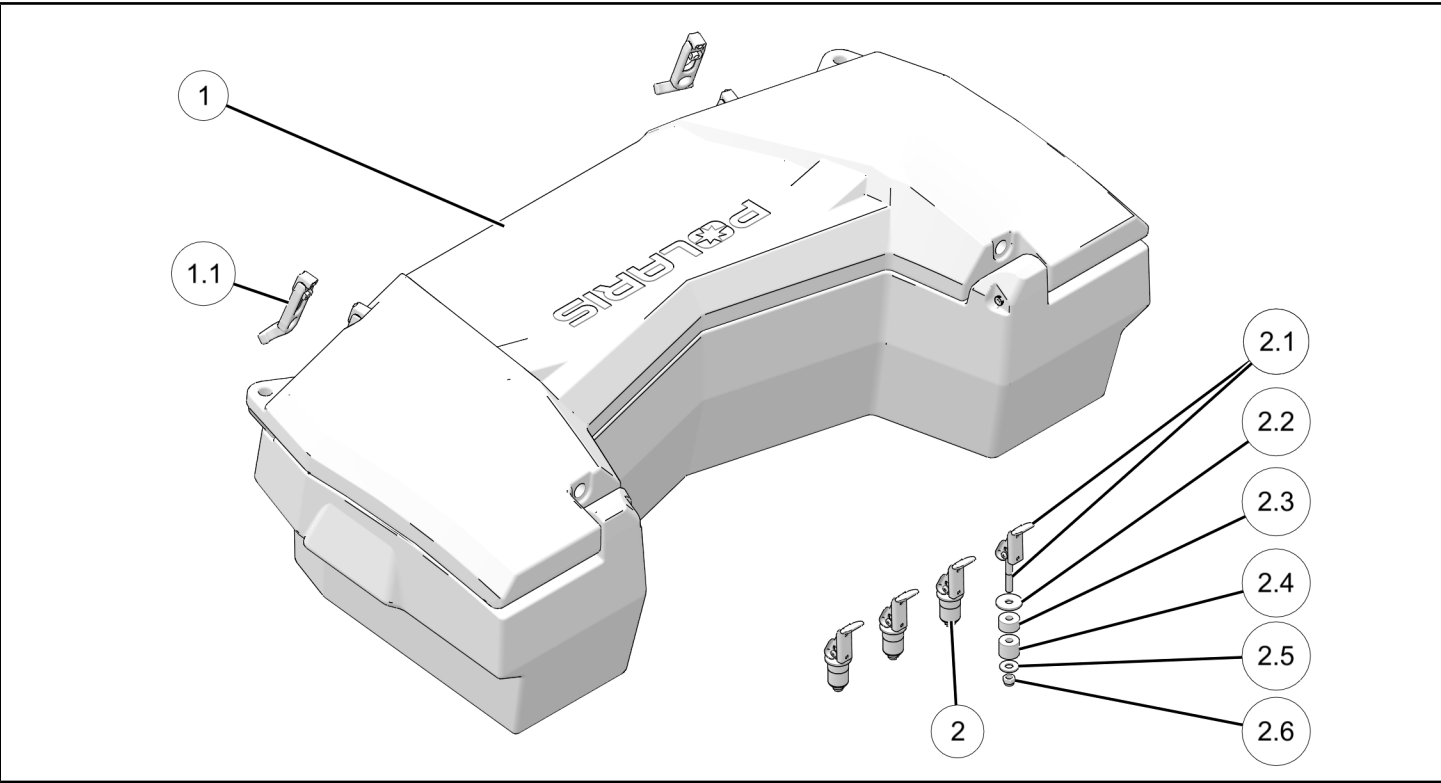

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Rear Storage Box Assembly	N/A	N/A
1.1	2	- Rear Storage Box Latches	N/A	2208777
1.2	1	- Bottle Opener (not shown)	5271376	N/A
2	4	Lock & Ride® Anchor Assembly	2876420	2208777
2.1	1	- Lock & Ride® Anchor Handle / Shaft	N/A	2876420


REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
2.2	1	- Lock & Ride® Anchor Plastic Washer	5437777	2876420
2.3	1	- Lock & Ride® Anchor Plastic Bushing	N/A	2876420
2.4	1	-Lock & Ride® Anchor Rubber Bushing	5413598	2876420
2.5	1	- Washer, .375 X .875 X .078	7558403	2876420
2.6	1	- Nut, 5/16-24, Nylon Locking	7547217	2876420

OPEN REAR STORAGE BOX KIT, P/N 2884854

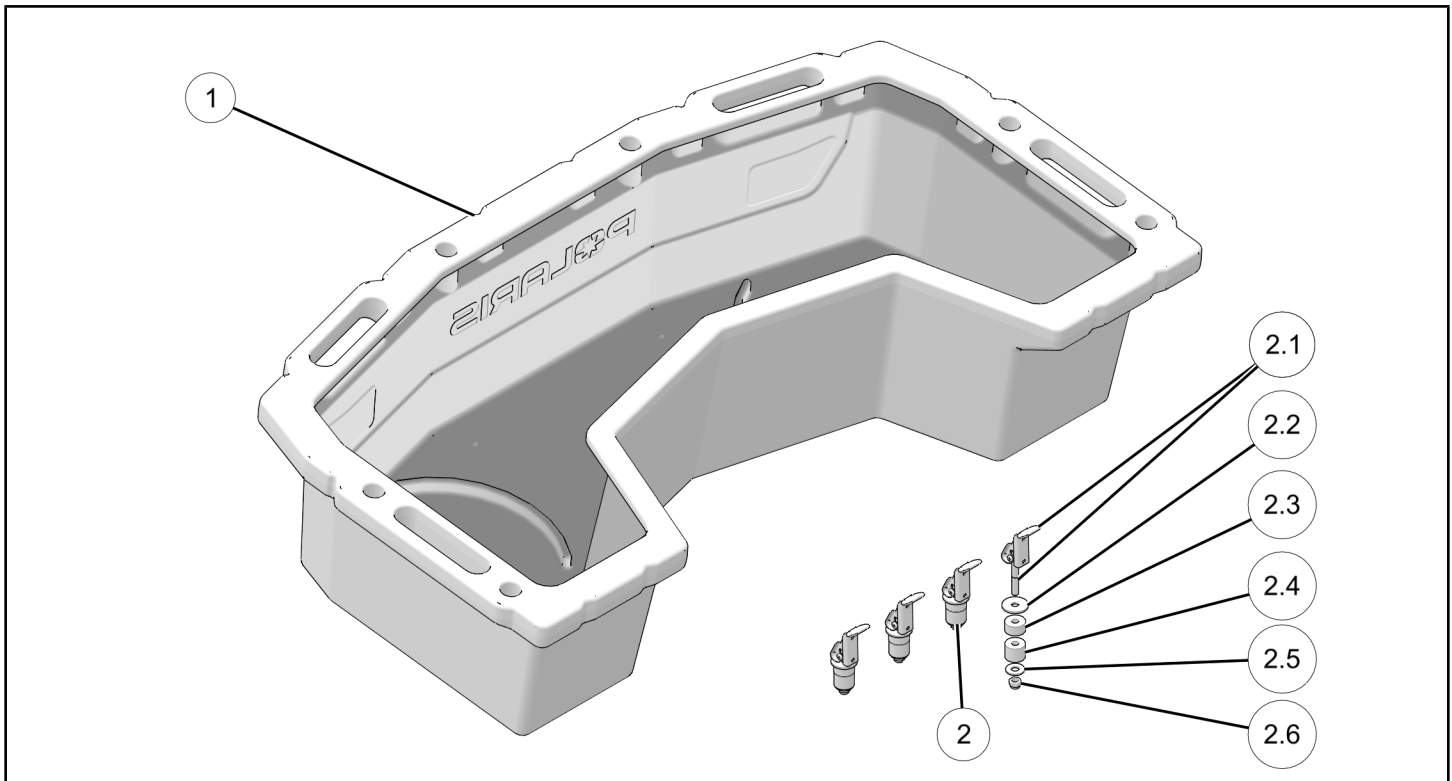

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Open Rear Storage Box Assembly	N/A	N/A
2	4	Lock & Ride® Anchor Assembly	2876420	2208778
2.1	1	- Lock & Ride® Anchor Handle / Shaft	N/A	2876420
2.2	1	- Lock & Ride® Anchor Plastic Washer	5437777	2876420
2.3	1	- Lock & Ride® Anchor Plastic Bushing	N/A	2876420
2.4	1	- Lock & Ride® Anchor Rubber Bushing	5413598	2876420
2.5	1	- Washer, .375 X .875 X .078	7558403	2876420
2.6	1	- Nut, 5/16-24, Nylon Locking	7547217	2876420

AUDIO REAR STORAGE BOX KIT, P/N 2884856

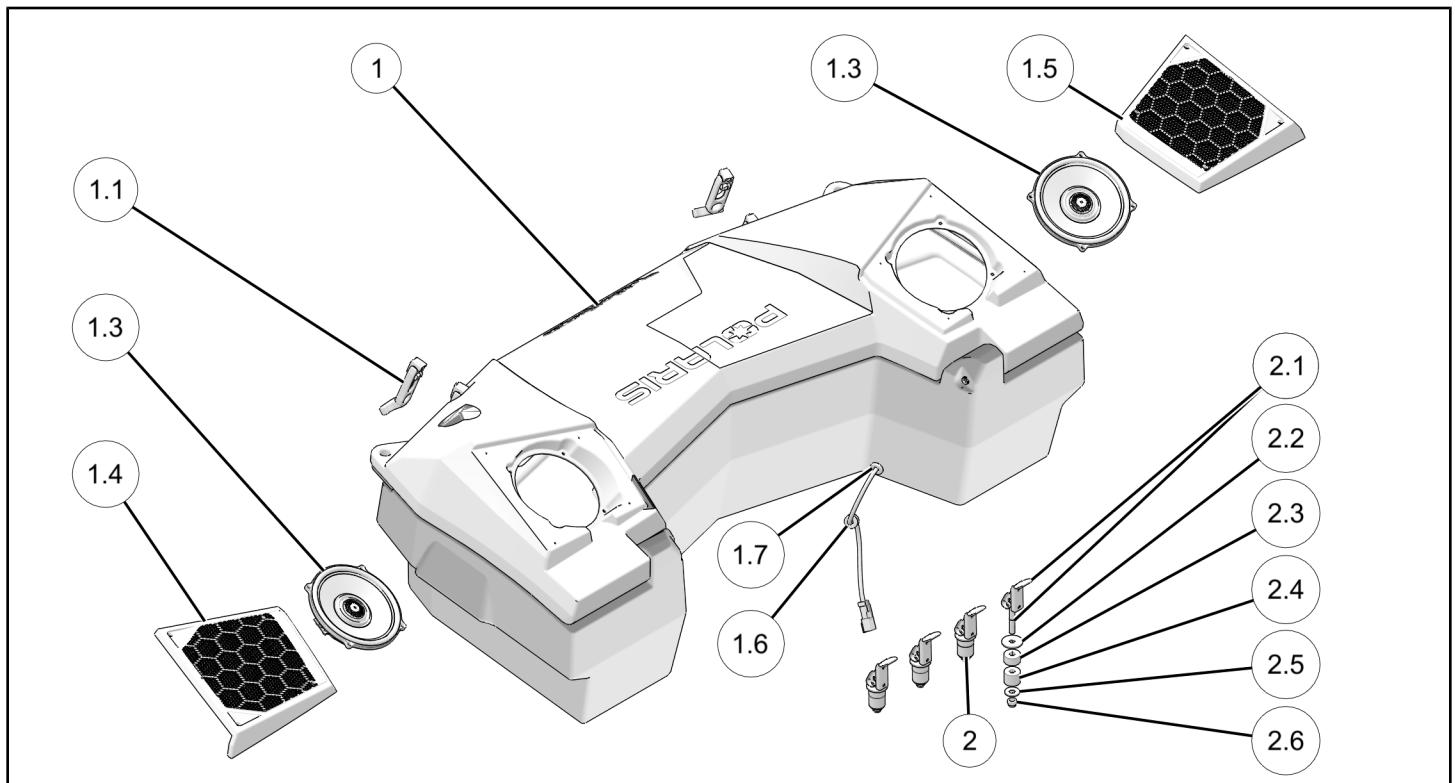

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	1	Audio Rear Storage Box Assembly	N/A	N/A
1.1	2	- Rear Storage Box Latches	N/A	2208779
1.2	1	- Bottle Opener (not shown)	5271376	N/A
1.3	2	- Speaker	2414537	N/A
1.4	1	- LH Speaker Grille	5457685	N/A
1.5	1	- RH Speaker Grille	5457686	N/A
1.6	1	- Plug Grommet	N/A	2208779
1.7	1	- Harness Grommet	N/A	N/A
2	4	Lock & Ride® Anchor Assembly	2876420	2208779
2.1	1	- Lock & Ride® Anchor Handle / Shaft	N/A	2876420
2.2	1	- Lock & Ride® Anchor Plastic Washer	5437777	2876420
2.3	1	- Lock & Ride® Anchor Plastic Bushing	N/A	2876420
2.4	1	- Lock & Ride® Anchor Rubber Bushing	5413598	2876420
2.5	1	- Washer, .375 X .875 X .078	7558403	2876420
2.6	1	- Nut, 5/16-24, Nylon Locking	7547217	2876420

TOOLS REQUIRED

- Safety Glasses
- Drill
- Drill Bit:
 - 1 in
- Socket Set, SAE
- Wrench Set, SAE

IMPORTANT

Your Rear Storage Box Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL


1. Park vehicle on a flat surface.
2. Push engine stop switch to OFF position.
3. Turn key to OFF position and remove key.

ACCESSORY INSTALLATION

1. Place Lock & Ride® anchor handle/shaft assembly **2.1** and washer **2.2** in pre-drilled holes inside rear storage box.

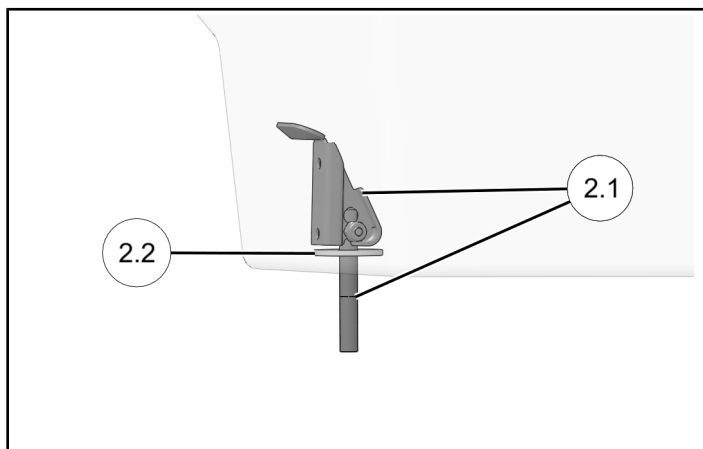


2. From the bottom side of storage box, install Lock & Ride anchor plastic bushing **2.3**, rubber bushing **2.4**, washer **2.5**, and nut **2.6**. Tighten nut to desired tension.

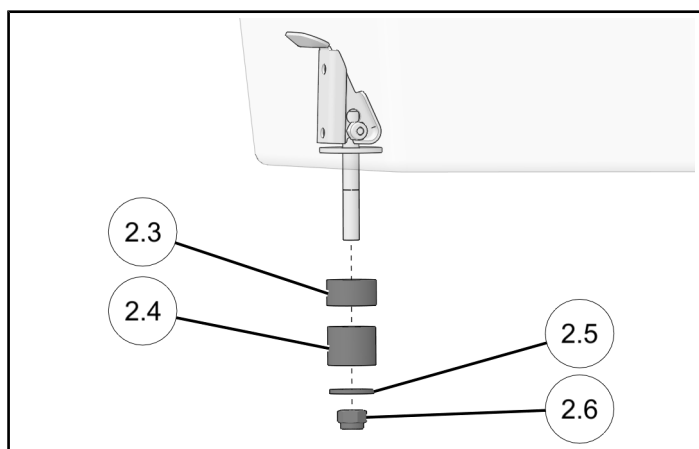


3. Repeat steps 1 and 2 for remaining Lock & Ride anchors.
4. Line up mounting holes on rear rack with four Lock & Ride anchors ② and put rear storage box ① onto rear rack.

NOTICE

Make sure Lock & Ride anchor handles are in the unlocked (vertical) position

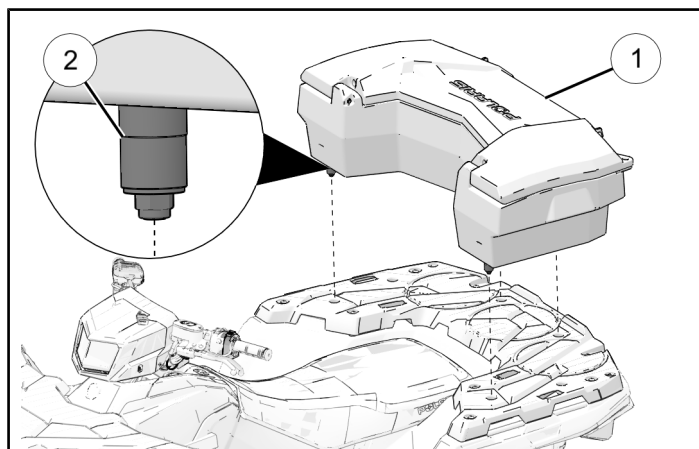


5. Attach rear storage box by rotating Lock & Ride anchor handles down into the locked (horizontal) position as shown.

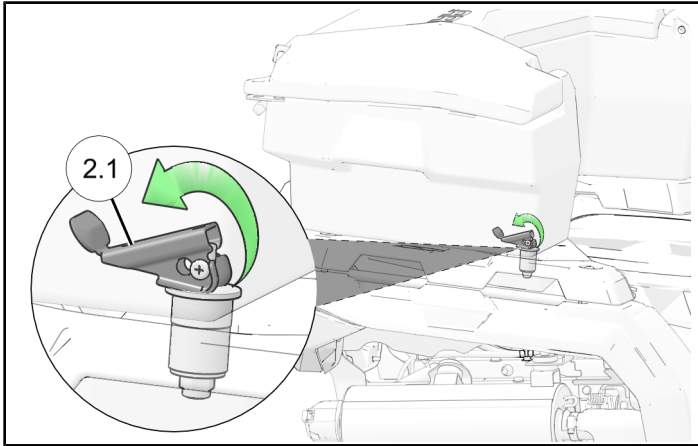

WIRE ROUTING FOR AUDIO REAR STORAGE BOX P/N 2884856


1. Remove seat by lifting up on the rear and pulling rearward.

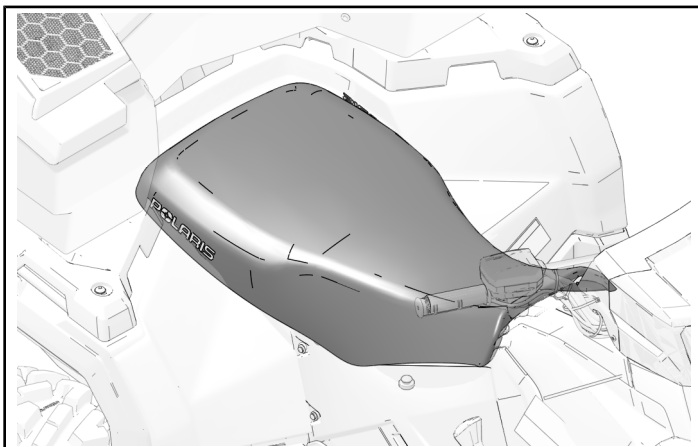


2. Identify center of hole location on rear cab as shown. Drill a 1 in hole in that location.

IMPORTANT

Control tool depth. Ensure tool is clear of all other parts and components to prevent damage to vehicle.

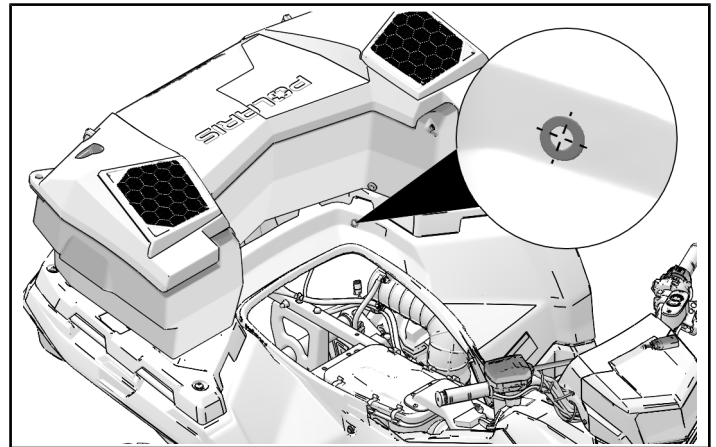

3. Insert wire harness connector through hole and install grommet 1.6 into hole.

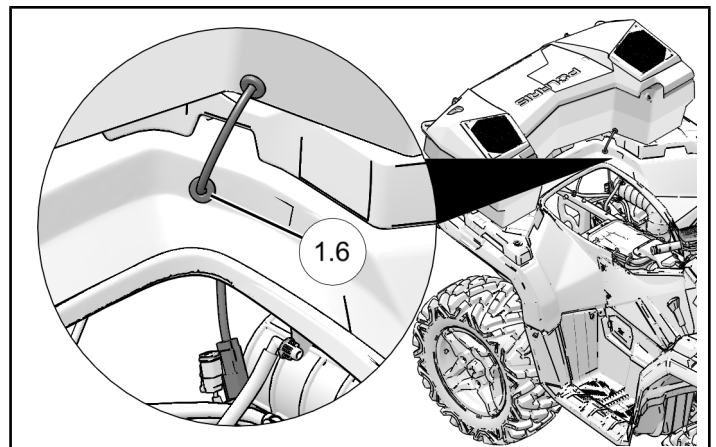

4. Connect wire harness connector from audio rear storage box to rear accessory power harness connector (sold separately).
5. Reinstall seat.

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

