

FRONT BUMPER KIT



P/N 2882692

APPLICATION


Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

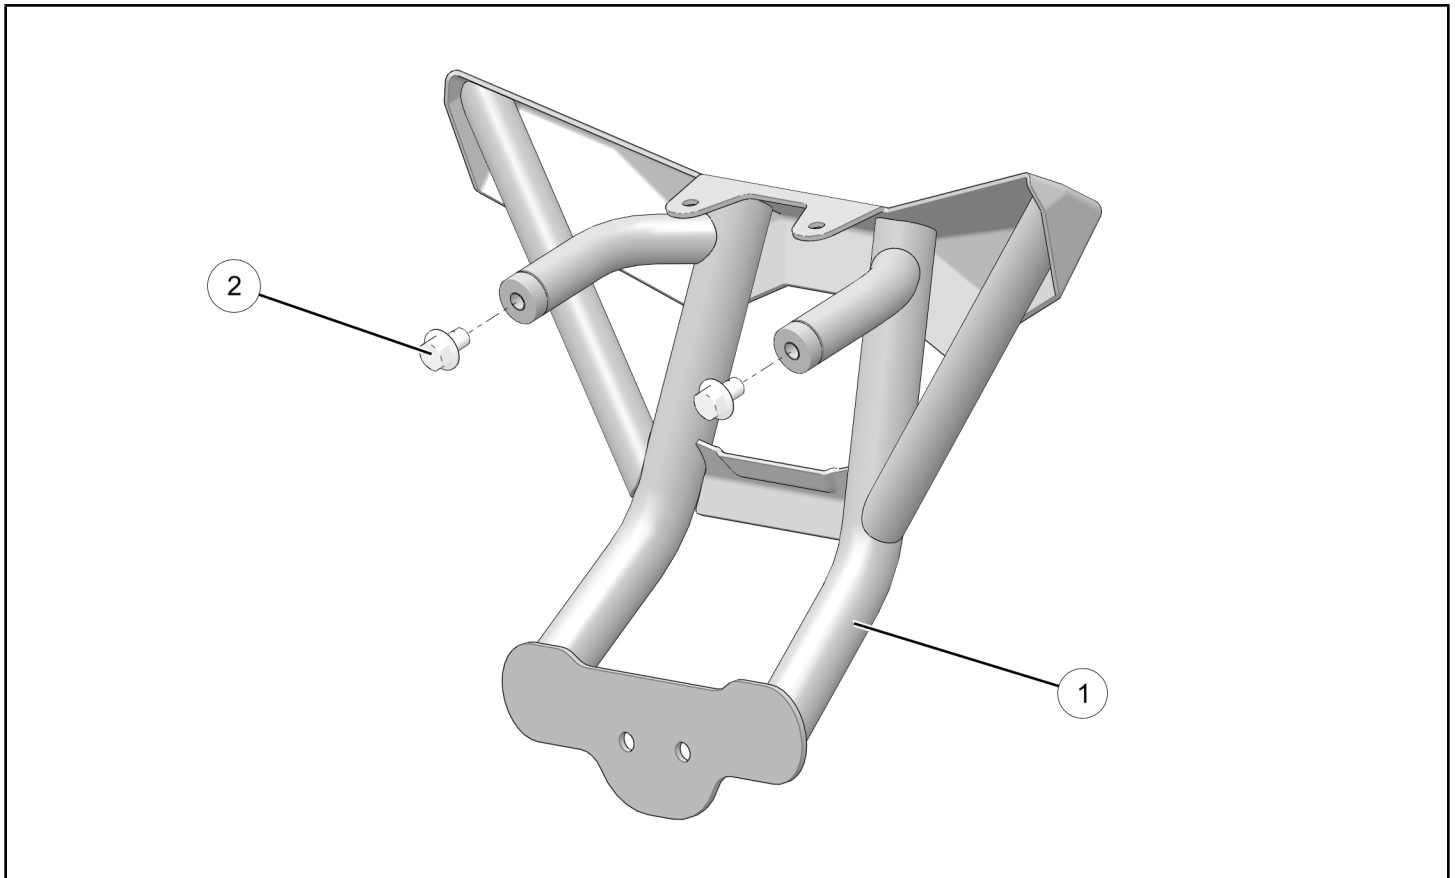

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Bumper	-
2*	2	Screw, Hex Flange - M10 X 1.25 X 16	-
	1	Instructions	9927961

Items marked (*) are included in Hardware Kit PN 2207092.

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Metric
- Torque Wrench

IMPORTANT


Your Front Bumper Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME


Approximately 10 minutes

INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove tow hook (A) by removing two screws (B). Retain hook and screws.

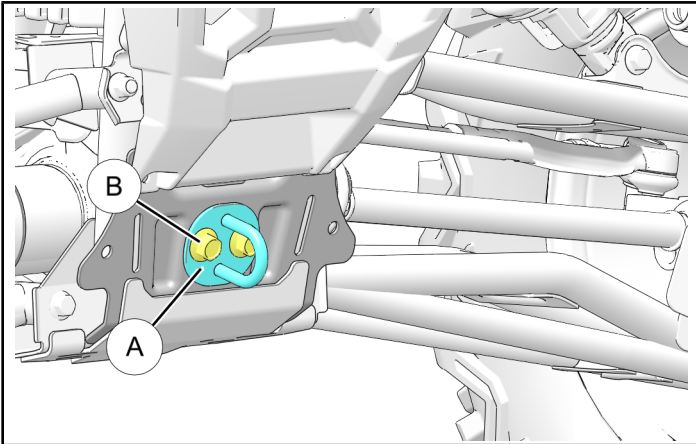

3. Loosely install screw (2) through LH side of front suspension mounting bracket into bumper (1). Repeat for RH side.

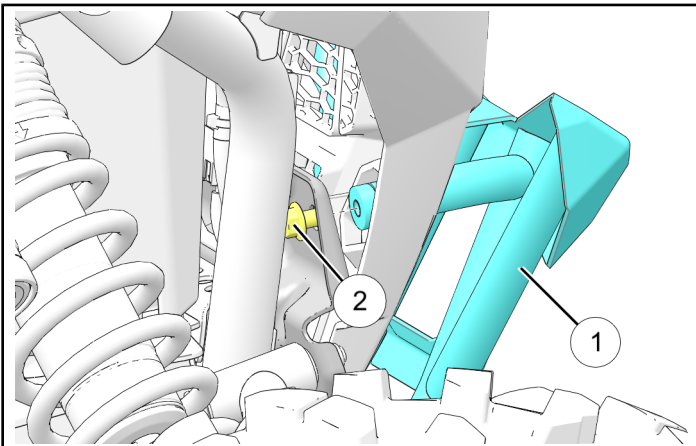

4. Loosely install two retained screws (B) through tow hook (A) and bumper (1) into support plate.

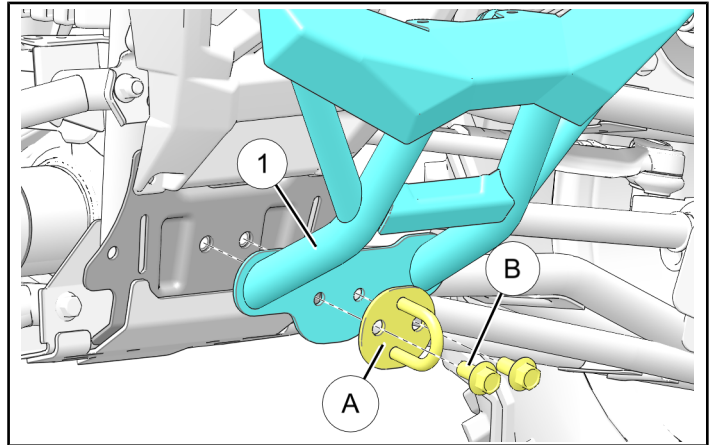

5. Torque screws to specification.

TORQUE

M10 screws (2): 40 ± 4 ft. lbs. (54 ± 5 Nm)

M12 screws (B): 54 ± 5 ft. lbs. (73 ± 7 Nm)

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

