

WIDE FLARE FENDER KIT



P/N 2881985

APPLICATION


Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

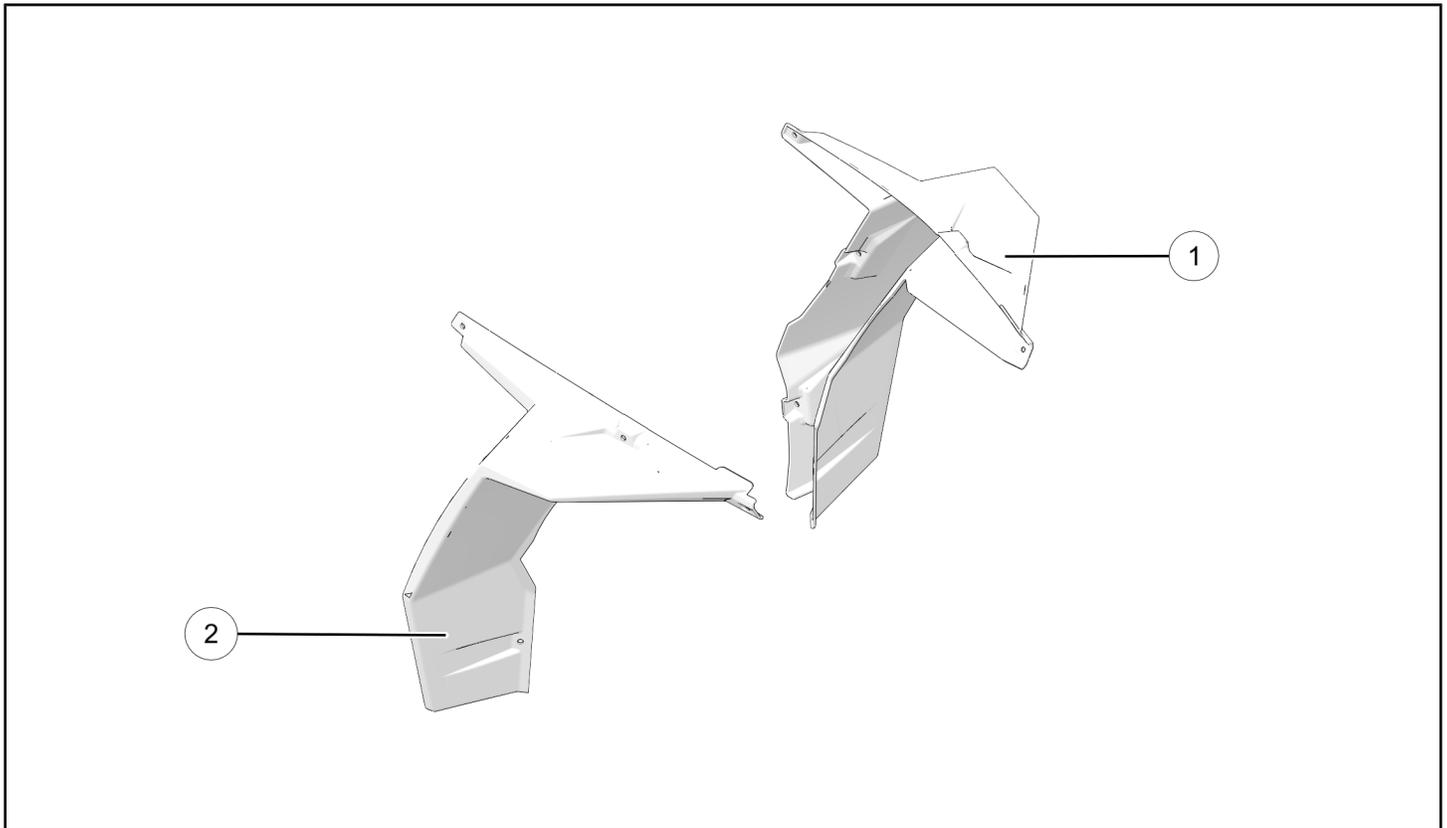

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Fender, Front LH	-
2	1	Fender, Front RH	-
	1	Instructions	9927085

TOOLS REQUIRED

- Safety Glasses
- Pliers, Push Pin
- Screwdriver Set, Torx®

IMPORTANT

Your Wide Flare Fender Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


ASSEMBLY TIME

Approximately 10–15 minutes


INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into “PARK”. Turn key to “OFF” position and remove from vehicle.
2. Remove existing LH front fender by removing three screws (A), one screw (B), one screw (C), and one plastic push pin (D) as shown. Retain screws and pin.

REF	PART DESCRIPTION
A	Screw, Torx® Truss Head - M6 X 1.0 X 25
B	Screw, Torx® Truss Head - M6 X 1.0 X 50
C	Screw, Torx® Truss Head, Hi/Lo - #14 X 1.75

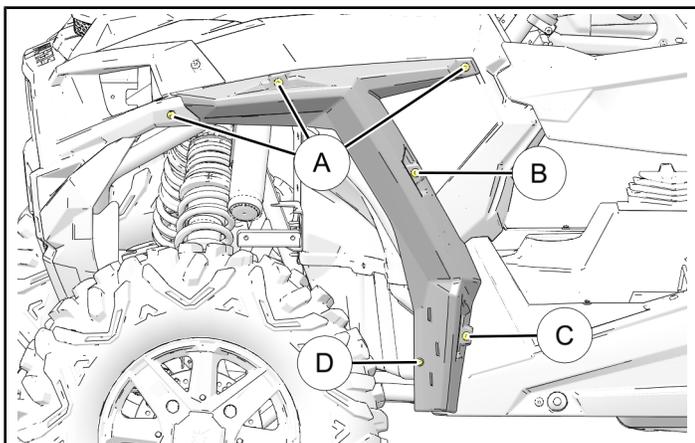

3. Install new LH fender (1) using retained screws (A) (B) (C), and one plastic push pin (D) as shown.

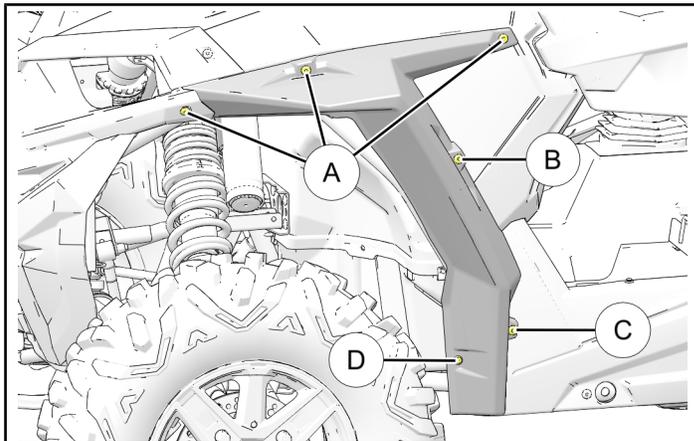

4. Repeat Steps 2–3 for RH fender (2).