

SHOULDER BAG KIT



P/N 2884286


APPLICATION

Verify accessory fitment at [Polaris.com](https://polaris.com).

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

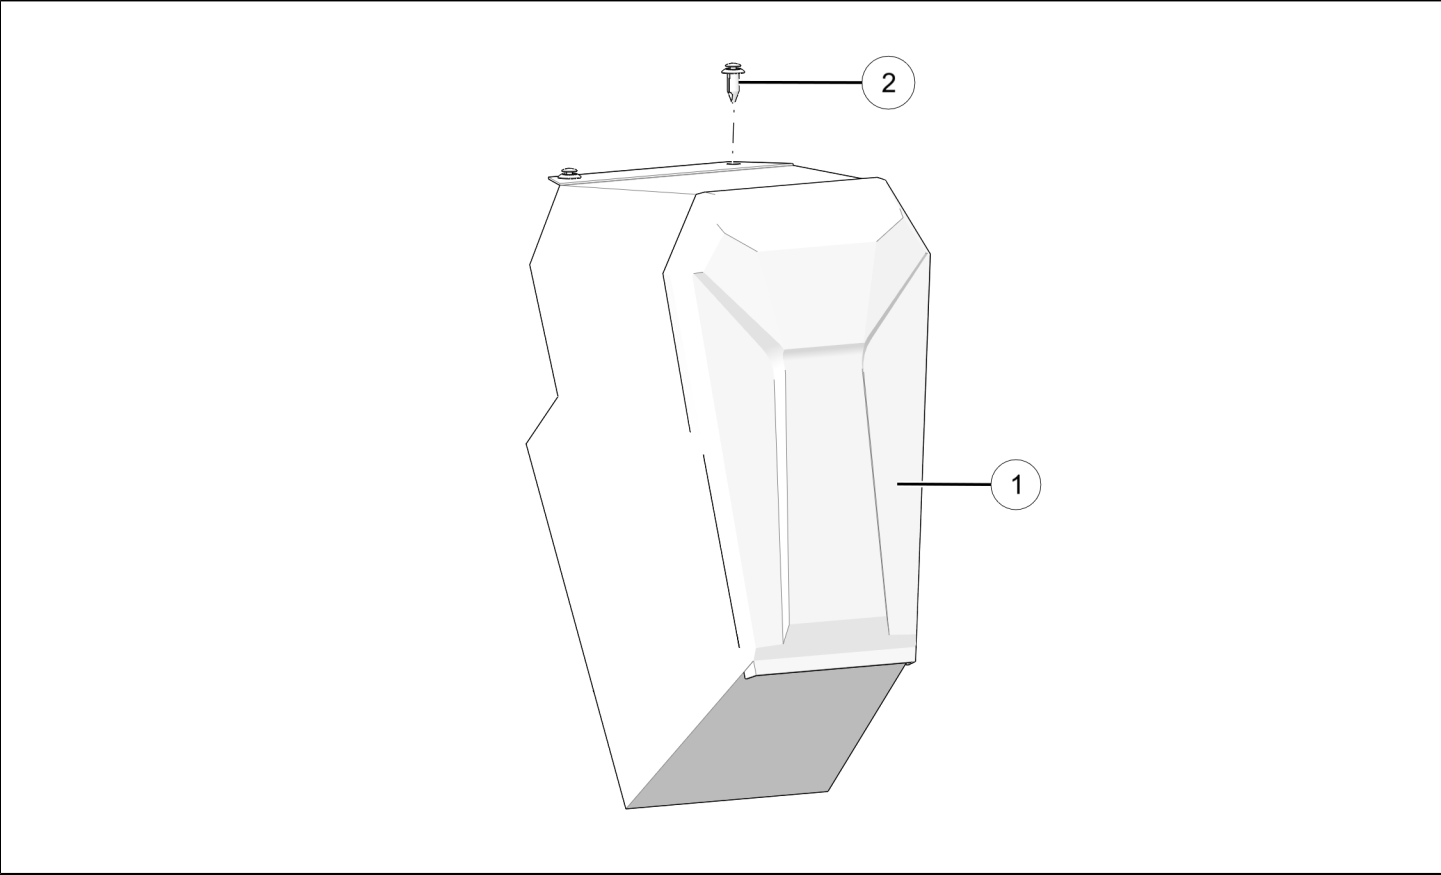

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Bag–Shoulder	N/A
2	4	Push-Pin–Rivet, 0.315 x 0.325 x 0.787	7661855
	1	Instructions	99229862

TOOLS REQUIRED

- Safety Glasses
- Drill
- Drill Bit:
 - 5/16 in. (8 mm)
- Center Punch
- Tape Measure

IMPORTANT

Your Shoulder Bag Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS


VEHICLE PREPARATION

GENERAL


1. Shift vehicle transmission into PARK. Turn key to OFF position and remove from vehicle.

ACCESSORY INSTALLATION


1. Remove top close-off panel by turning knobs 1/4 around. Remove panel from behind seats.

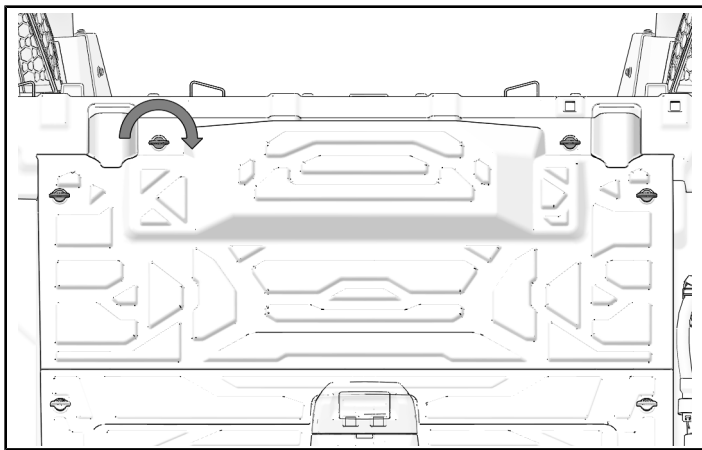

2. Position shoulder bag ① flush against close-off panel.

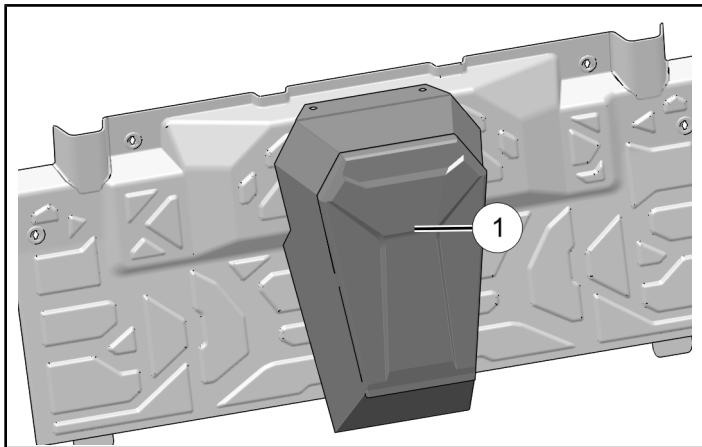


3. Center shoulder bag ① between two protruding segments of close-off panel. Mark center of each mounting hole.

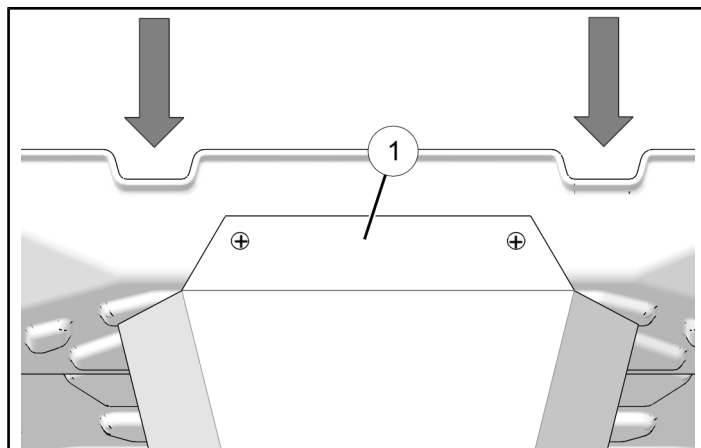


4. Place shoulder bag aside and carefully drill at each marked location.

MEASUREMENT


Drill Bit:
5/16 in. (8 mm)

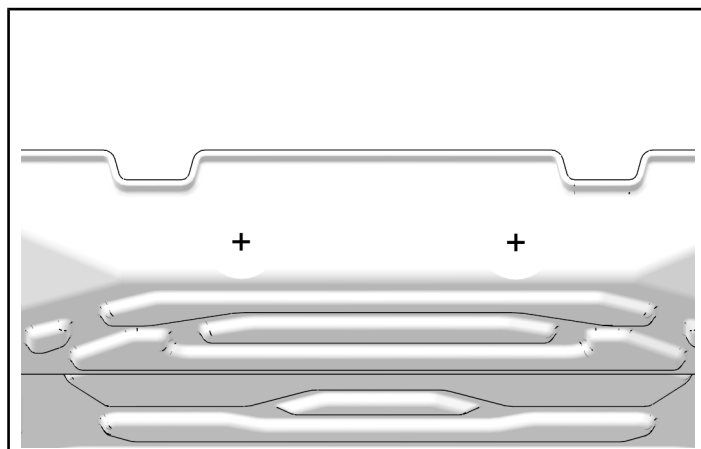


5. Install top of shoulder bag ① with two push-pin rivets ②.

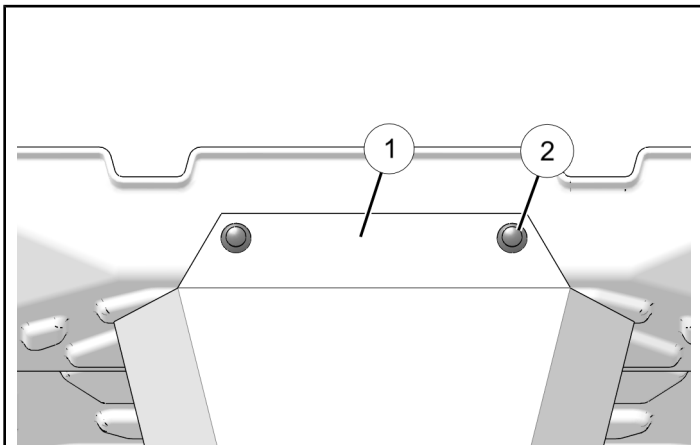


8. Reinstall top close-off panel by turning knobs 1/4 around.

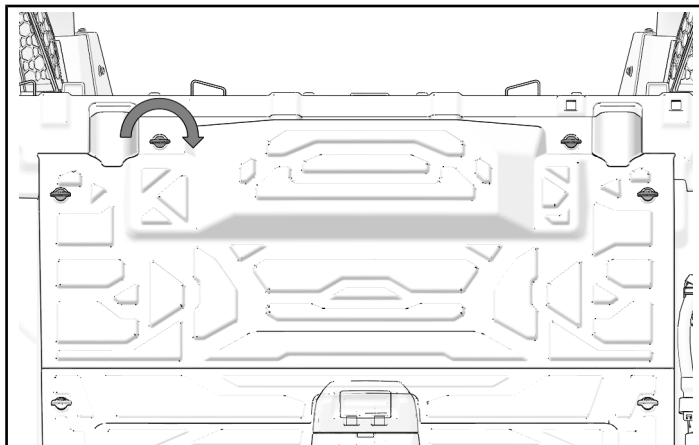



6. Open bag and mark center of each lower mounting hole.

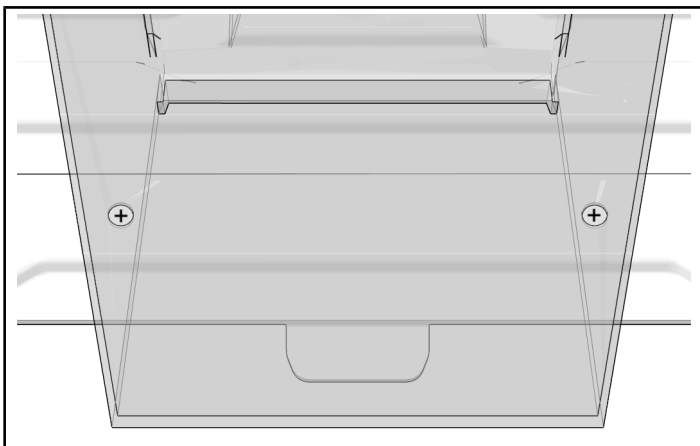


9. Position shoulder bag flush against close-off panel, between passenger and driver seat.

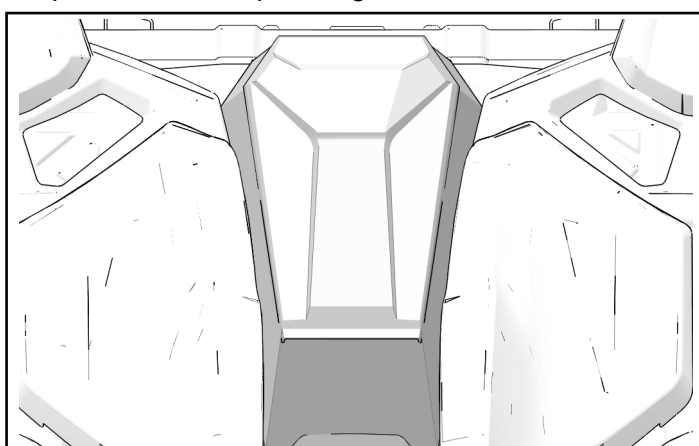


7. Uninstall top of shoulder bag and set bag aside. Carefully drill at each bottom location.

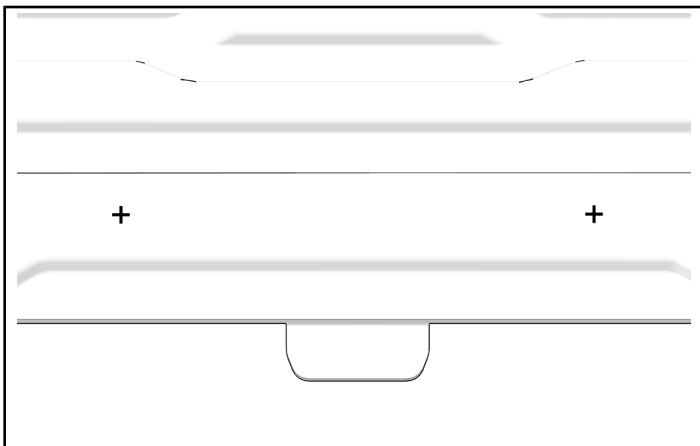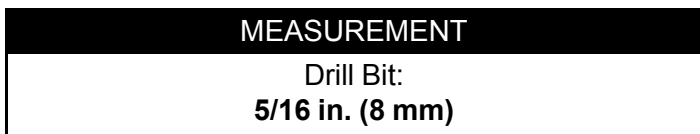

10. Install top of shoulder bag ① with two push-pin rivets ②.

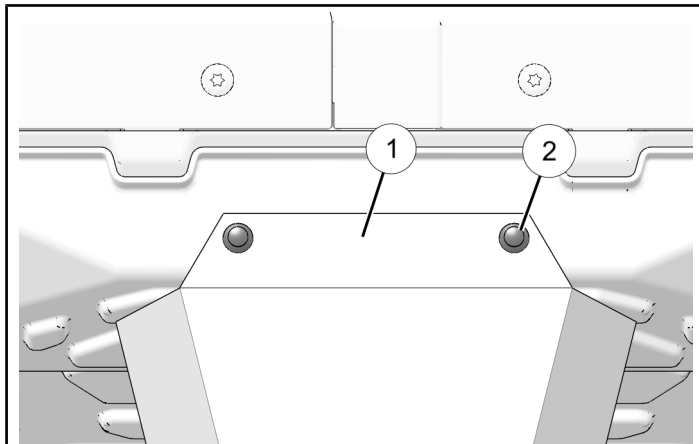

11. Install bottom of bag with two push-pin rivets ②.

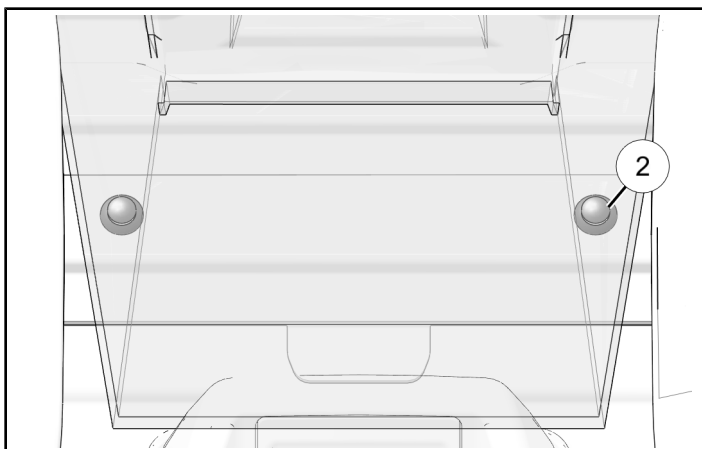

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

