

COOLER KIT



P/N 2884623


APPLICATION

Verify accessory fitment at www.polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

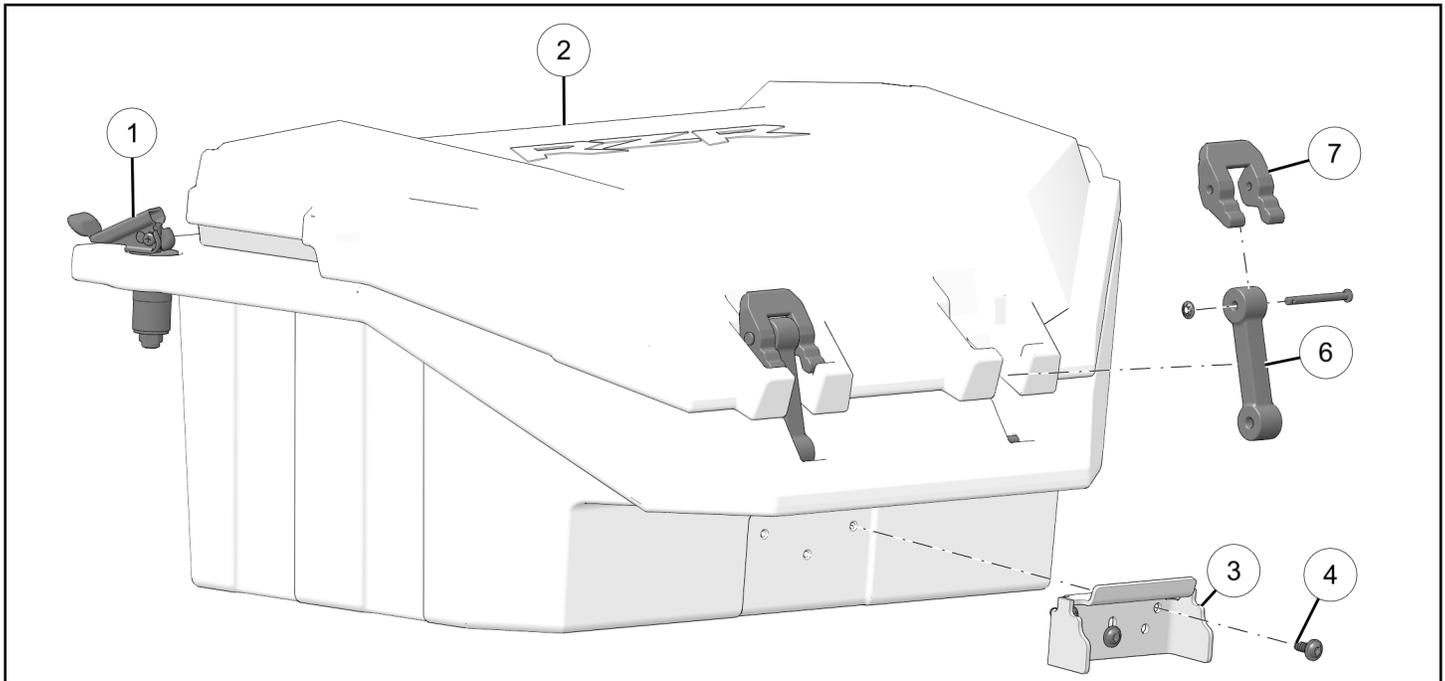

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY	AVAILABLE SERVICE KIT
1	4	Kit, Lock & Ride® Anchor	2637796	n/a
2	1	Assembly–Cooler	n/a	n/a
3	1	Bracket–Cooler	n/a	n/a
4	3	Screw–Self Tapping, Torx®, M6 x 16 mm	n/a	n/a
5	1	Assembly–Plug, Gasket (not shown)	2636093	n/a
6	2	Body–Flex, Latch, Cooler	n/a	2208371
7	2	Latch–Lever	n/a	2208371

TOOLS REQUIRED

- Safety Glasses
- Screwdriver Set, Torx®
- Wrench Set, SAE

IMPORTANT

Your Cooler Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL


1. Shift vehicle transmission into PARK. Turn key to OFF position and remove from vehicle.

ACCESSORY INSTALLATION


1. Install bracket onto cooler with three bracket fasteners.

IMPORTANT


Use caution to not over torque fasteners. Excessive torque may strip threaded hole.

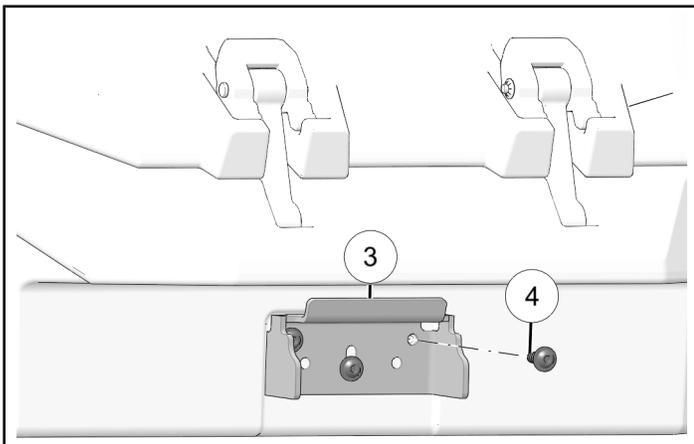


2. Lock & Ride® assemblies may need adjustment. Tighten or loosen bottom nut depending on fitment.

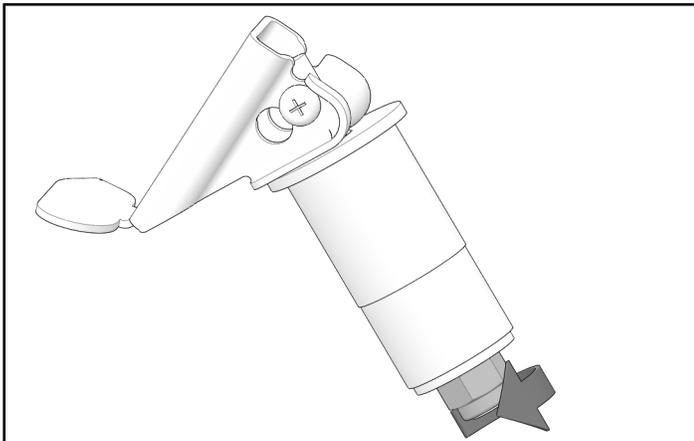


3. Place cooler in rear-most part of rear box. Ensure Lock & Ride® storage box holes are aligned with mounting holes in rear box.

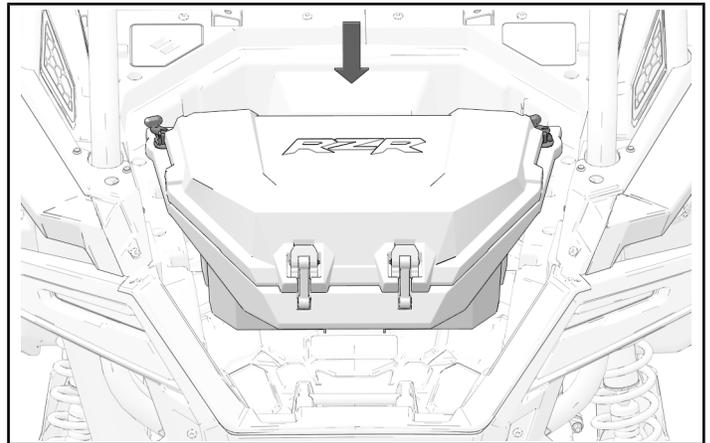

4. Ensure bracket hooks under rear box tube.

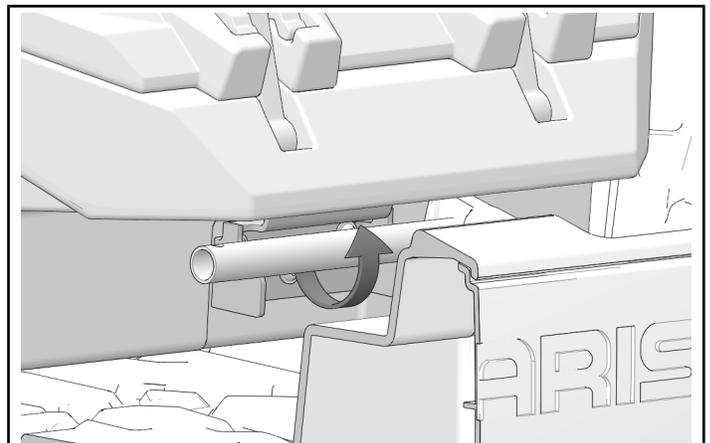

5. Ensure Lock & Ride® assemblies are fully seated before closing top lever and securing cooler.

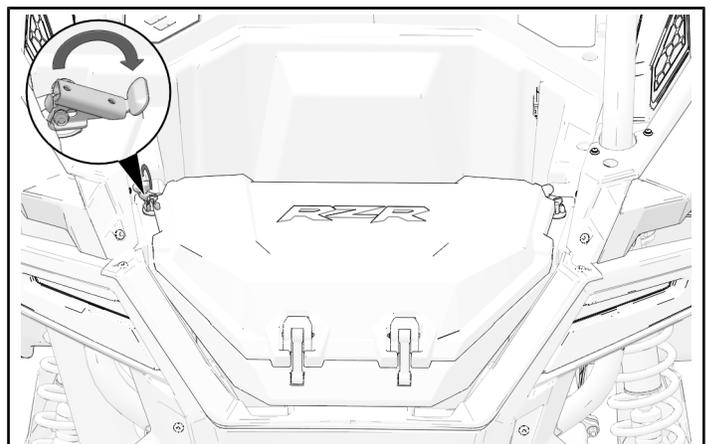

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

