

UPPER DOOR NET KIT



P/N 2881654

APPLICATION


RZR S 900, RZR S 4 900, RZR XP 1000, RZR XP 4 1000

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

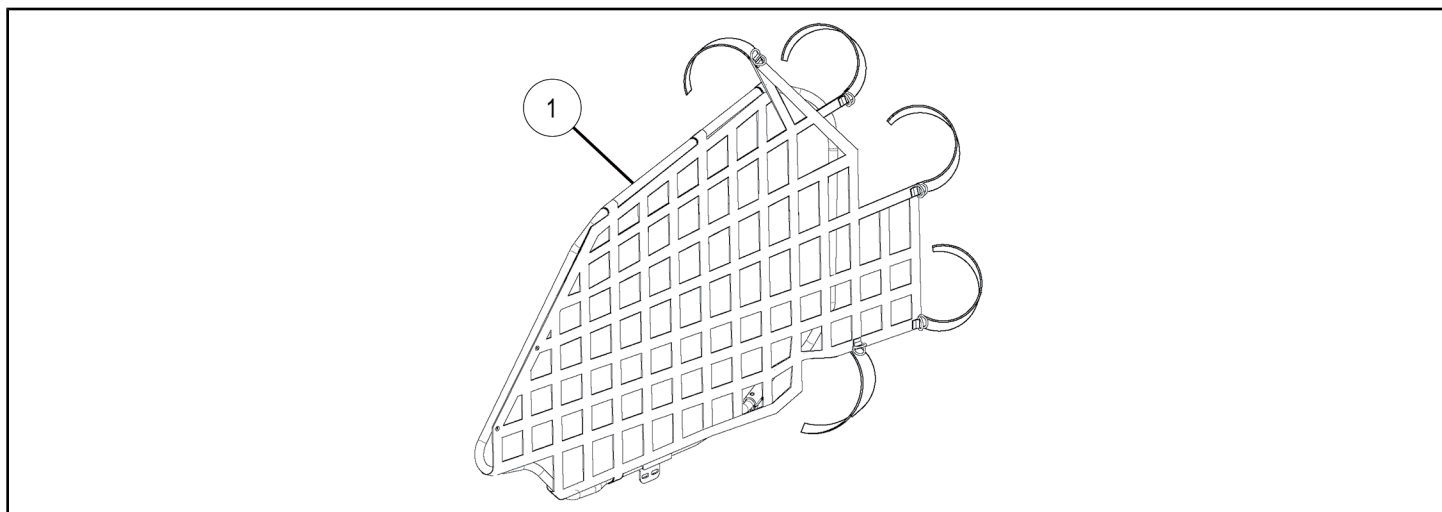

REF	QTY	PART DESCRIPTION	PART NUMBER
1	2	Upper Door Frame (LH and RH, one each)	2636087 (LH) 2636088 (RH)
2	1	Foam Tape, Self-Adhesive (not shown)	-
3	8	Bolt, Torx - M8 X 20 (not shown)	-
4	8	Nut, Flange - M8 (not shown)	-
5	8	Washer - M8 (not shown)	-
	1	Instructions	9926727

TOOLS REQUIRED

- Safety Glasses
- Torx Driver Set
- Metric Socket Set

IMPORTANT


Your UPPER DOOR NET KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME



Approximately 20 minutes

INSTALLATION INSTRUCTIONS


1. Place vehicle in "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove outer door panel (A) from each door by removing six screws (four screws shown (B), two additional screws at forward end of door not shown). Retain screws for reuse.

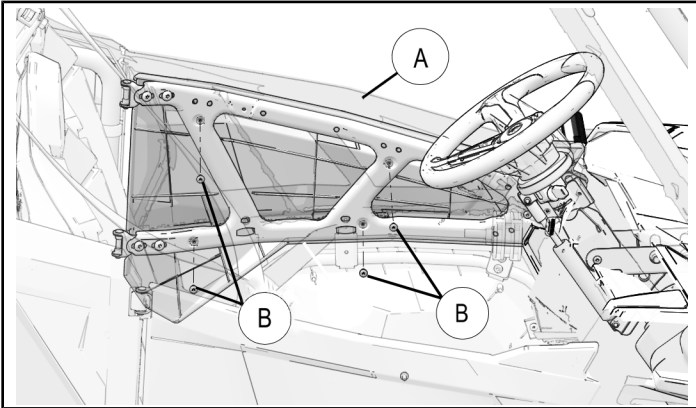

3. Loosely install upper door frame ① to each door using bolts ③, washers ⑤, and nuts ④ as shown.

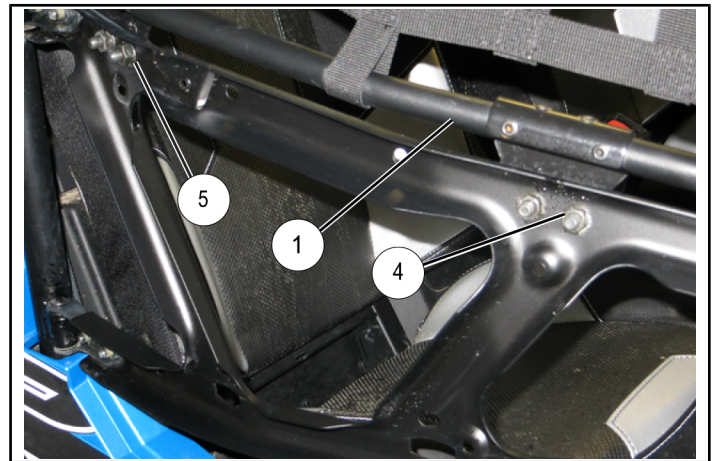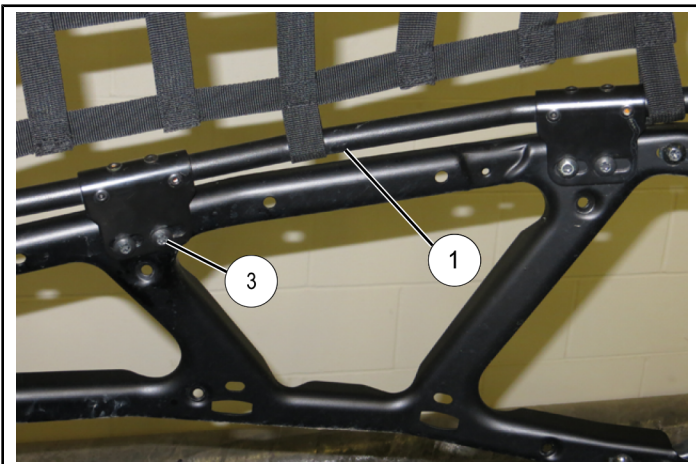

4. Close door and adjust upper door frame ① as required. Tighten bolts ③.
5. Attach straps (C) to ROPS using D-rings at five places as shown.

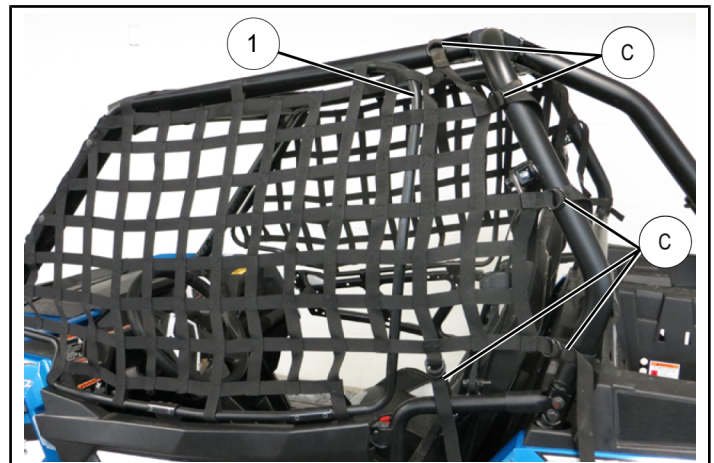

6. Open door to ensure straps do not restrict door operation. Adjust straps as required.
7. Optional: Cut and apply foam tape ② to upper door frames ① as desired.
8. Reinstall outer door panel removed in Step 2 with retained screws.