

REAR POLY PANEL KIT



P/N 2883757, 2884147


APPLICATION

Verify accessory fitment at www.polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

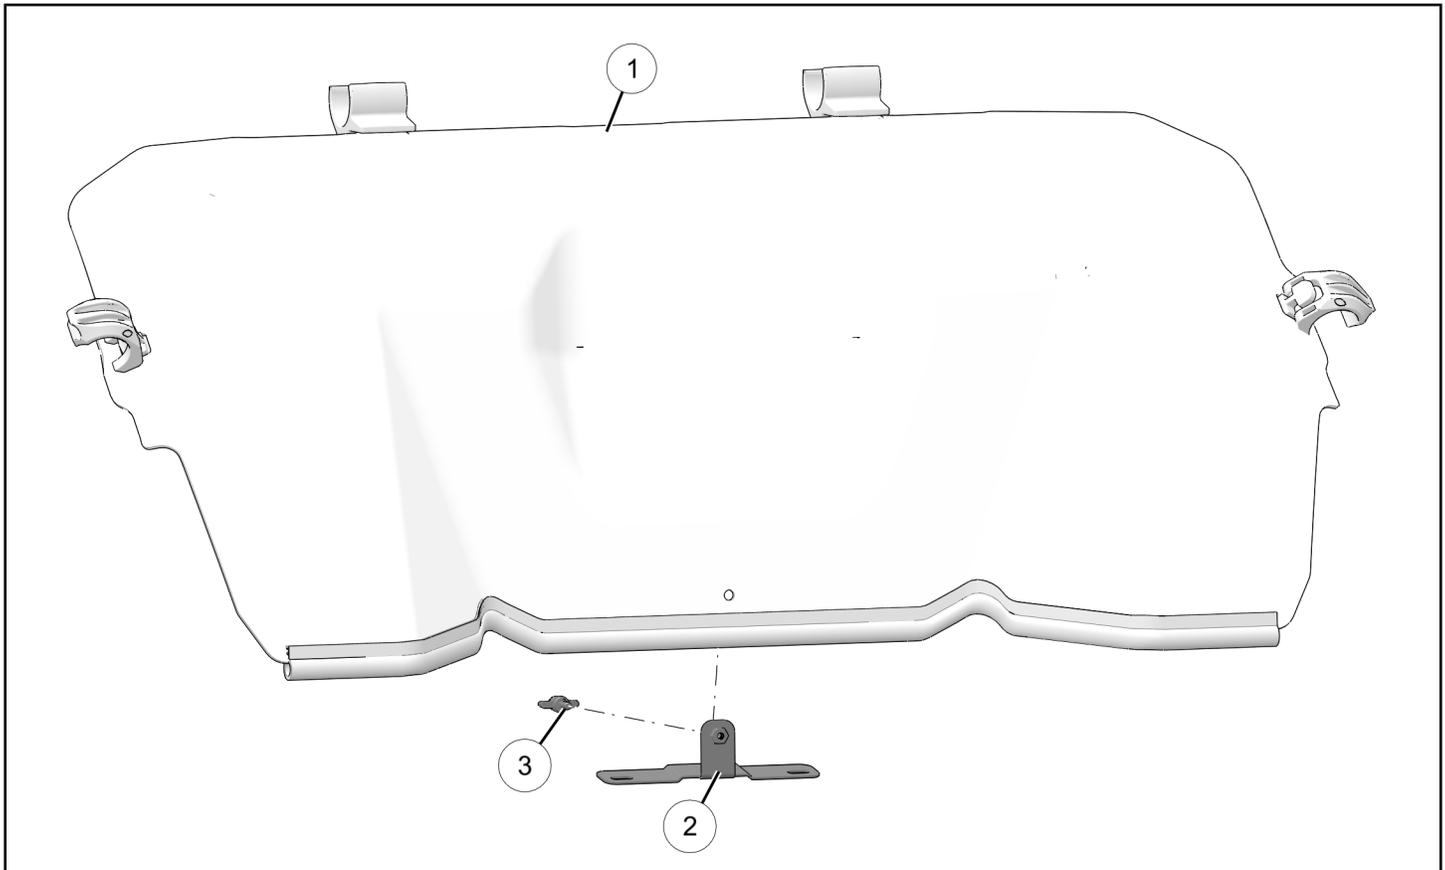

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Assembly–Rear Panel	n/a
2	1	Bracket–Center, Rear Panel	n/a
3	1	Knob–M6 x 1.0 mm x 15 mm	7521155

TOOLS REQUIRED

- Safety Glasses
- Screwdriver Set, Torx®
- Socket Set, Torx® Bit
- Torque Wrench

IMPORTANT

Your Rear Poly Panel Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL

1. Shift vehicle transmission into PARK. Turn key to OFF position and remove from vehicle.
2. Note hazard label, located on left-rear of rear panel. Ensure intake screens are clear of debris during each pre-ride check.

⚠ IMPORTANT


Keep intake screens clear of snow, dust and mud build-up

ACCESSORY INSTALLATION

NOTE

P/N 2883757 (two passenger vehicles) shown; P/N 2883147 (four passenger vehicles) similar.


1. Remove and retain two body panel fasteners, located between seats.

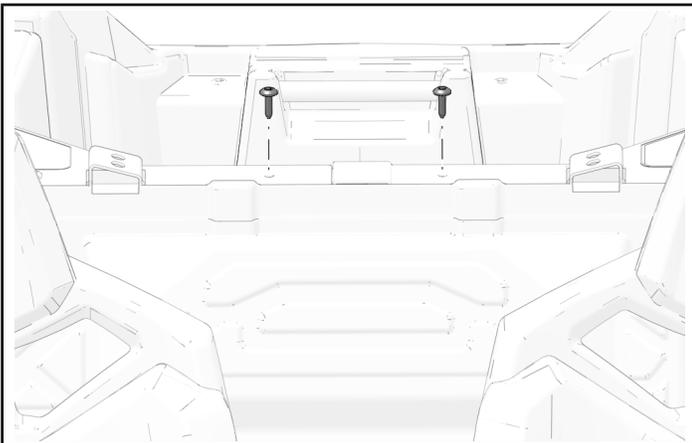

2. Install rear panel bracket (2) with two retained fasteners. Ensure vertical part of bracket is facing rearward.

TORQUE


Body Fasteners:
89 in-lbs (10 N·m)

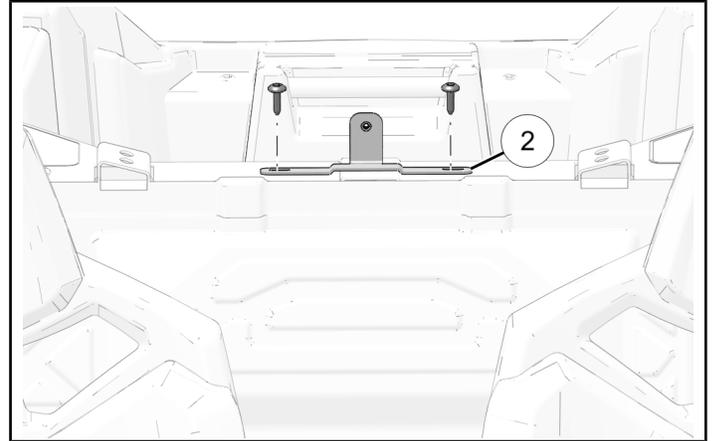


3. Maneuver rear panel into cab and behind headrests.

TIP


Use extra caution during installation if other accessories are installed.

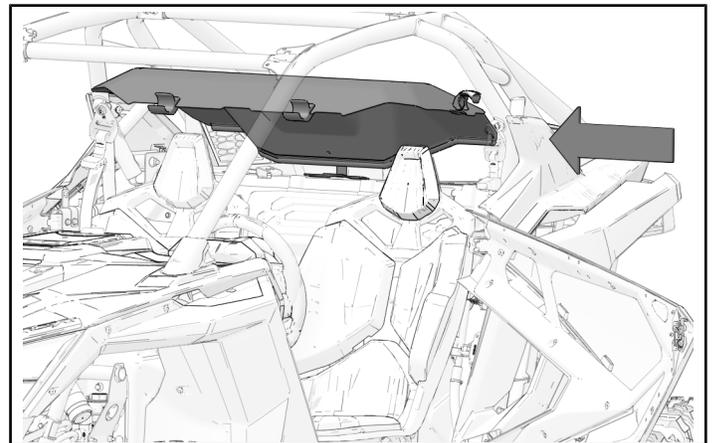


4. Carefully, position rear panel so that side clamps rest on vertical ROPS.

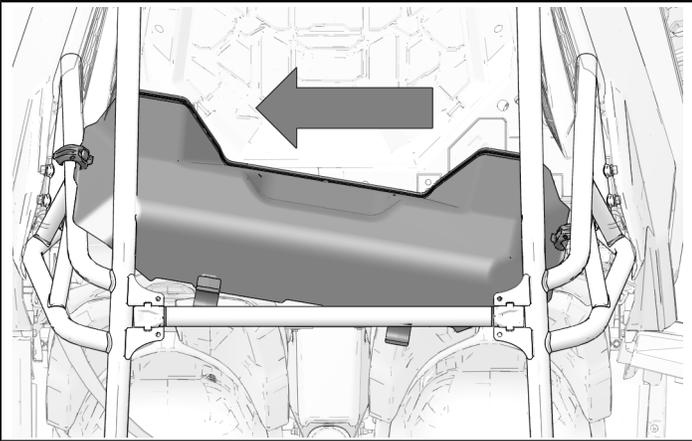


7. Press top clamps upward to engage beneath horizontal tube.

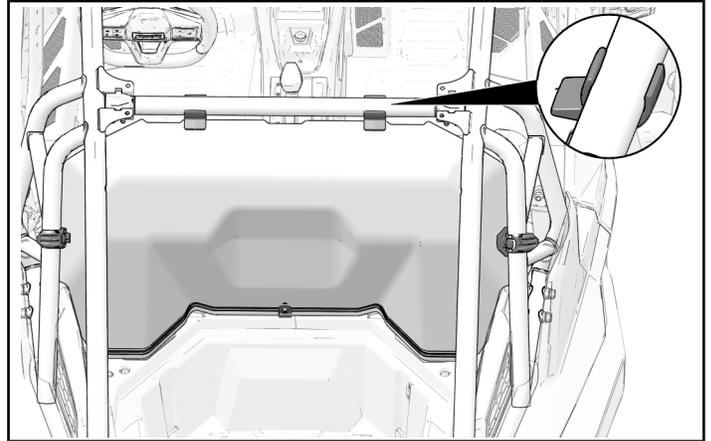


5. Compress seal to fit securely against body panel. Ensure mounting bracket is outside of rear panel.

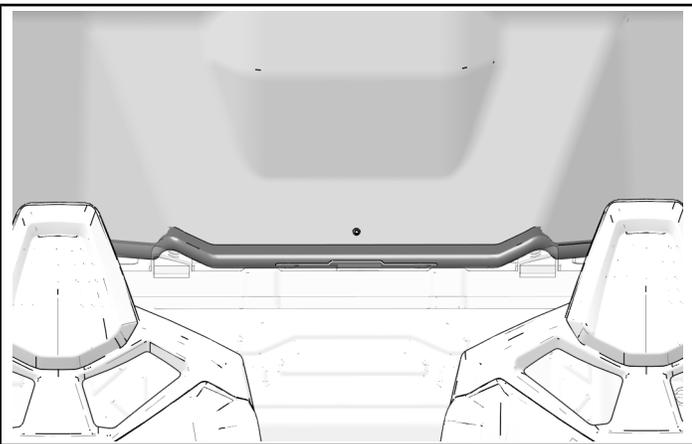

8. Secure rear panel to bracket with knob fastener ③.

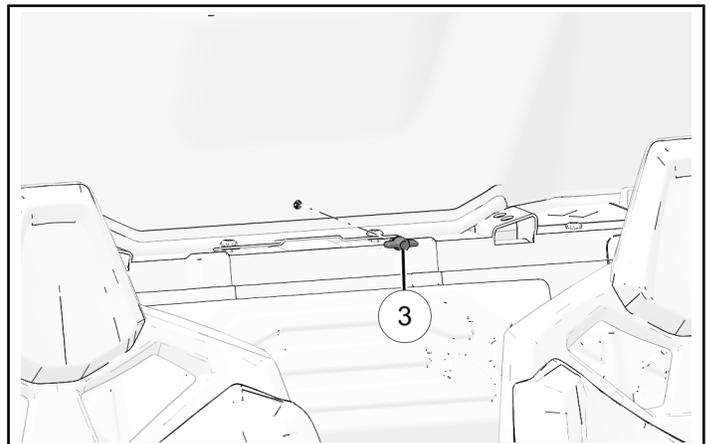

6. Press side clamps downward to engage on top of vertical tubes.

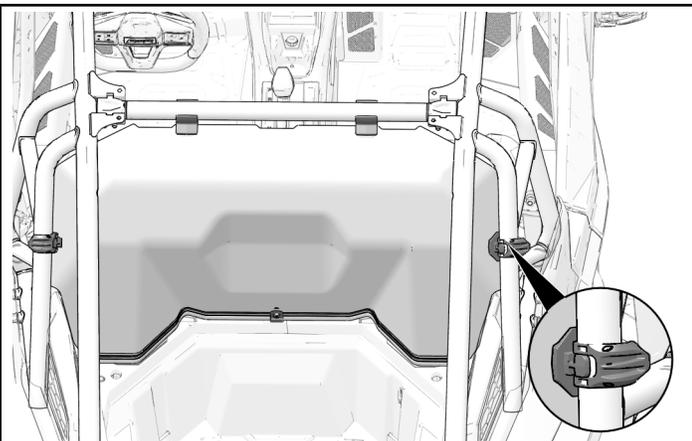

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

