

DOOR BAG KIT



P/N 2884304


APPLICATION

Verify accessory fitment at [Polaris.com](https://www.polaris.com).

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

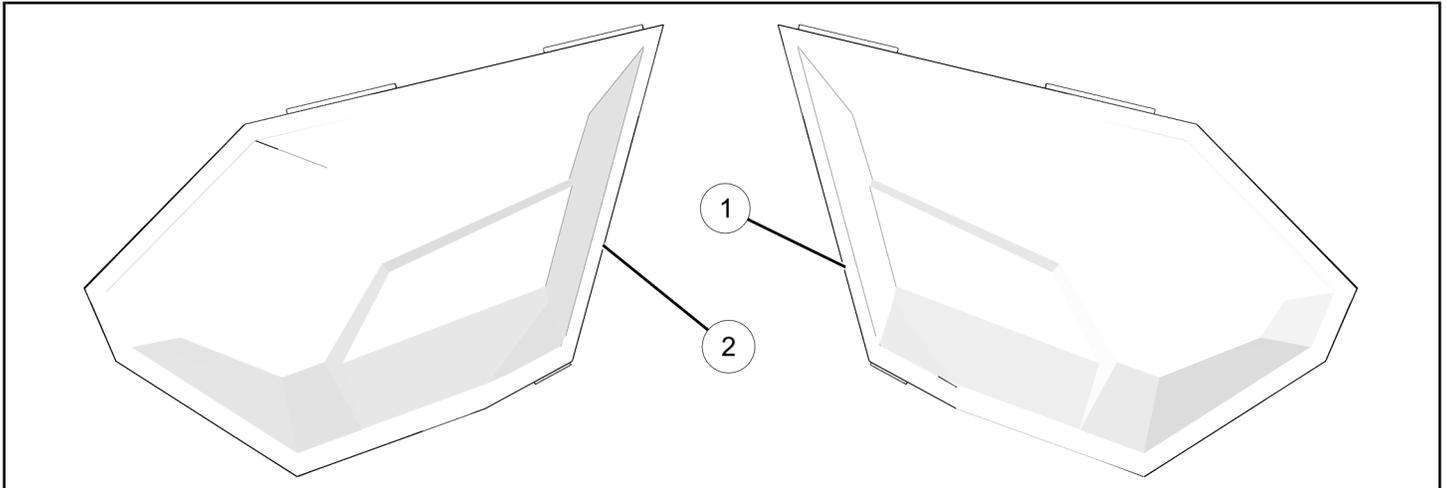

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Bag-Door, Left-Hand	2637694
2	1	Bag-Door, Right-Hand	2637695

TOOLS REQUIRED

- Safety Glasses
- Screwdriver Set, Torx®
- Socket Set, Torx® Bit
- Torque Wrench

IMPORTANT

Your Door Bag Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

NOTE

Two installers are recommended for this installation. Door panel removal instructions are provided as an option for easier installation.


VEHICLE PREPARATION

GENERAL


1. Shift vehicle transmission into PARK. Turn key to OFF position and remove from vehicle.

DOOR PANEL REMOVAL (OPTIONAL)

1. Remove and retain eleven door panel fasteners.

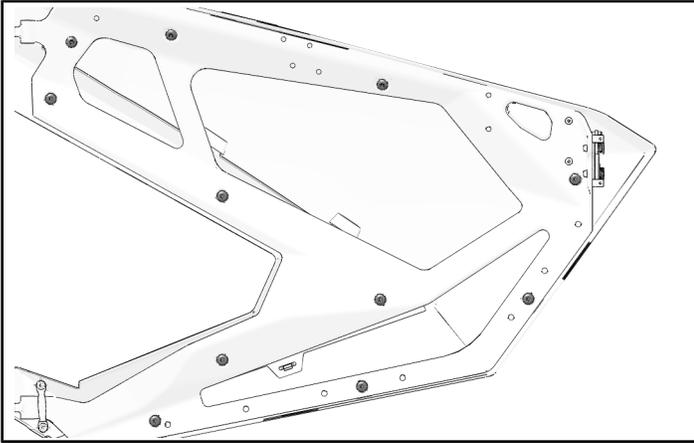


2. Remove door panel from door and carefully set aside.

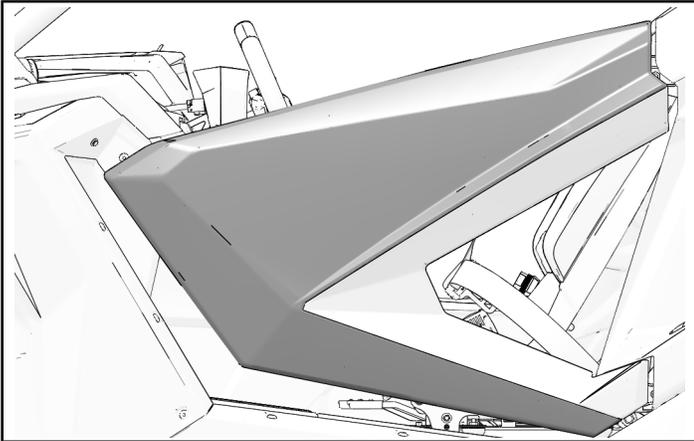


ACCESSORY INSTALLATION


1. Identify four mounting locations for door bag.

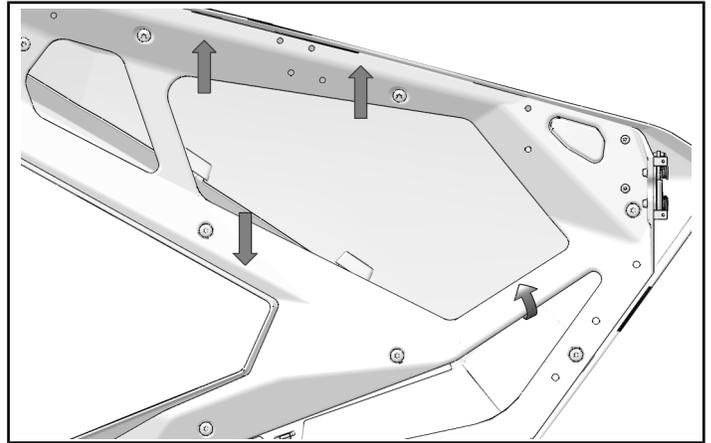


2. Align top of door bag with top of door structure.

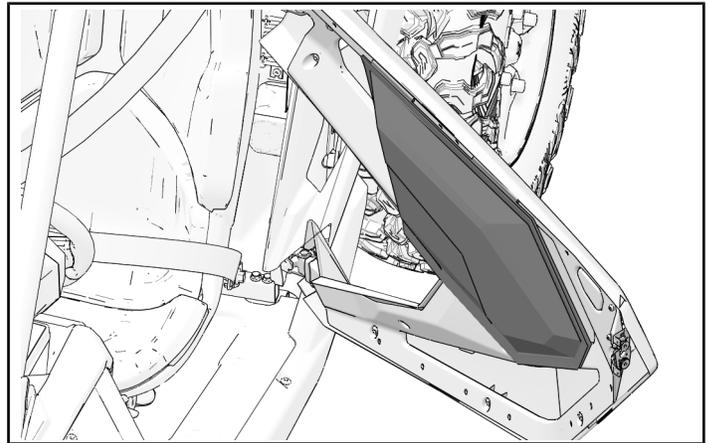

3. Carefully, but forcefully, pull back door panel and hook door bag onto door frame at two locations. Door bag hooks fit between door panel and door frame.

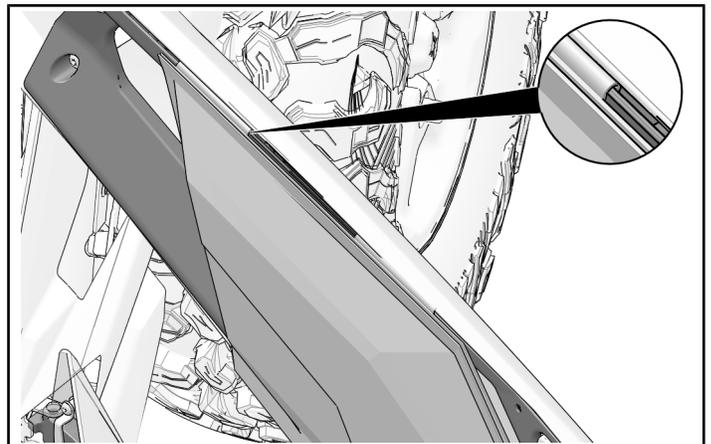


4. Hook bottom of door bag to bottom of door frame.

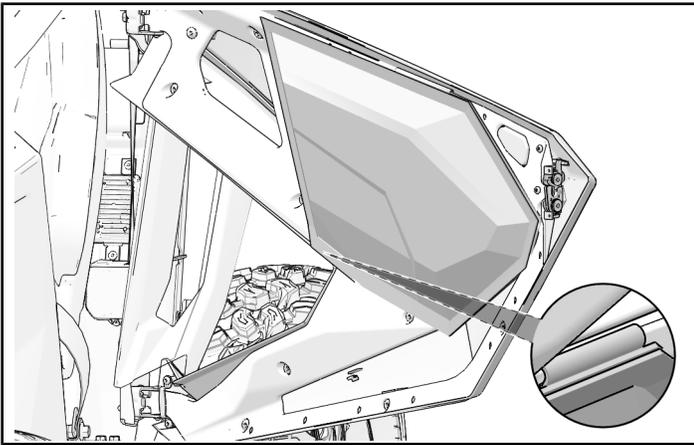

5. Wrap hook-and-loop fastener around door frame to secure front of bag.

TIP


Top mounting locations may need to be adjusted to allow hook-and-loop fastener to fully wrap around door frame. Fitment should be tight.

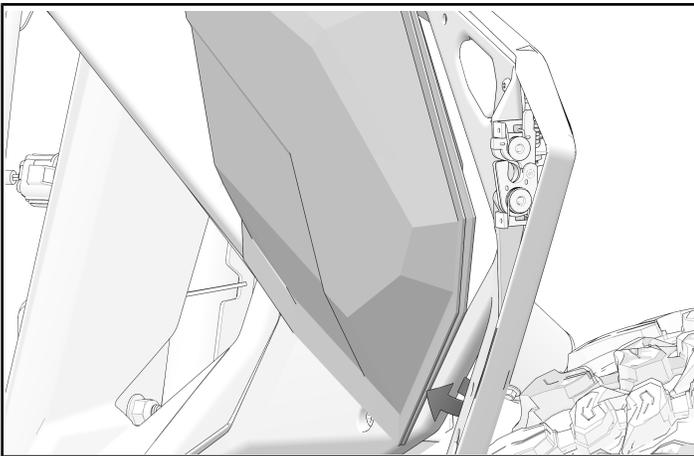

VEHICLE REASSEMBLY

DOOR PANEL INSTALLATION


1. Align door panel with door frame.

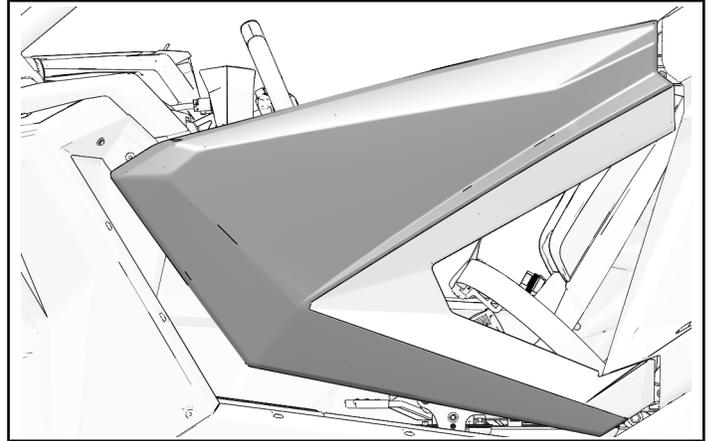

2. From inside of door, install door panel with eleven door panel fasteners.

TORQUE

Door Panel Fasteners:
35 in-lbs (4 N·m)

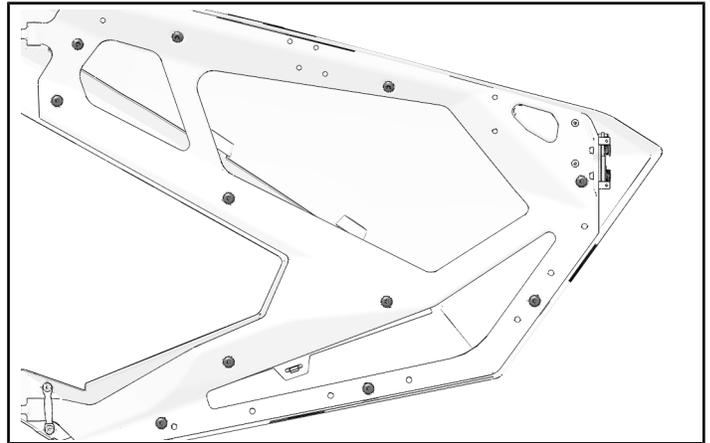

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

