

# EXTERIOR ACCENT KIT



SLINGSHOT

P/N 2881829-XXX

## APPLICATION

Slingshot

Verify accessory fitment at [polarisslingshot.com/](http://polarisslingshot.com/).

## BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## DISCLAIMER ACCESSORY WEIGHT

When adding accessories, equipment, passengers and luggage to your vehicle, do not exceed the total weight capacity of the vehicle or of the front or rear axle (GVWR or GAWR as indicated on the Safety Compliance Certification label). Ask an authorized dealer for specific weight information if you need assistance. It is the owner's responsibility to use the Polaris Slingshot Accessories website as a tool for limiting the amount of accessories, based on maximum allowable vehicle weight requirements. It may be a violation of the Clean Air Act or the NHTSA regulations to disregard these requirements. For a complete listing of the accessories that are available for your vehicle, please contact your authorized dealer or visit the online store web site:

Web Address (United States): <http://www.polaris.com/en-us/slingshot/shop/accessories>.

## KIT CONTENTS

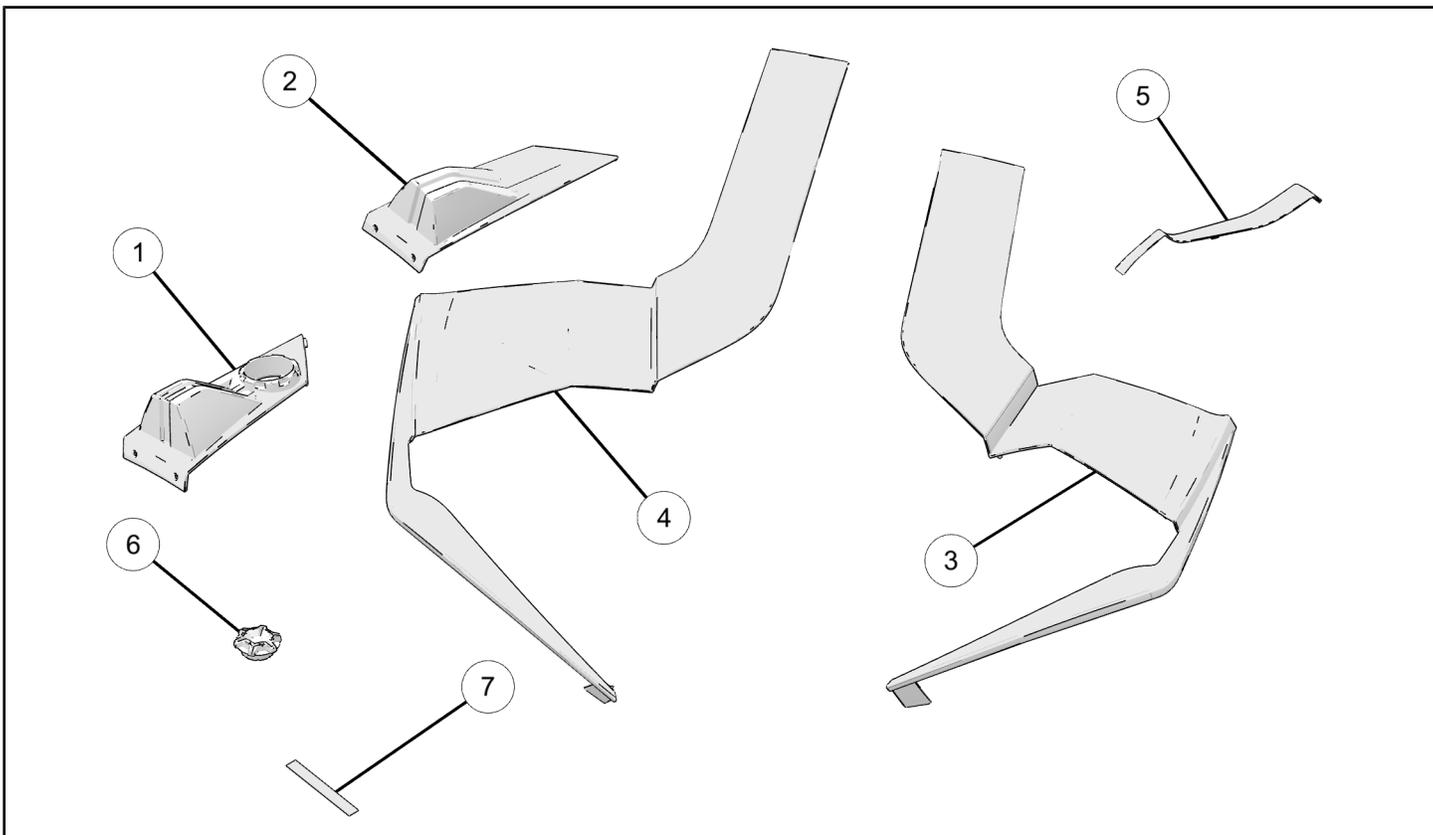

## NOTE

XXX = Slingshot® color code (For example: 070 = Black)

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Rear Deck Hump, LH	5453411-XXX
2	1	Rear Deck Hump, RH	5453412-XXX
3	1	Hood Accent, LH	5453708-XXX
4	1	Hood Accent, RH	5453709-XXX
5	1	Upper Trim Channel	5453853-XXX
6	1	Gas Cap	2521278-XXX
7	10	Tape, 3M	8360177
	1	Instructions	9927583

## TOOLS REQUIRED

- Safety Glasses
- Heat Gun (or equivalent)
- Hex Key Set, Metric
- Pliers, Slip Joint
- Screwdriver, Slotted
- Socket Set, Torx® Bit

## CONSUMABLES REQUIRED

- Adhesive Remover (Goo Gone® or 3M™ Citrus Base)
- Gloves, Chemical Resistant
- Solvent Wipe (99% Isopropyl Alcohol)

## IMPORTANT


Your Exterior Accent Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS


### REMOVAL OF REAR DECK HUMP PANEL

1. Put transmission in “NEUTRAL” and turn key to “OFF” position. Remove key from vehicle. Apply parking brake.


2. Start with right rear deck hump panel. Remove and retain two screws (A) from front of panel (B).

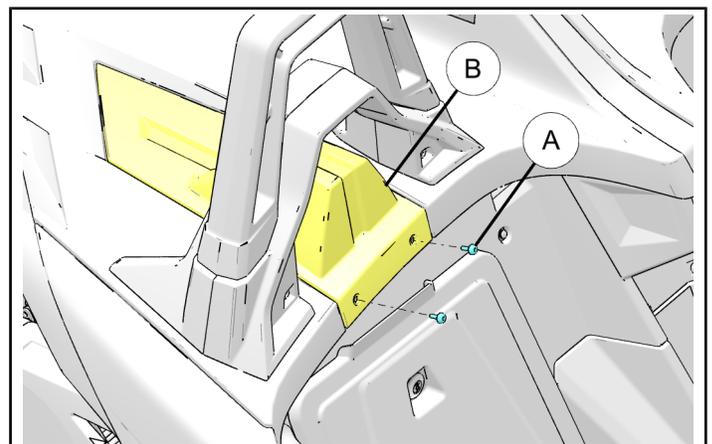

- Carefully pull RH panel **B** up, starting from front and working back until entire panel is removed.

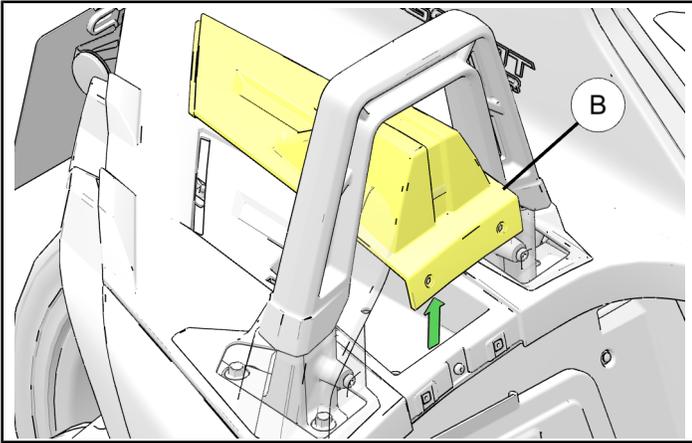


- Remove gas cap and repeat Step 2 on left side rear deck hump panel.
- Carefully remove large nut **C** surrounding gas filler neck **D**.

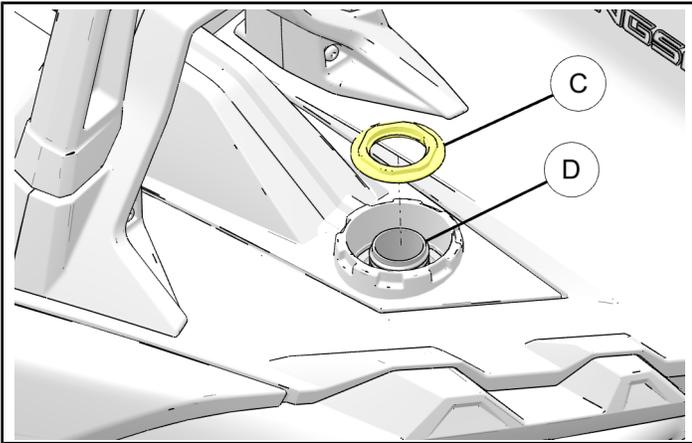

- Carefully pull LH panel up, starting from front and working back until entire panel is removed.


### REMOVAL OF UPPER TRIM ACCENT

- Carefully pull center upper trim accent panel **E** starting from front. Work all the way back until panel is completely removed.

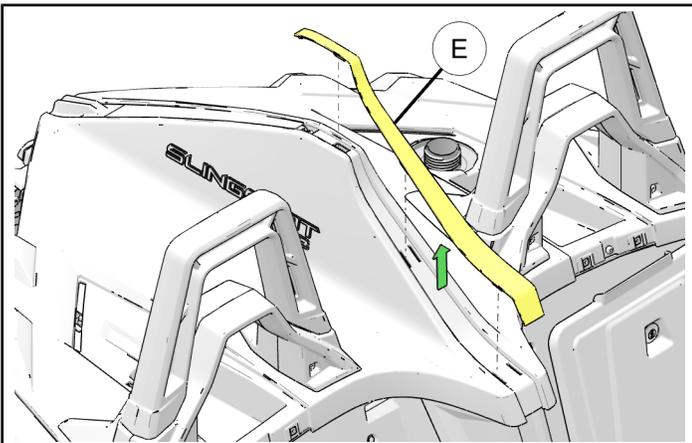


### REMOVAL OF HOOD ACCENT


- Ensure parking brake is engaged and open hood.
- Starting on right side, remove and retain twelve screws **F** as shown with circles from hood underside attached to hood accent panel.

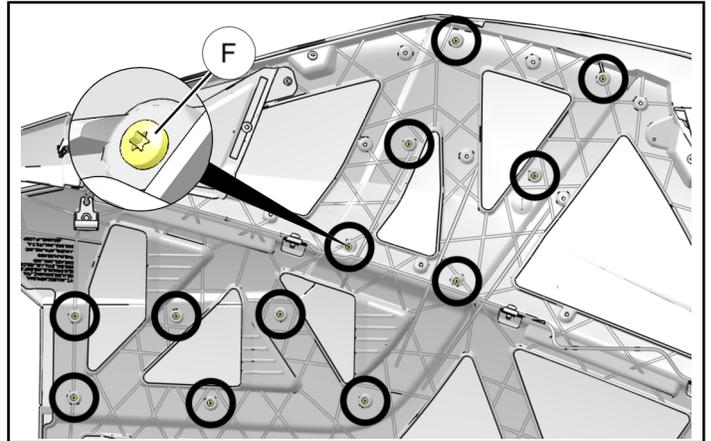

- Remove and retain one screw **G** from front tip of panel.

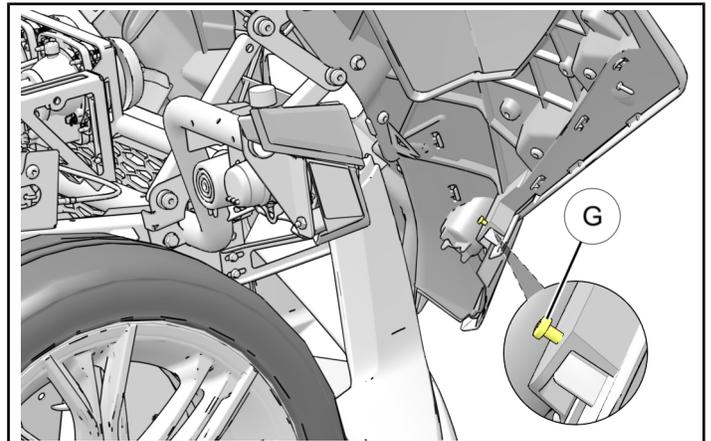

- Carefully start pulling panel **H** starting at vehicle dash.

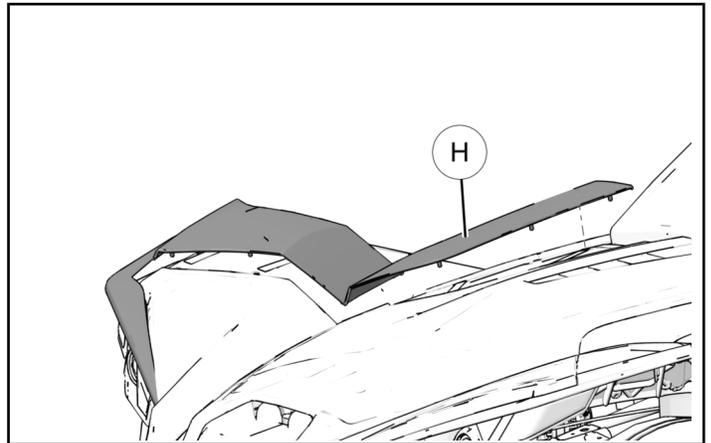


- When a tape patch ① is reached use a heat gun to help loosen adhesive before prying panel up. Use caution to not over heat paint or scratch hood.




- Starting on right side, install five tape patches ⑦ onto surface of hood. Using heat gun, slightly warm hood surface before applying tape patch.



- Finish removing panel ⑧ by carefully pulling component from its front tip working backward towards rear. Disengage three molded tabs (shown with arrow) above front light.

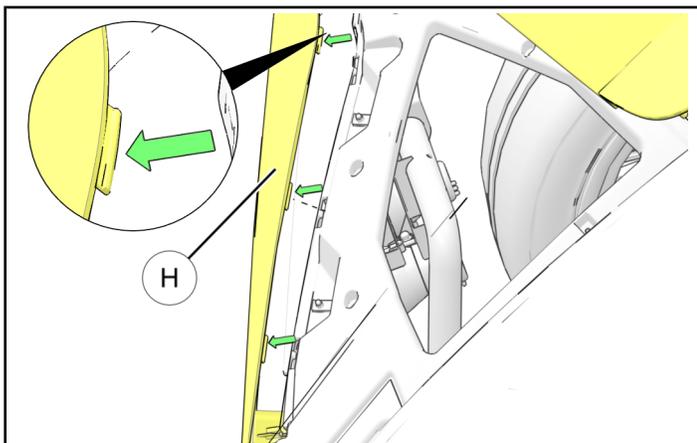

- Close and latch hood.
- Starting with front of right hood accent panel ④ align panel tabs with slots in vehicle and firmly press until tabs engage.

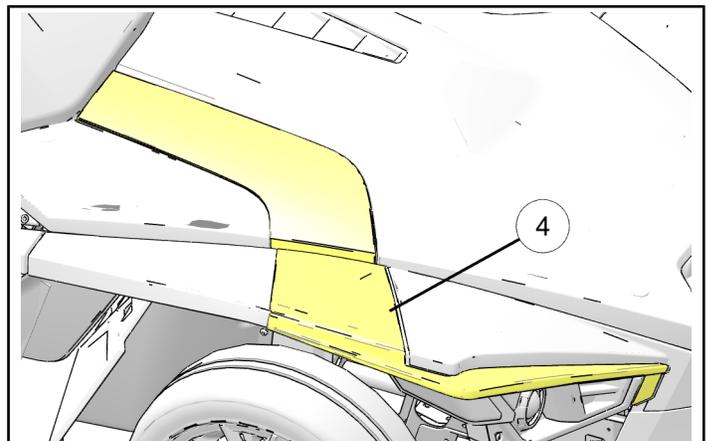

- Repeat Steps 2-6 for left side hood accent.

## HOOD ACCENT INSTALLATION

### ⚠ WARNING

Follow all chemical manufacturer instructions and safety precautions. Failure to follow all manufacturer instructions and precautions may result in severe injury or death.


- Clean any extra glue left by tape patches ① with adhesive remover and clean adhesion surface with solvent wipe.

### ⚠ WARNING

Isopropyl alcohol is hazardous to your health. See isopropyl alcohol packaging for proper handling instructions, including recommended personal protective equipment such as goggles and chemical resistant gloves.

### TORQUE

Hood Trim Screw ⑥: **36 in. lbs. (4 Nm)**

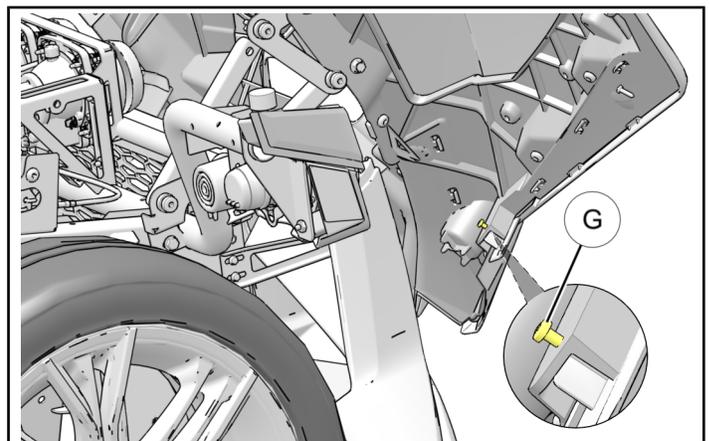

- Working from front to back lay panel ④ down. Use a heat gun to slightly warm panel surface before firmly pressing it on to each tape patch.
- Re-install screws ⑥ from bottom of hood. Removed in Step 2 (Section - Removal of Hood Accent). Torque screws to specification.


### TORQUE

Hood Trim Screw ⑥: 36 in. lbs. (4 Nm)

- Repeat Steps 2-6 for left hood accent panel ③.

### INSTALLATION OF UPPER TRIM ACCENT


- Starting with back of upper trim accent panel ⑤, insert accent tab into slot located on vehicle.

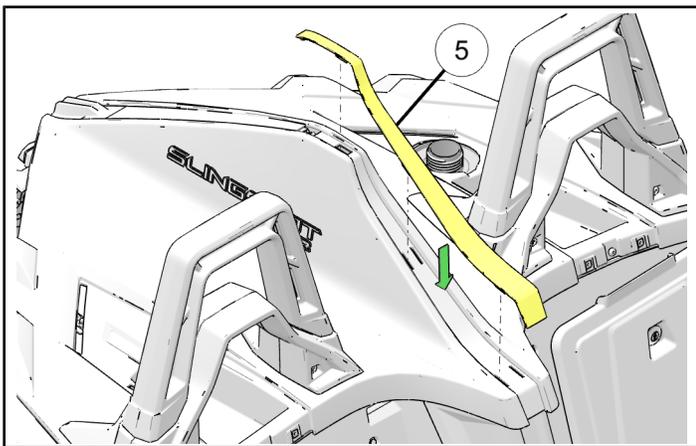

- Work from back towards front of vehicle, firmly press on trim ⑤. Ensure tabs engage.

### INSTALLATION OF REAR DECK HUMP PANEL


- Start with right rear deck hump panel. Work from back forward to engage all tabs to install the panel ②.

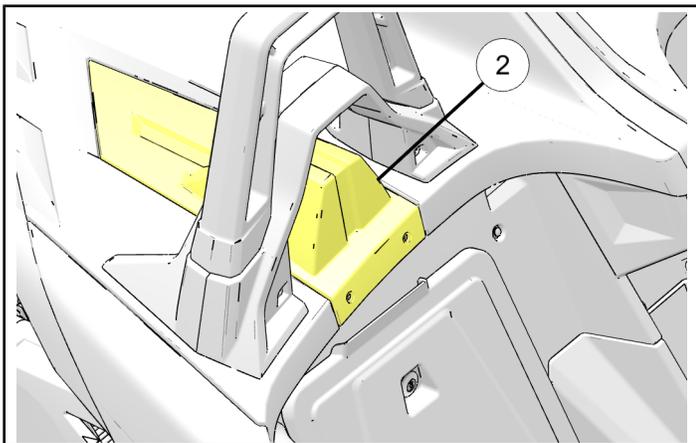


- Reinstall bolts ① at front of panel ②. Removed in Step 2 (Section - Removal of Rear Deck Hump Panel). Torque screws ① to specification.

### TORQUE

Deck Hump Panel Screw ①: 36 in. lbs. (4 Nm)

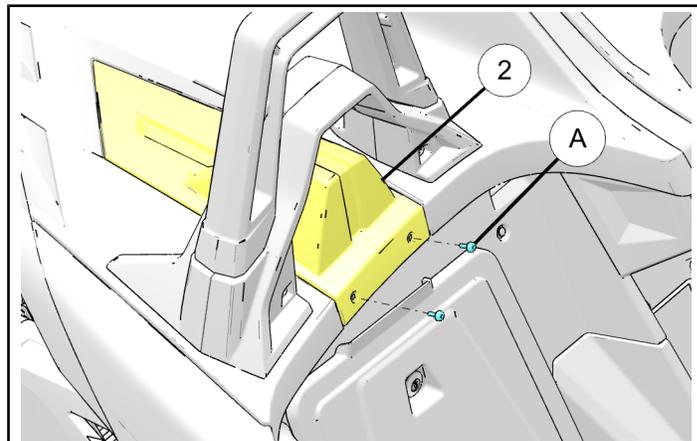

- Repeat Steps 1-2 to install left rear deck hump panel ①.
- Reinstall retained nut ③ around gas filler neck ④. Removed in Step 5 (Section - Removal of Rear Deck Hump Panel).
- Install Gas Cap ⑥.

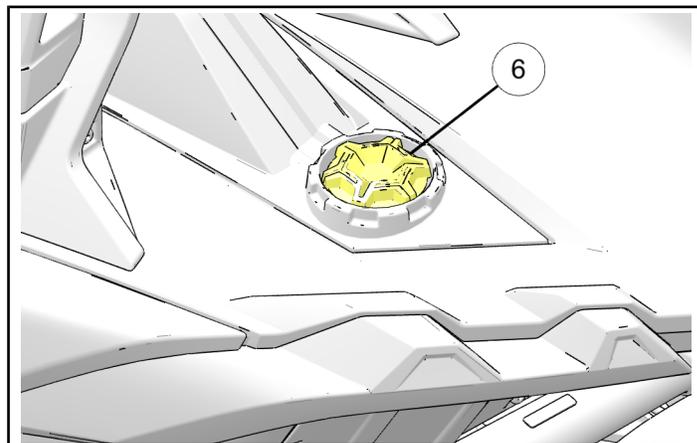

## FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

