

# INTERIOR PAINTED ACCENT KIT



SLINGSHOT

P/N 2882418

## APPLICATION

MY17 SL and Base Slingshot

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.


## DISCLAIMER ACCESSORY WEIGHT

When adding accessories, equipment, passengers and luggage to your vehicle, do not exceed the total weight capacity of the vehicle or of the front or rear axle (GVWR or GAWR as indicated on the Safety Compliance Certification label). Ask an authorized dealer for specific weight information if you need assistance. It is the owner's responsibility to use the Polaris Slingshot Accessories website as a tool for limiting the amount of accessories, based on maximum allowable vehicle weight requirements. It may be a violation of the Clean Air Act or the NHTSA regulations to disregard these requirements. For a complete listing of the accessories that are available for your vehicle, please contact your authorized dealer or visit the online store web site:

Web Address (United States): <http://www.polaris.com/en-us/slingshot/shop/accessories>.

## KIT CONTENTS

This Kit includes:

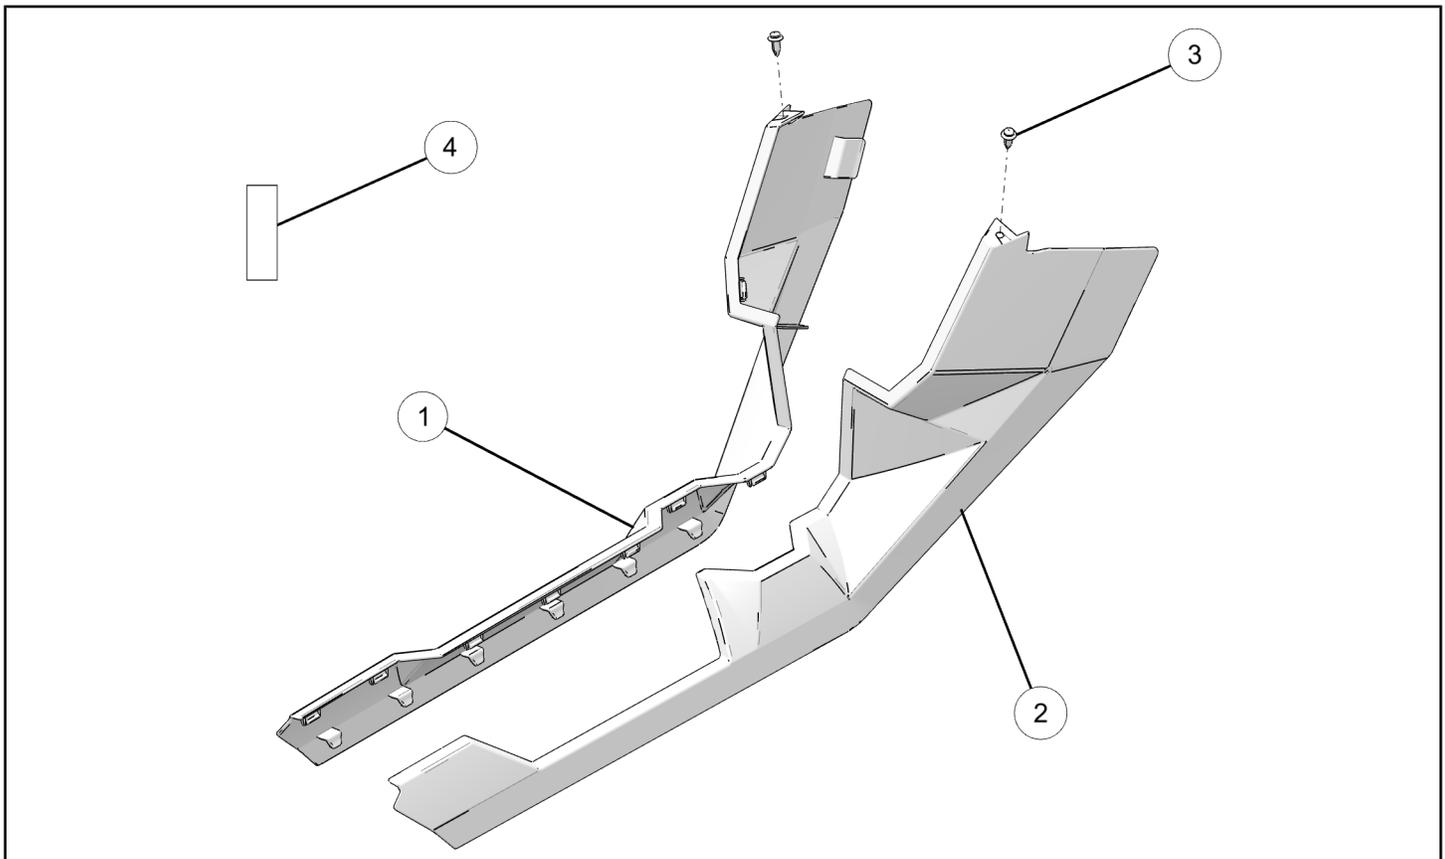

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	LH Trim, Center Console	5450036
2	1	RH Trim, Center Console	5450037

REF	QTY	PART DESCRIPTION	PART NUMBER
3	2	Tuflok Rivet, 0.315-0.325 X 0.787	7661855
4	6	Tape, 75mm Long, VHB	8360143
	1	Instructions	9927682

## TOOLS REQUIRED

- Safety Glasses
- Flat Head Screwdriver

## IMPORTANT



Your INTERIOR PAINTED ACCENT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME


Approximately 20 minutes

## INSTALLATION INSTRUCTIONS


1. Put the transmission in "NEUTRAL" and turn the key to the "OFF" position. Remove the key from vehicle. Apply the parking brake.
2. Remove two trim pieces (A) and (B) at the center of the dash by carefully grabbing them at the front and pulling up as shown.
3. Using a flat head screw driver remove two plastic rivets (B) located at the top center of the interior LH trim piece (C) and RH trim piece (D). Place head of the screw driver under the center of the rivet and pry up.

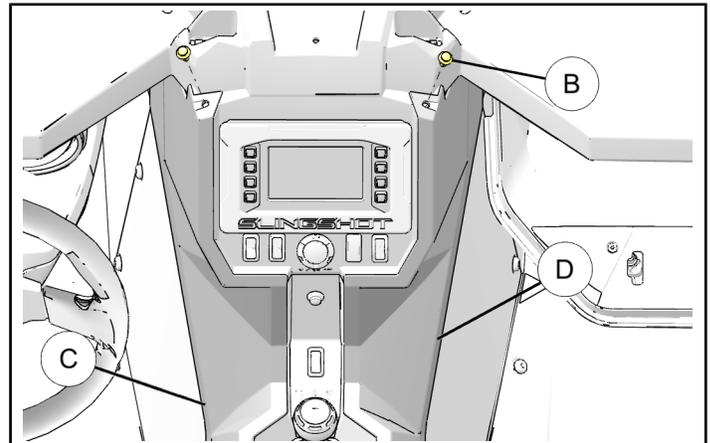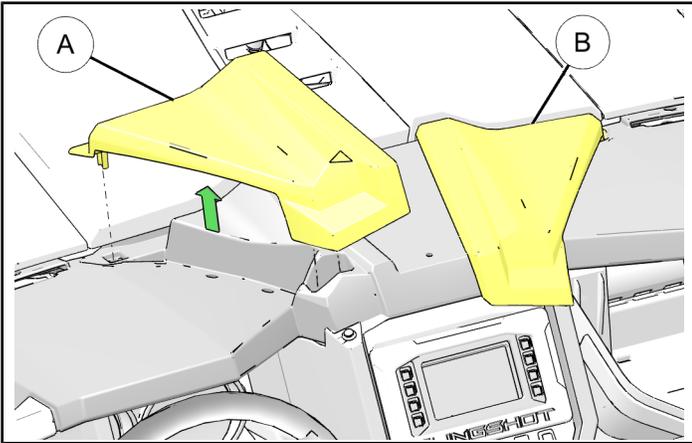

- With both rivets out, remove LH trim piece (C) and RH trim piece (D) by starting at the top front and working back and removing trim mounting tabs from slots on center console as shown.

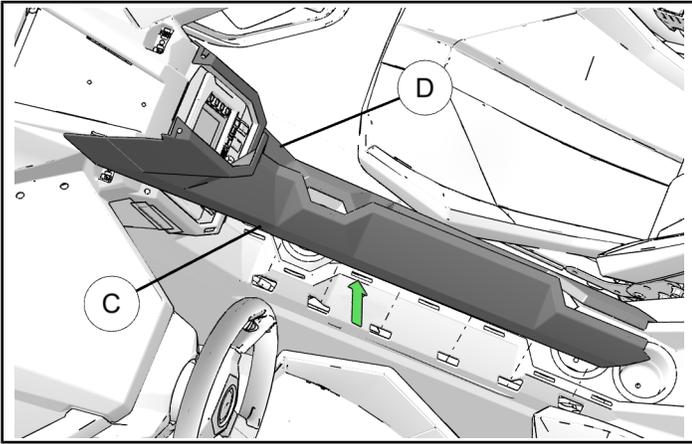


- Clean the surface of new trim pieces ① ② and install double sided tape ④ to bottom of surface as shown. Remove the backer before installing trim pieces.

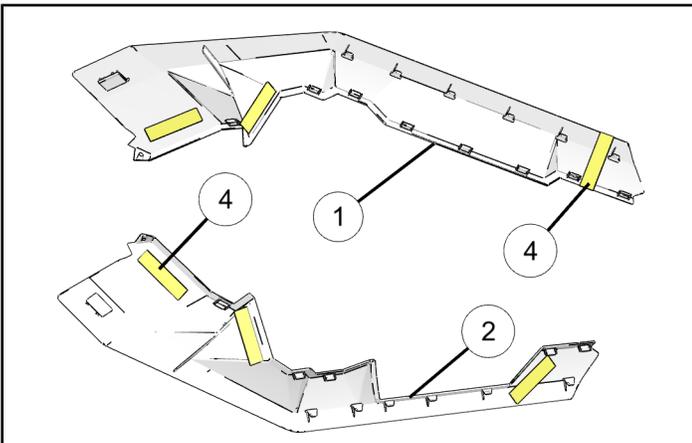


- Starting at the back near the cup holders, install the new LH trim piece ① and RH trim piece ②. Make sure trim mounting tabs align with slots. Work all the way up to dash. Firmly push till trim pieces snaps onto center console.

#### NOTE

Press on tape areas to ensure strong adhesion.

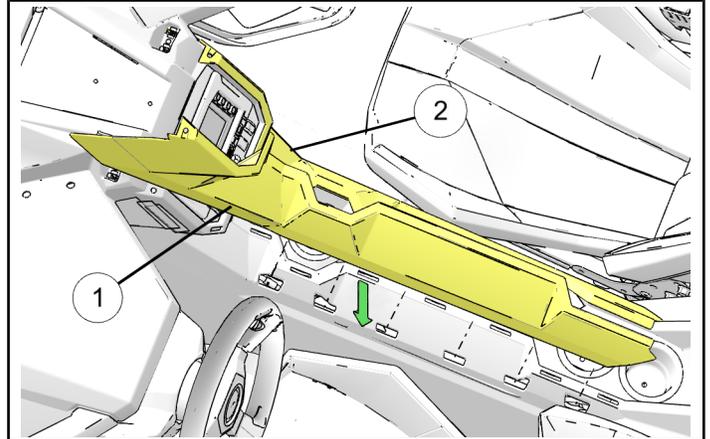

- Install two new rivets ③ on the top center of the interior LH trim piece ① and RH trim piece ②. Firmly push rivets to ensure they seat.

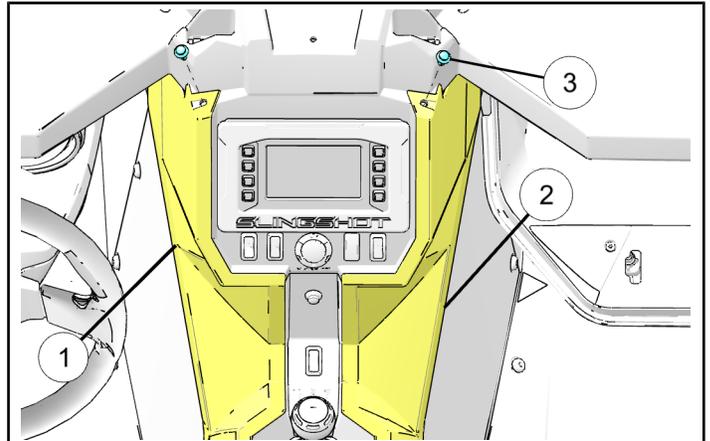

- Reinstall dash trim pieces (A) and (B).

