

# FULL VEHICLE COVER KIT



**SLINGSHOT**

**P/N 2880658**

## APPLICATION

SLINGSHOT MODELS

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for in package. Please retain these installation instructions for future reference and parts ordering information.



## INSTALLATION VIDEO

There are three ways to access the installation video:

- Scan the QR Code with a mobile device.
- Click the QR Code if viewing the instruction as a PDF.
- Go to YouTube and search for SLINGSHOT TRAILER COVER INSTALLATION.

## KIT CONTENTS

QUANTITY	PART DESCRIPTION	PART NUMBER
1	Slingshot Full Vehicle Cover	2686253
1	Instructions	9961078

## APPROXIMATE ASSEMBLY TIME

5–10 min

## IMPORTANT


Your SLINGSHOT FULL VEHICLE COVER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

1. Put vehicle in "REVERSE" and turn the key to "OFF" position. Remove the key from the vehicle. Apply the parking brake.
2. Drape the cover ① over the vehicle. Note that the SLINGSHOT logo will be on the hood of the vehicle.
  - a. Begin by carefully fitting the cover over the driver and passenger side mirrors.
  - b. Pull the cover over the front of the vehicle hood.
  - c. Pull the cover over the rear of the vehicle. The Fuel Door access panel on the cover should match up with the fuel door on the vehicle.

### TIP

This is intended to allow you to fuel the vehicle while it is on a trailer without having to remove the cover.

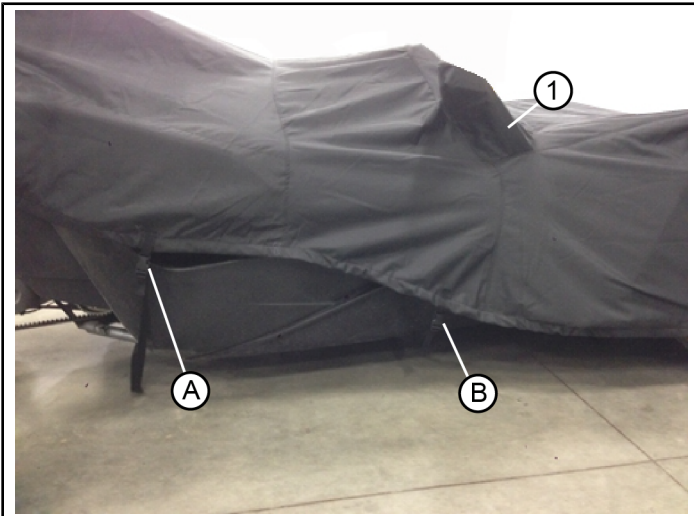

3. For the two center straps: Attach the male buckle of each center strap (A and B) to the female buckle sewn to the cover as shown in figure. Feed the webbing underneath the vehicle and connect each of the matching buckles on the opposite side.

### TIP


Loose the buckles on the strap (B) and toss the webbing under the machine.

4. Pull the bottom edge of the cover down as far as possible, all the way around the vehicle.

### NOTE

Do not try to fit the cover over the license plate.

5. At the rear of the vehicle, open the zippered pocket and attach the buckles (C) together. Pull the webbing on each side, evenly, until the webbing is snug as shown in figure. Do not tighten the new strap, yet.
6. Along the entire perimeter of the cover ①, pull the fabric down to cover the tires (D) as much as possible and remove all excess fabric and wrinkles.

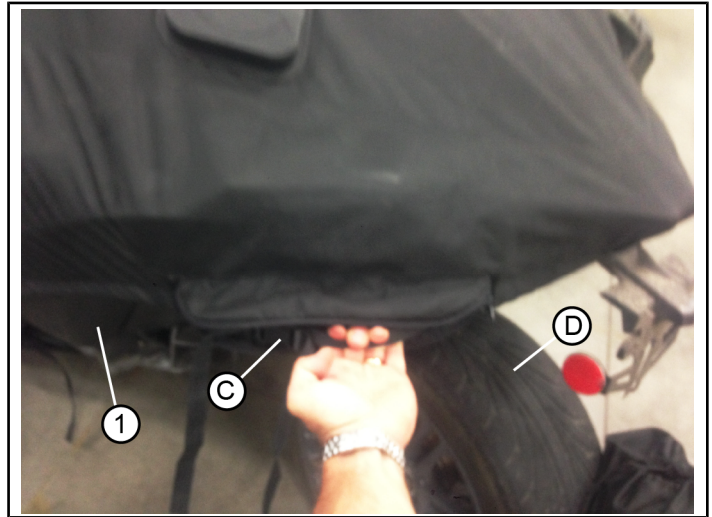

7. Tighten the webbing at the rear of the cover ① to take up any excess slack. Pull firmly, alternating sides to keep the buckle on center, pull the buckle out away from the machine to help set the webbing. The webbing should be tight around the base of the vehicle.





8. If necessary, re-tension the center straps.
9. The fuel door cover access panel allows access to the fuel door.

**⚠ WARNING**

Ensure the cover is adequately tensioned prior to trailering the vehicle.  
Remove any accessories that interfere with the cover and its ability to cinch down around the base of the tires.  
Inspect that there are no sharp objects that will push against the cover.  
Never trailer the covered vehicle while traveling in excess of the speed limit.  
Do not over tension the cover.  
Only trailer the vehicle with the cover installed facing forward.