

# VELOCITY SEAT KIT

P/N 2881828-XXX, 2882329-XXX, 2883283-XXX,  
2883863-XXX



## APPLICATION


All Slingshot Platforms

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

This Kit includes:

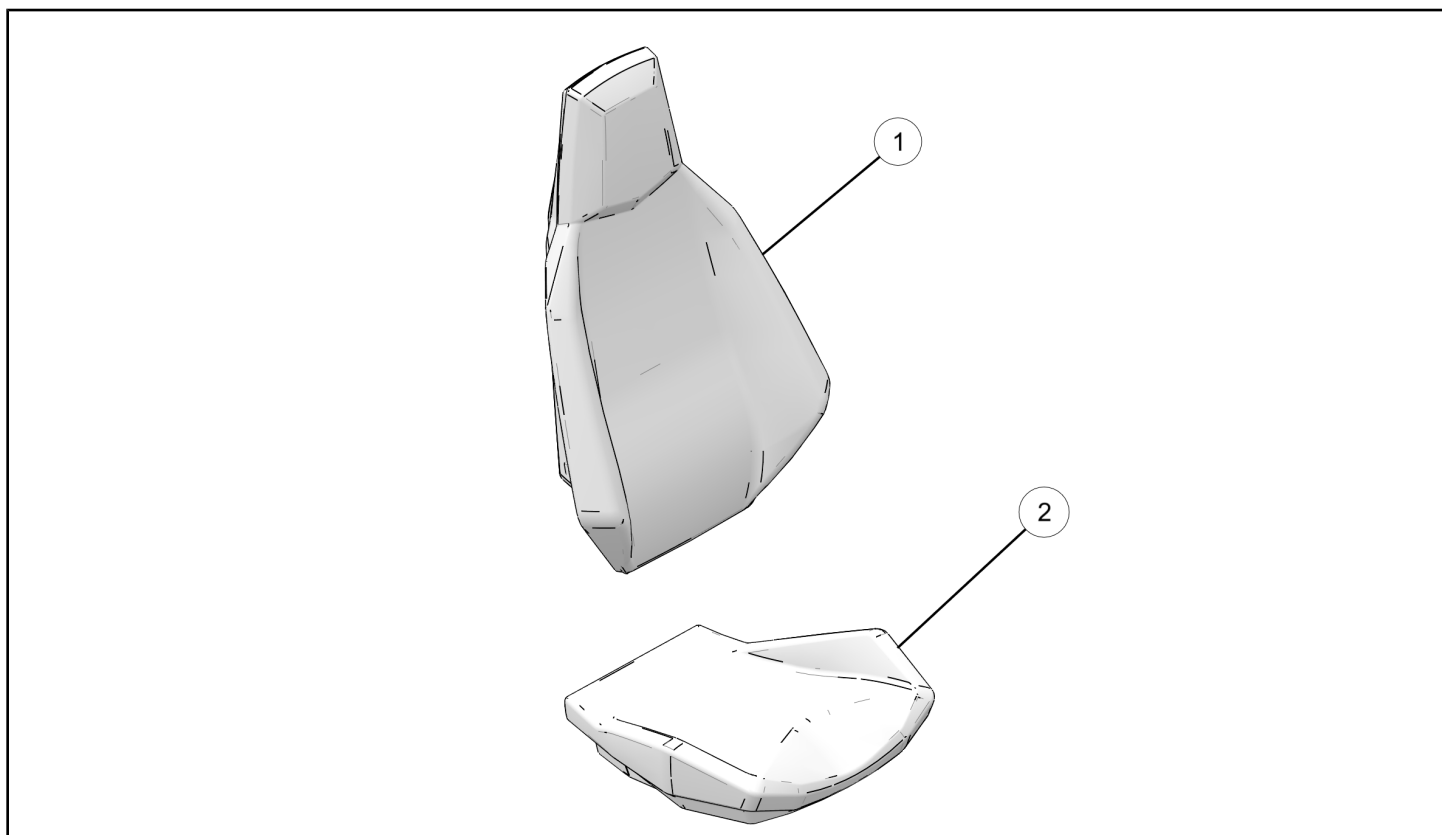

### NOTE

XXX = Slingshot® Color Code (For Example 070 = Black)

REF	QTY	PART DESCRIPTION	PART NUMBER
1	2	Assembly, Seat, Back, Comfort (Kit 2881828-XXX)	2687309-XXX
		Assembly, Seat, Back, Performance (Kit 2882329-XXX)	2687333-XXX
		Assembly, Seat, Back, Touring (Kit 2883283-XXX)	2688306-XXX
		Assembly, Seat, Back, Touring,(Canada), (Kit 2883863-XXX)	2688308-XXX
2	2	Assembly, Seat, Bottom, Comfort (Kit 2881828-XXX)	2687308-XXX
		Assembly, Seat, Bottom, Performance (Kit 2882329-XXX)	2687332-XXX
		Assembly, Seat, Bottom, Touring (Kit 2883283-XXX)	2688307-XXX
		Assembly, Seat, Bottom, (Canada), (Kit 2883863-XXX)	2688307-XXX

REF	QTY	PART DESCRIPTION	PART NUMBER
	1	Instructions	9927579

## TOOLS REQUIRED

- Safety Glasses
- Torque Wrench
- Socket Set, Metric

## IMPORTANT

Your Velocity Seat Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


## ASSEMBLY TIME

Approximately 60 minutes


## INSTALLATION INSTRUCTIONS

### REMOVAL


1. Put transmission in "NEUTRAL" and turn key to "OFF" position. Remove key from vehicle. Apply parking brake.
2. Start with driver side. Remove and retain two screws **A** located at front of bottom cushion **B**.

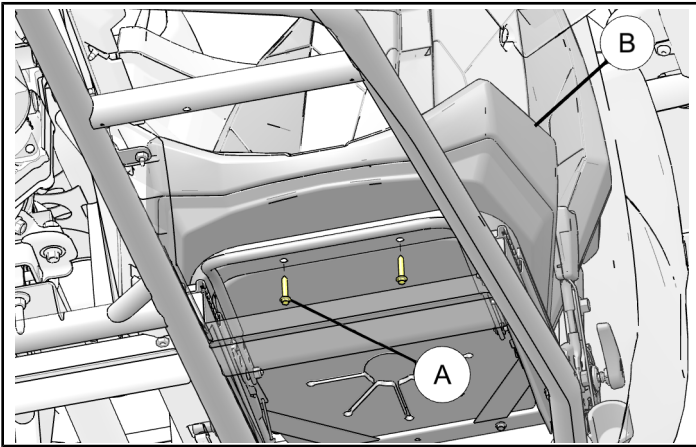

3. Position driver seat all the way forward and rotate top part of seat forward. Remove and retain two screws **A** located at back of bottom cushion.

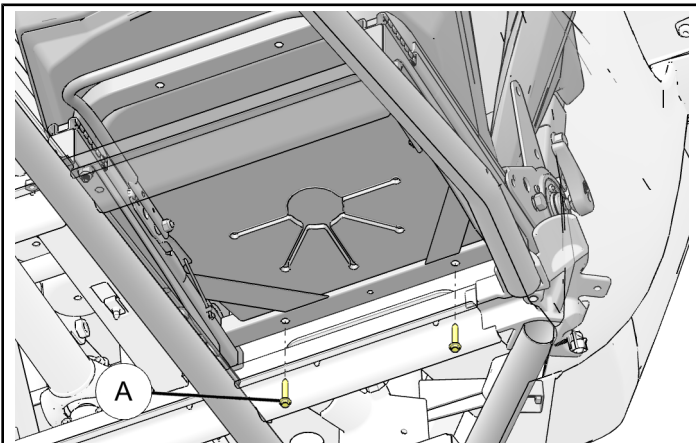

4. Remove and retain six screws **C** from upper cushion **D** of seat.

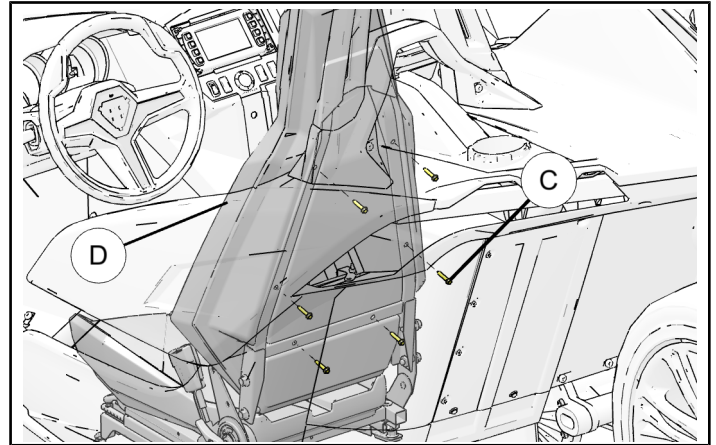


5. Remove seat cushions **B** and **D**.
6. Repeat Steps 2-5 for passenger side. Note passenger seat cannot slide.

## INSTALLATION

1. Start with driver side seat. Position top of seat in upright position. Install new bottom cushion ① by aligning with bracket and firmly pushing.
2. Install four retained screws ④ into bottom cushion ①, removed in **Step 2-3 (Section - Removal)**. Torque to specification.

### TORQUE


13 ft. lbs. (18 Nm)

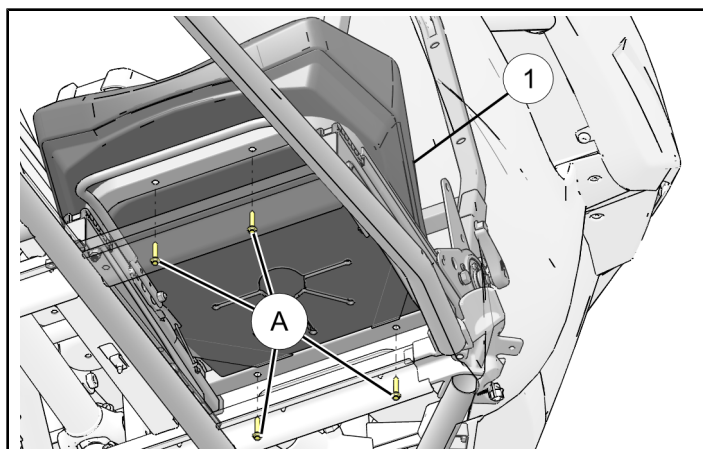

3. Position top of seat forward and install upper cushion ② by first sliding headrest on to bracket and then firmly pushing back.
4. Position top portion of seat forward and install six retained screws ⑤ into upper cushion ②, removed in **Step 4 (Section - Removal)**. Torque to specification.

### TORQUE

13 ft. lbs. (18 Nm)

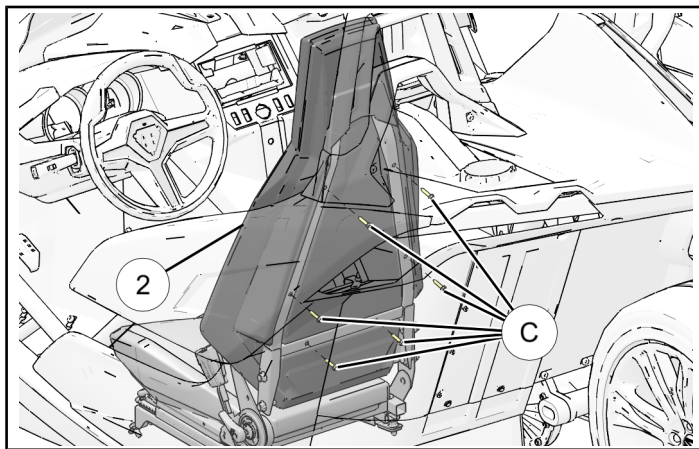

5. Repeat Steps 1-4 for passenger side.

## FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

### FEEDBACK FORM

