

# STAGE ONE CALIBRATION KIT



**SLINGSHOT**

P/N 2884126

## IMPORTANT

Due to the technical nature of this kit, Polaris® insists that this installation be performed by a certified Slingshot® technician.

## APPLICATION

Verify accessory fitment at [www.polarisslingshot.com](http://www.polarisslingshot.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	Label, Slingshot, Airbox	7194205
1	Calibration Card, 50 State, G4	-

## TOOLS REQUIRED

- Battery Maintainer or Charger
- Digital Wrench®

## CONSUMABLES REQUIRED

- Gloves, Chemical Resistant
- Solvent Wipe (99% Isopropyl Alcohol)

## IMPORTANT

Your Stage One Calibration Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

### VEHICLE PREPARATION

#### GENERAL


1. Shift vehicle transmission into **NEUTRAL**.
2. Press start/stop button to turn vehicle **OFF**.
3. Apply parking brake.
4. Remove key fob from proximity of vehicle.

#### OPENING HOOD

##### NOTICE


Do not open hood using plastic directly above hood release lever. This will lead to cracking.

2. Pull hood release lever upward to disengage four hood latches.

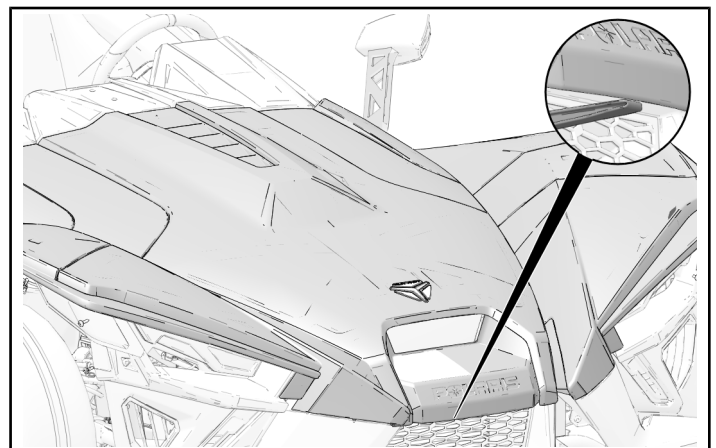


1. Make sure parking brake is applied.

3. Pull upwards on hood underside, above LED lamp, using two hands.

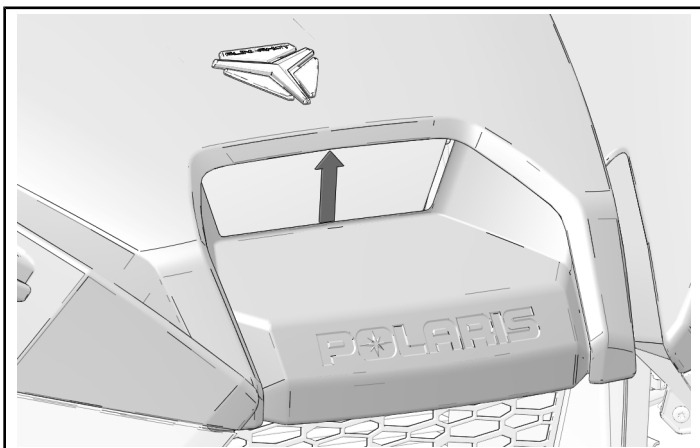

4. Pull hood upward and forward, rotating hood to a vertical position.

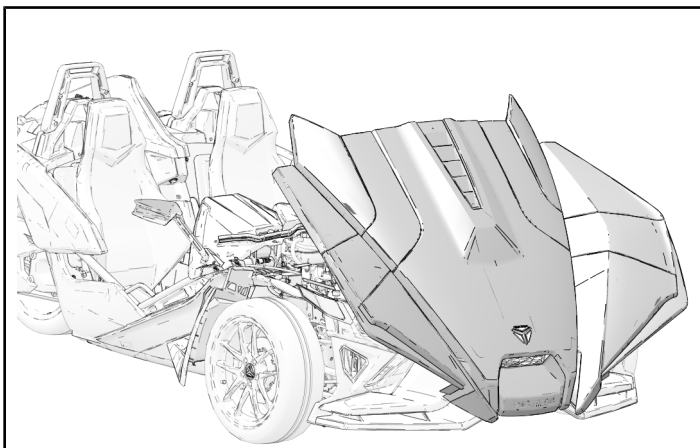

### **DIGITAL WRENCH® SETUP PREREQUISITES**

1. Connect vehicle battery to a battery maintainer or charger.
2. Make sure there is a reliable internet connection.
3. Make sure the latest version of Digital Wrench® is installed.
  - a. Log in to Polaris® Dealer Website.
  - b. Select **Service and Warranty** menu.
  - c. Select **Digital Wrench® Updates**.
  - d. Follow on-screen instructions to update Digital Wrench® to latest version.

## **ACCESSORY INSTALLATION**

### **PERFORM CALIBRATION UPDATE**

1. Connect Digital Wrench® cable to diagnostic port on Slingshot® and power on vehicle.
2. Enter vehicle information as required.
3. Update ECM with new calibration software using Calibration Card ② code (included in this kit). Do not operate vehicle until calibration of vehicle is complete.

### **INSTALL DECAL**

#### **⚠ WARNING**

Follow all chemical manufacturer instructions and safety precautions. Failure to follow all manufacturer instructions and precautions may result in severe injury or death.

1. Clean adhesion surface with solvent wipe.


#### **⚠ WARNING**

Isopropyl alcohol is hazardous to your health. See isopropyl packaging for proper handling instructions, including recommended personal protective equipment such as goggle and chemical resistant gloves.

2. Install decal on splash guard retainer as shown.

#### **NOTICE**

Make sure decal is visible and not covering any other decal.

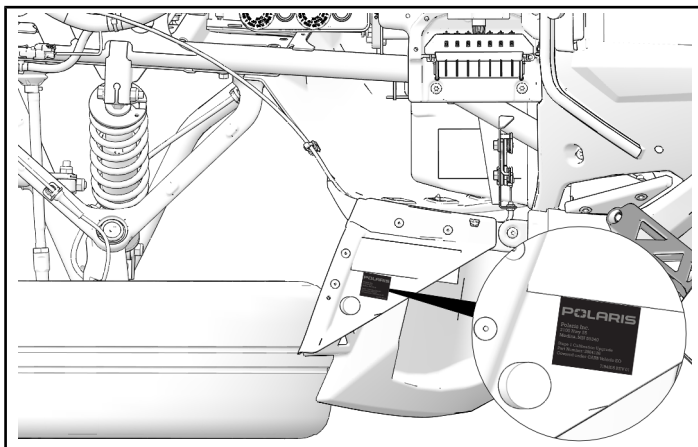

3. Close hood.

## INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

