

AXYS UNDERCOVER KIT



P/N 2881981

APPLICATION


All Axys Snowmobiles

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

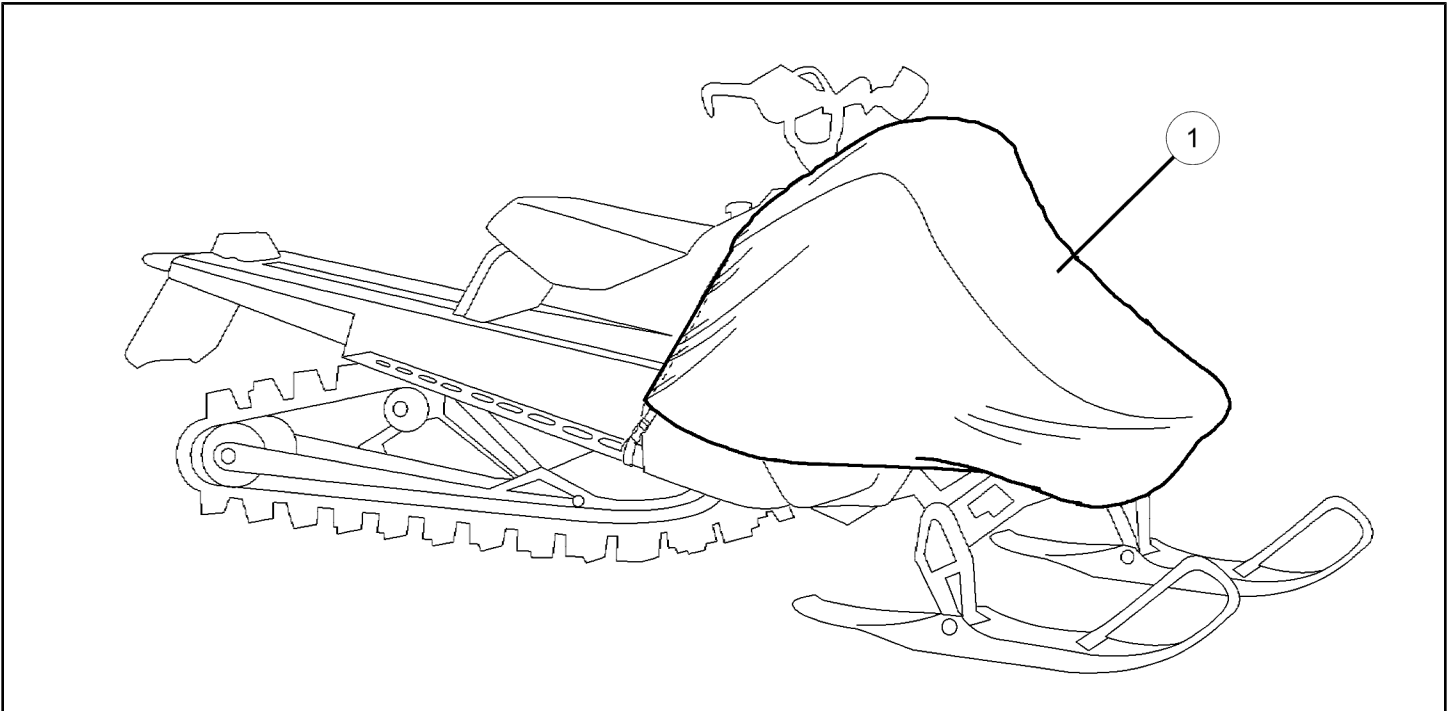

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Polyester Undercover	-
	1	Instructions	9927801

TOOLS REQUIRED

No Tools Required

IMPORTANT

Your AXYS UNDERCOVER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 5 minutes

INSTALLATION INSTRUCTIONS

NOTE

Polaris undercover is a soft, protective, removable, washable 100% polyester cover. Please wash undercover whenever it becomes dirty. Dirt and grit will harm the surface of your machine.

1. Park the machine and turn the key to 'OFF' position. Remove the key from the vehicle.
2. Drape the undercover ① over the front of the machine then pull the elasticized edge over the windshield as shown.



3. Use the side release buckle straps (A) sewn to the cover to secure undercover down. Feed the webbing strap down through the footwell (B) as shown and connect the buckles.

Cinch tight by pulling any excess slack (C).



CAUTION

Never trailer covered unit with just the undercover ① installed.