

EXTREME REAR BUMPER KIT



P/N 2880993, 2881754

APPLICATION


PRO RMK, ASSAULT

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

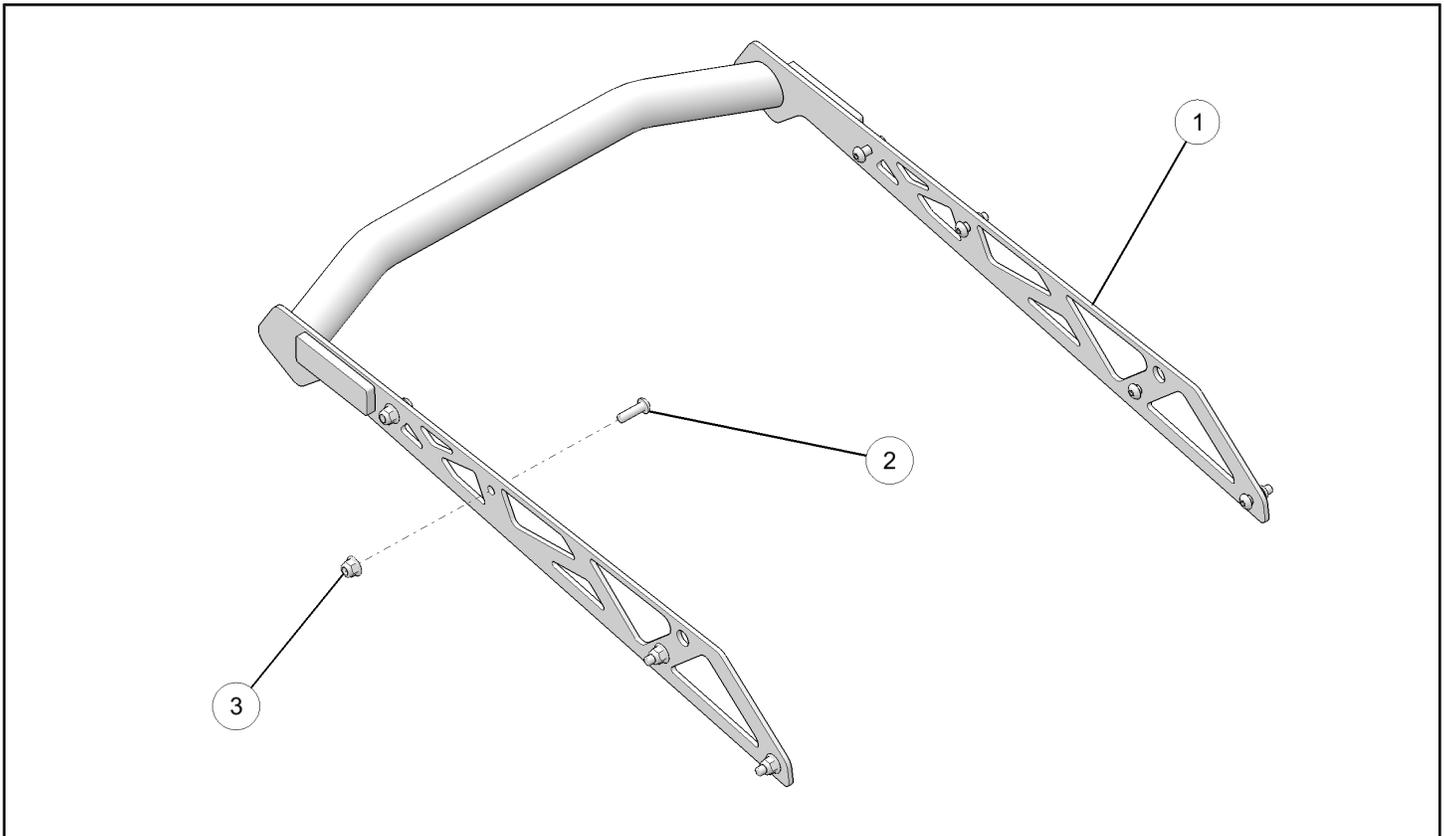

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Extreme Rear Bumper Assembly	1022533 / 1022521
2	8	Bolt - M6 X 1.0 X 20, PH/TX - Olive D	7518616
3	8	Nylon Nut-HXFL - M6 X 1.0 8 ZB3	7547453
	1	Instructions	9925956

TOOLS REQUIRED

- T30 Torx® Bit
- 10 mm Socket
- Ratchet Wrench
- Torque Wrench
- Isopropyl Alcohol or Other Suitable Cleaner/Degreaser
- Heat Gun

IMPORTANT


Your EXTREME REAR BUMPER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME


Approximately 15 minutes

INSTALLATION INSTRUCTIONS

1. Remove four bolts (A) and nuts (B) holding rear bumper to tunnel using 10 mm socket, ratchet wrench and T30 Torx® wrench. Remove rear bumper from tunnel.

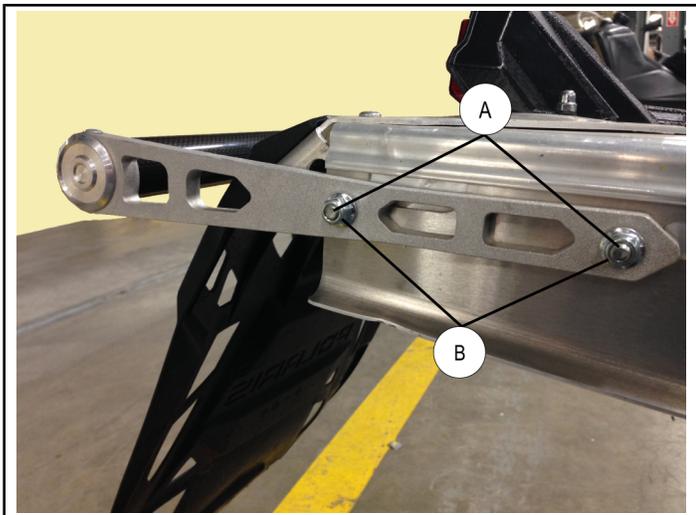

2. Warm the area around rear red reflector (C) using a heat gun, remove red reflector from tunnel. Clean remaining residue from tunnel using acetone or other suitable cleaner. Discard old reflector.

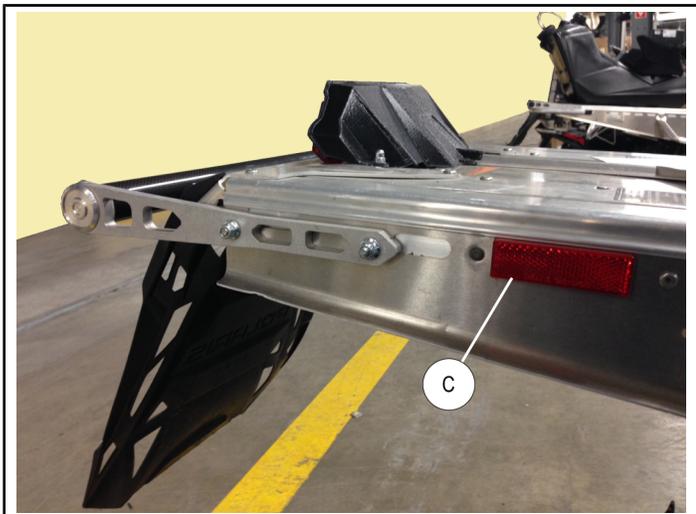

3. Install rear bumper ① using fasteners ② and ③. Install bolts ② with nuts ③ on outside of tunnel. Torque fasteners to below specification.

TORQUE

7 ft. lbs. (9.4 Nm)

