

TITAN REAR BUMPER HANDLE KIT



P/N 2882803

APPLICATION


Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

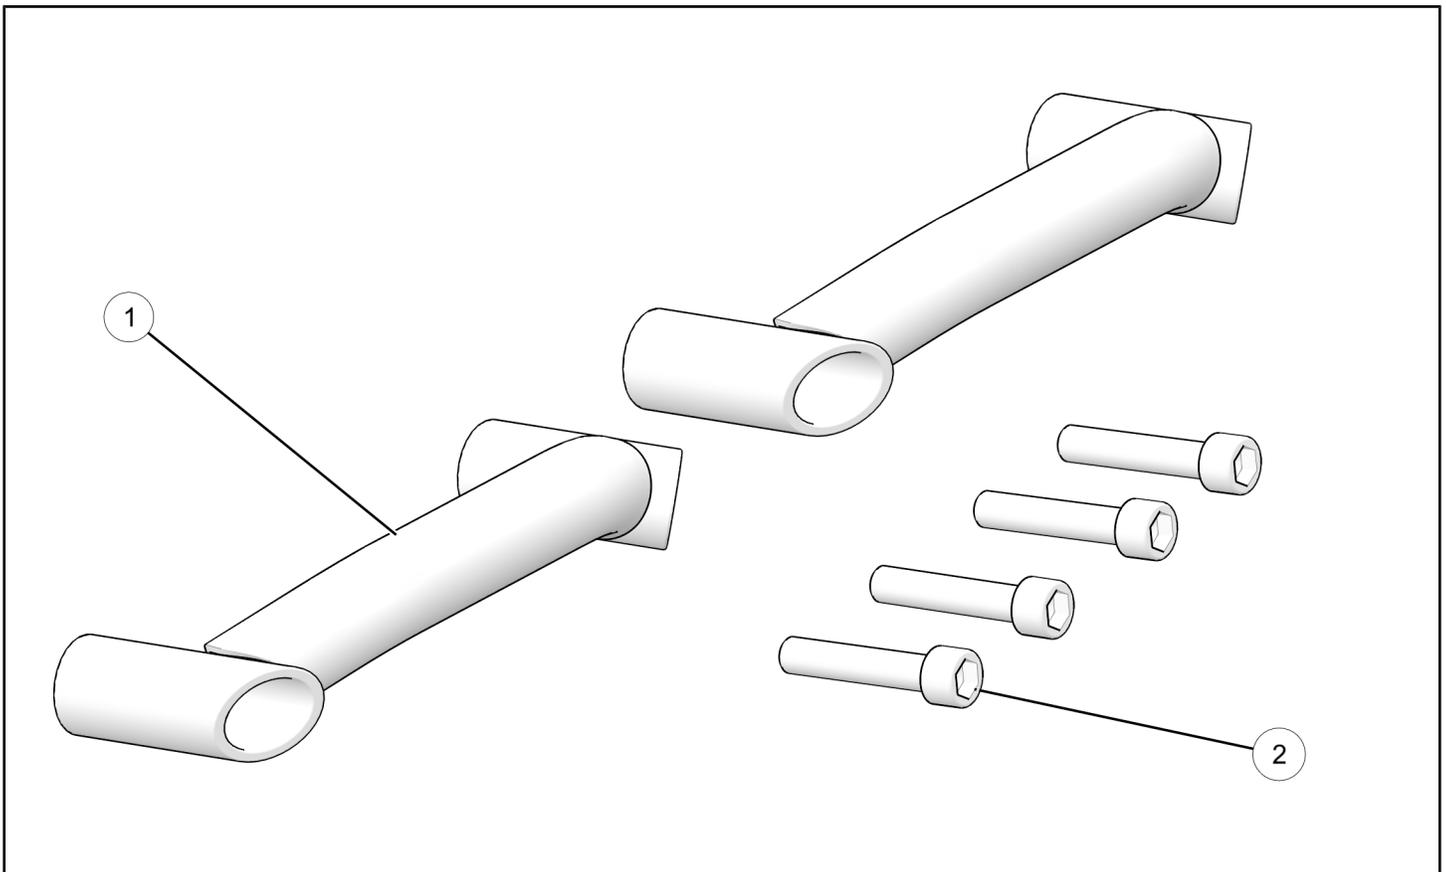

REF	QTY	PART DESCRIPTION	PART NUMBER
1	2	Handle, Rear Bumper	1023493
2	4	Screw - M8X1.25X40	7518178
	1	Instructions	9927956

TOOLS REQUIRED

- Safety Glasses
- Hex Key Set, Metric

IMPORTANT


Your TITAN REAR BUMPER HANDLE KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 12 minutes

INSTALLATION INSTRUCTIONS

1. Place bumper handle ① on rear of sled as shown.

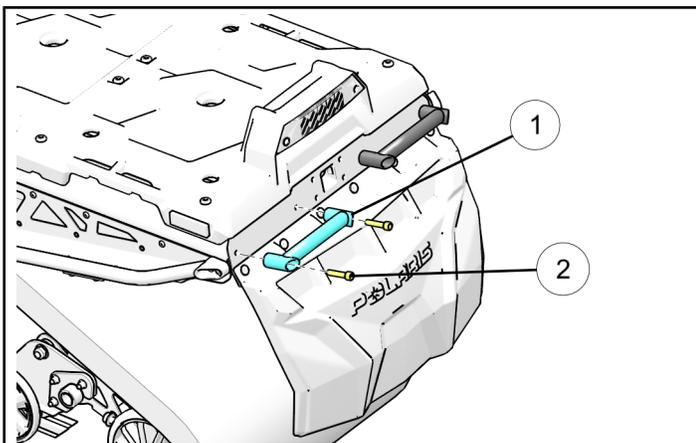

2. Start both bolts ② by hand and torque to specification.

TORQUE

20 ft. lbs. (27 Nm)

3. Repeat for opposite side.

4. Check to ensure all tools are accounted for and all steps have been completed.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

