

# STORAGE BAG KIT



**P/N 2881979**

## APPLICATION


All Platforms 144" and Longer

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

This Kit includes:

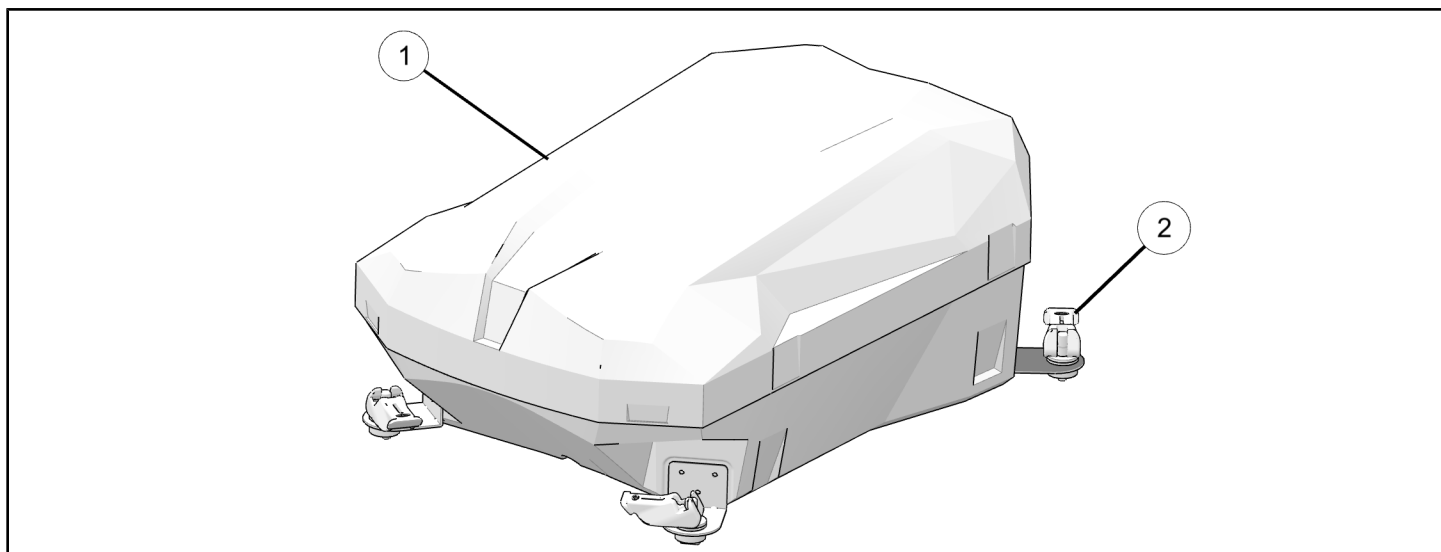

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Storage Bag	2687257
2	4	LOCK & RIDE® Anchor	-
	1	Instructions	9927083

## TOOLS REQUIRED

No Tools Required

## IMPORTANT


Your STORAGE BAG KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME



Approximately 10 minutes

## INSTALLATION INSTRUCTIONS



1. Assemble LOCK & RIDE® anchors properly into each of the four mounting locations.
  - a. Insert T-slot anchor (A) through rubber bushing (B).
  - b. Insert T-slot anchor with bushing through base of storage bag mounting bracket (C).

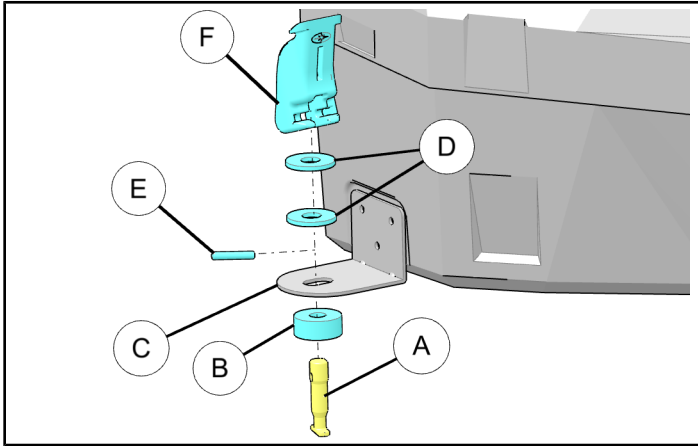

- c. Place both washers (D) onto top of T-slot anchor (A).
- d. Place dowel pin (E) through opening in T-slot anchor (A).
- e. Fully clip LOCK & RIDE® handle (F) into dowel pin (E).

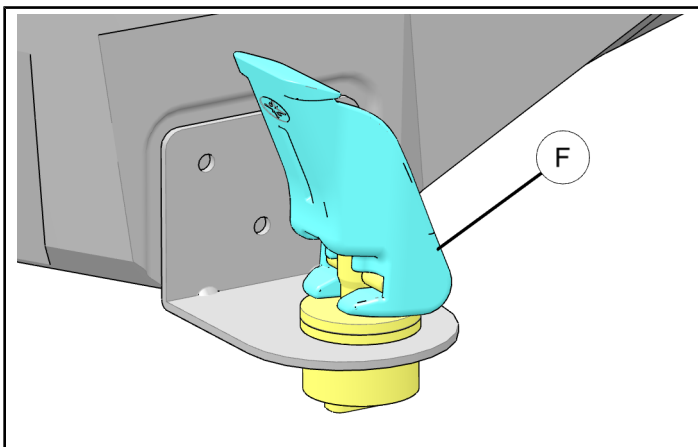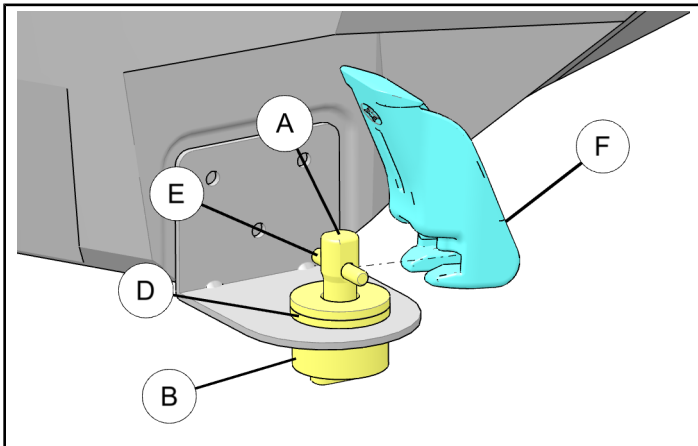


2. Place storage bag ① onto tunnel and place T-slot anchor base into tunnel slot.

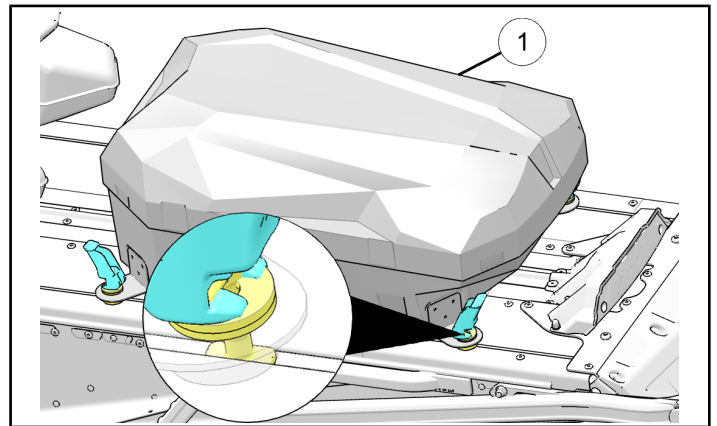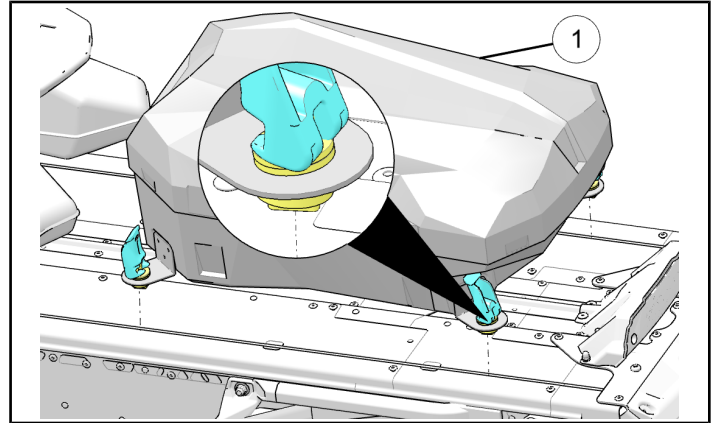

3. Rotate LOCK & RIDE® handle (F) so that T-slot anchor is perpendicular to tunnel slot.

### NOTE

Handles always need to be pulled over towards center of the tunnel as shown.

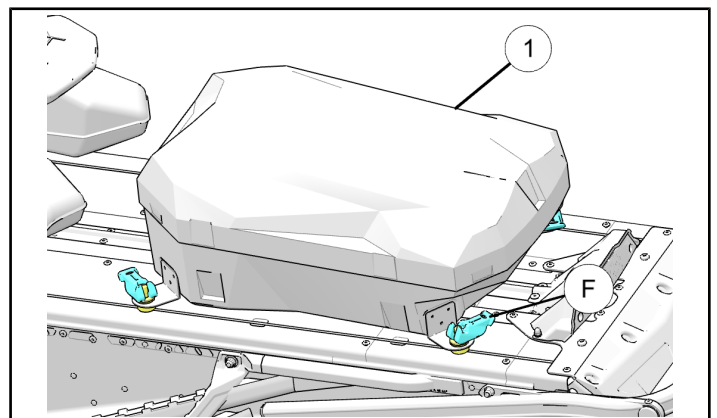

### IMPORTANT

- Do not carry sharp or pointed objects inside the bag.
- Maximum carrying capacity is 10 lbs. (4.5 kg).