

REAR SEAT BAG KIT



P/N 2881463

APPLICATION


AXYS PRO Fit

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

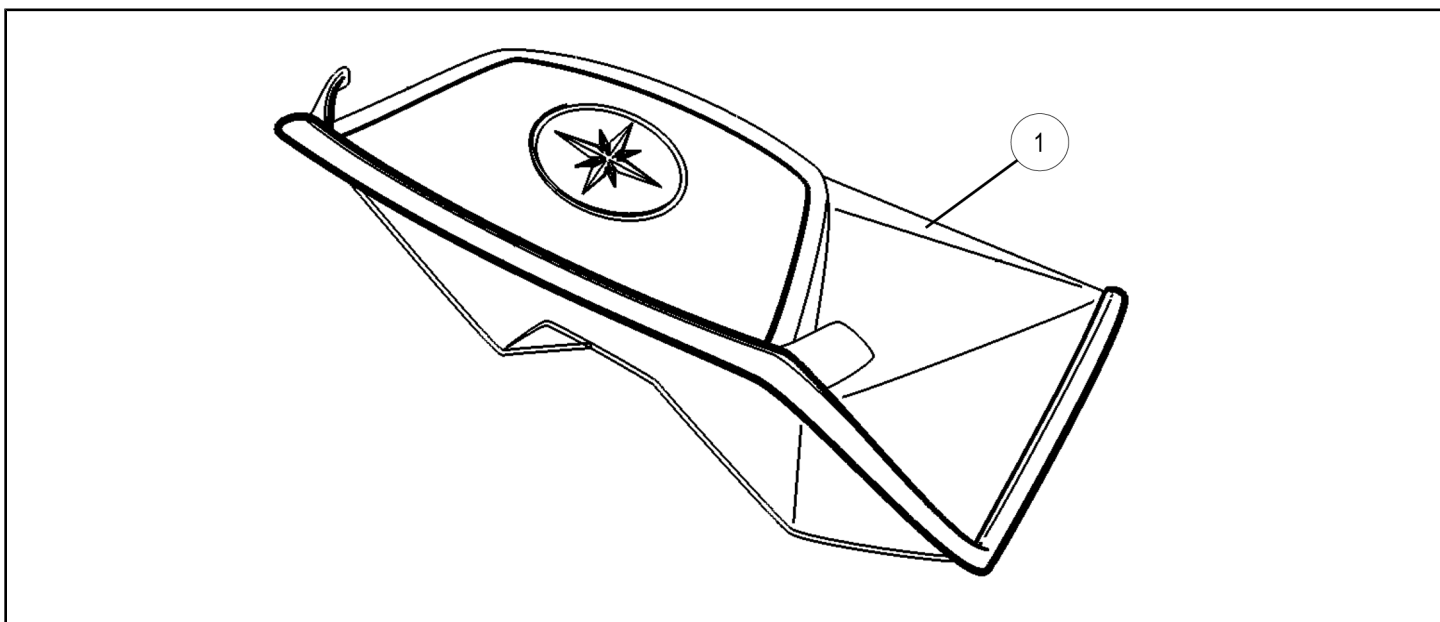

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Rear Seat Bag	2686872
	2	Torx ® Head Screws - M6 X 1.0 X 20	7519112
	2	Tuflock® Rivet, 0.315 X 0.325 X 0.787	7661855
	2	Plastic Dart Clip-Nylon White	7662253
	1	Bracket W/ Threaded Inserts	-
	1	Instructions	9926651

TOOLS REQUIRED

- Torque Driver
- T40 Torx Head Bit

IMPORTANT

Your REAR SEAT BAG KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME



Approximately 5 minutes

IMPORTANT


Do not carry sharp or pointed objects. Maximum carrying capacity is 3 lbs. (13.34 N)

INSTALLATION INSTRUCTIONS

1. Line up aluminum bag bracket (A) with large holes on side of the seat bracket. Install Tuflock® rivets (B) on both sides and push in center pin to lock in place.
3. Install two dart clips (D) through holes in top of bag and into holes in bottom of seat base. Push in clips until fully seated.

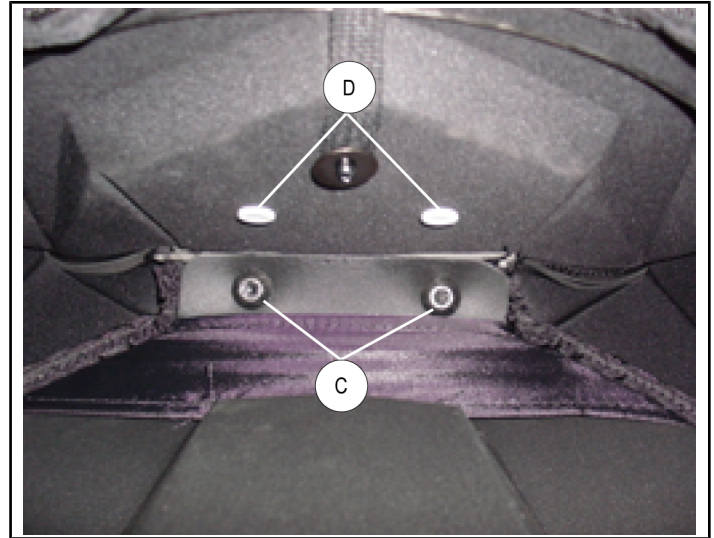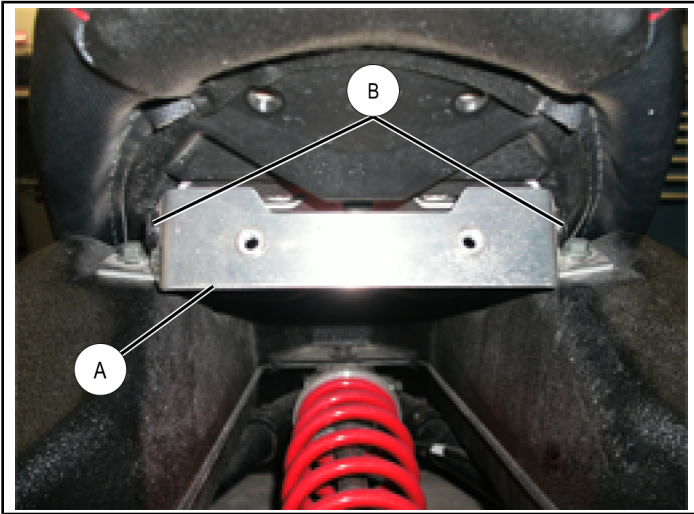

2. Install M6 screws (C) from inside of bag into the threaded inserts on the bracket. Tighten both screws (C). See figure associated with Step 3.

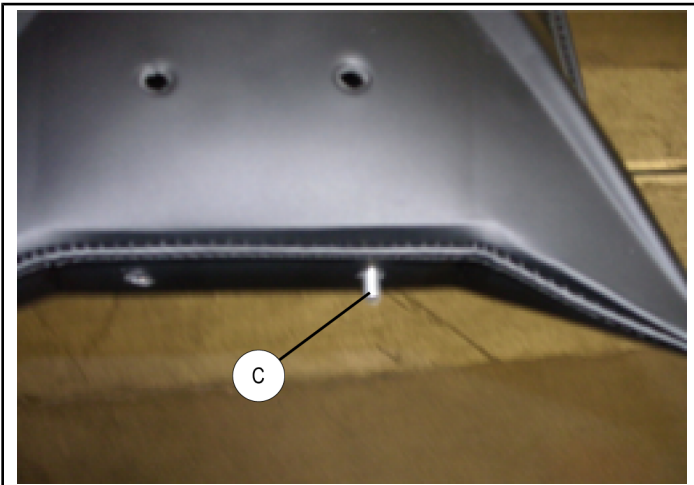

NOTE

Leave Zippers open when bag is not in use to allow moisture inside to escape.