

WATERPROOF UNDERSEAT LINER BAG



P/N 2882857

APPLICATION

Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:



REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Waterproof Underseat Liner Bag	2687825
	1	Instructions	9928003

TOOLS REQUIRED

None

IMPORTANT


Your WATERPROOF UNDERSEAT LINER BAG is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 6 minutes

INSTALLATION INSTRUCTIONS

1. Open zipper on Waterproof Liner Bag.
2. Install the Waterproof Liner Bag ① into the Underseat Bag ② by placing your hand inside the Waterproof liner bag and inserting into the Underseat Bag.
3. Once you have fully inserted the Waterproof Liner Bag, close the zipper on both the Waterproof Liner Bag and the Underseat Bag and latch the buckles on your Underseat Bag to fully secure the contents.

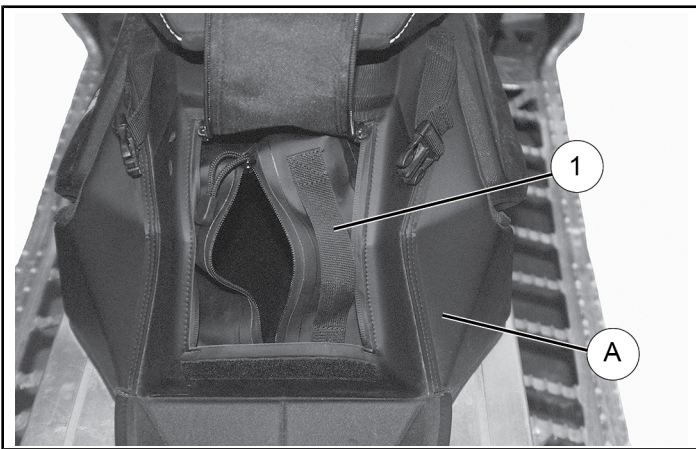

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

