

TITAN™ FLAPPER HITCH KIT



P/N 2882812

APPLICATION

Verify accessory fitment at Polaris.com.

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This kit contains parts for installation of the Titan Flapper Hitch Kit only. This kit is designed to be mounted either directly to the vehicle or to the Titan Adapter Hitch. If mounting to the Titan Adapter Hitch the following kits are also required (sold separately).

- Titan 1.25" Receiver Hitch, PN 2882795.
- Titan Adapter Hitch, PN 2882814

This Kit includes:

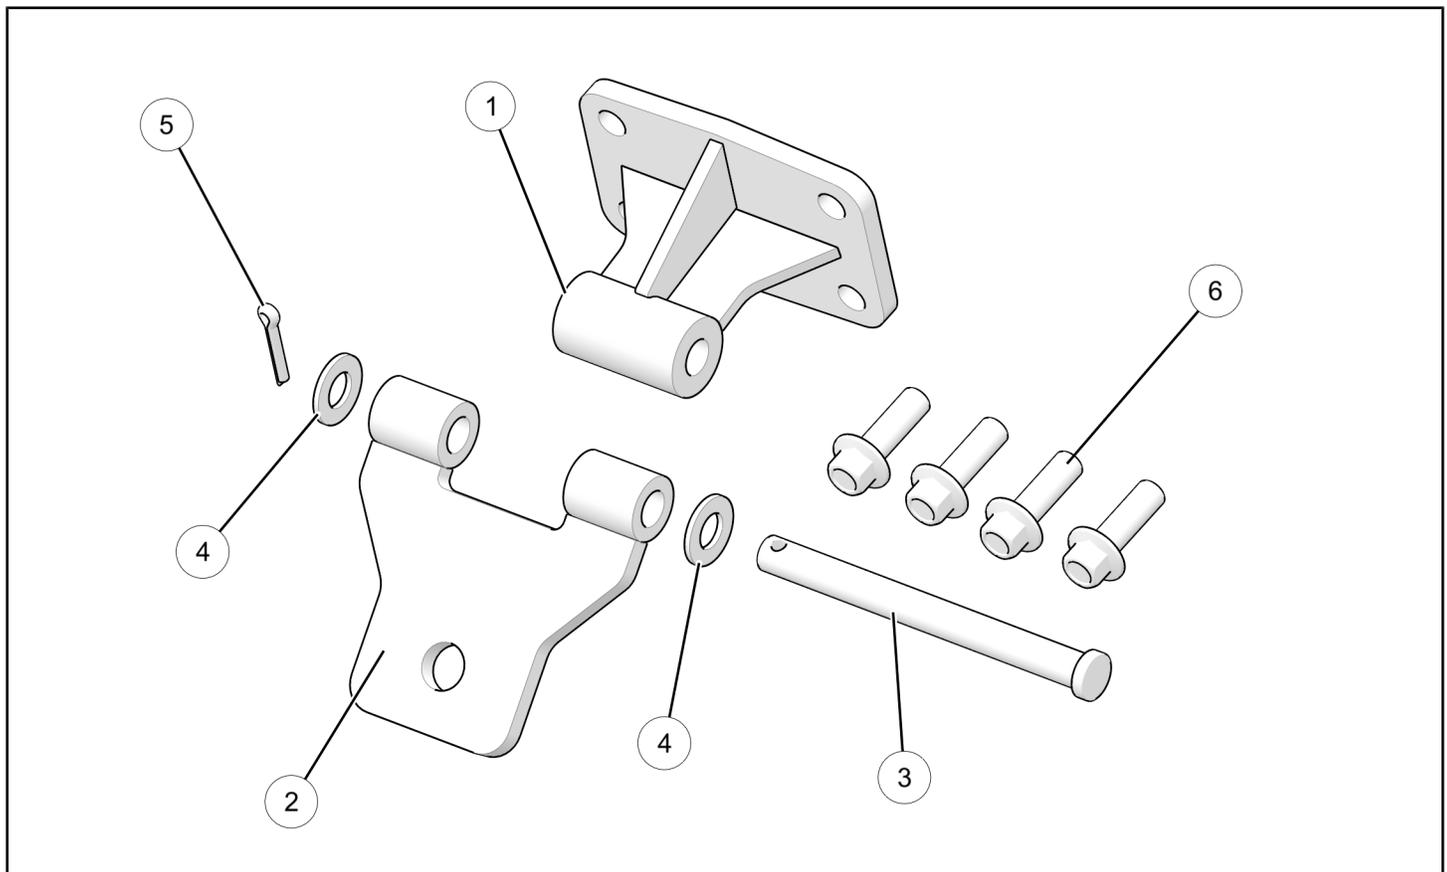

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Hitch Mount	1023488
2	1	Hitch	1023491
3	1	Hitch Pin	7662337

REF	QTY	PART DESCRIPTION	PART NUMBER
4	2	Washer	7556188
5	1	Cotter Pin	7661407
6	4	Screw M8 X 1.25 X 25	7518569
	1	Instructions	9928237

TOOLS REQUIRED

- Safety Glasses
- Wrench Set, Metric
- Socket Set, Metric
- Torque Wrench
- Pliers, Needle Nose

IMPORTANT

Your Titan™ Flapper Hitch Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 12 minutes

NOTE


Additional time may be required for optional steps, or to accommodate other installed accessories.

INSTALLATION INSTRUCTIONS


KIT ASSEMBLY

You Titan Flapper Hitch kit will need to be assembled before use. See instructions below for proper assembly before installing on the vehicle.


1. Install one washer ④ onto hitch pin ③ and insert hitch pin partially into hitch ② as shown.

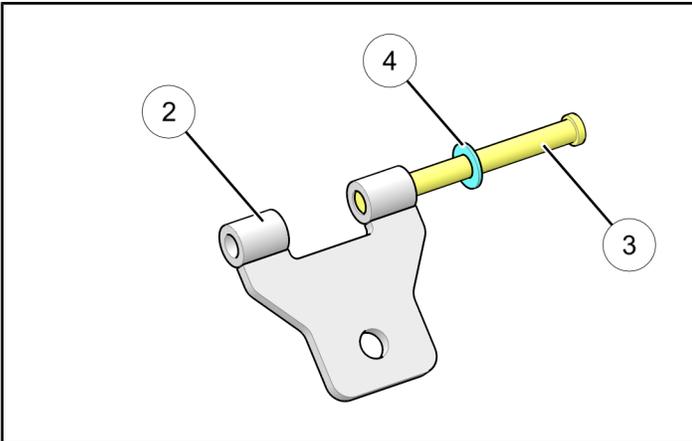

2. Place hitch mount ① into position as shown and fully insert the hitch pin ③.

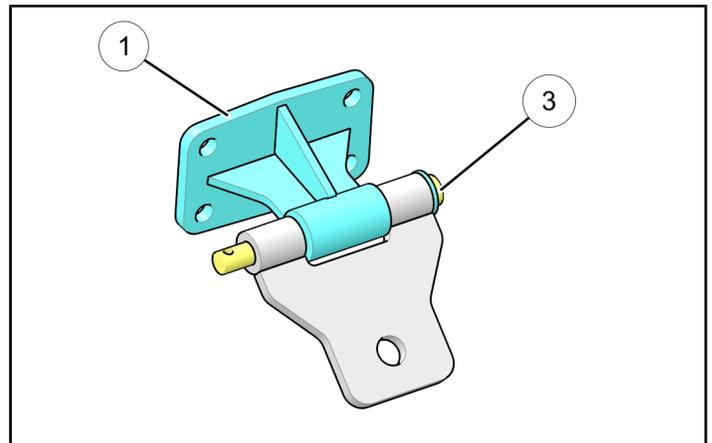


- Place remaining washer ④ on the end of the hitch pin ③ and secure in place by inserting the supplied cotter pin ⑤ in the pre-drilled hole on the end of the hitch pin. Use a needle nosed pliers to bend over the tabs of the cotter pin to secure it in place.

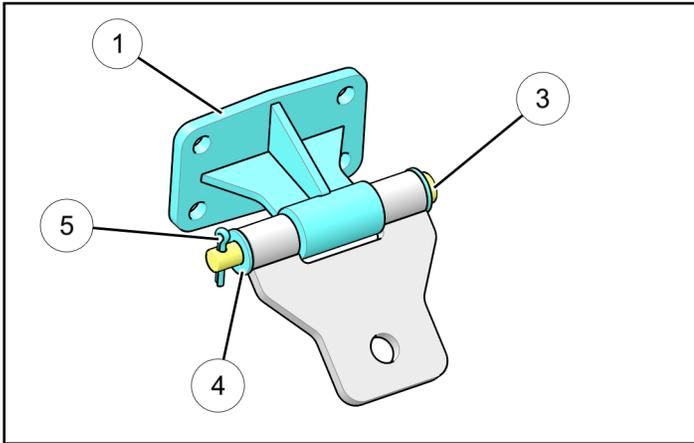

INSTALLING DIRECTLY ON THE VEHICLE

- Align the mounting holes on the Titan Flapper Hitch Kit assembly ① with the stock mounting holes on the rear of the vehicle.

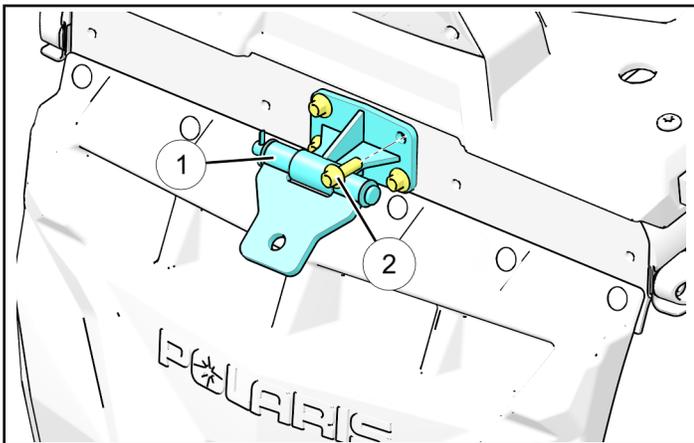


- Insert the four screws ② supplied with your kit and torque to below specification.

TORQUE

20 ft/lbs (27 Nm)

INSTALLING USING THE TITAN ADAPTER HITCH

- If using the Titan Adapter hitch, align the mounting holes on the Titan Flapper Hitch ① with the mounting holes on the Titan Adapter Hitch ① and insert the four screws ② that were supplied with your kit as shown.

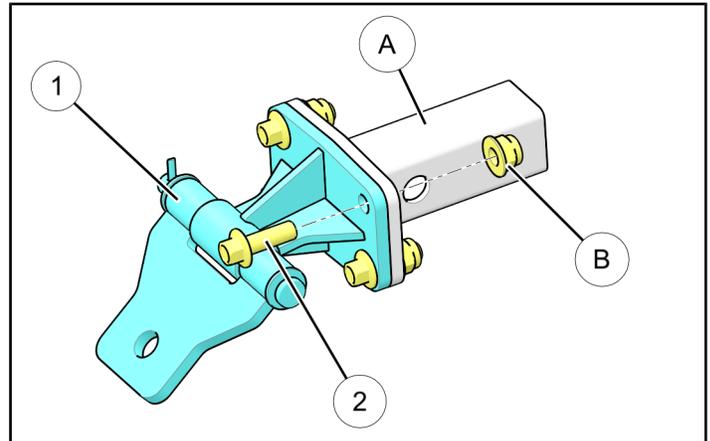

- Secure the two assemblies together using the four locking nuts ② that were supplied with your Titan Adapter Hitch Kit, PN 2882814, ① and torque to the listed specification.

TORQUE

20 ft/lbs (27 Nm)

- Once secured, refer to the instructions for the Titan Adapter Hitch Kit, PN 2882814, for proper installation of the new hitch assembly into the Titan 1.25" Receiver Kit, PN 2882795.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

