


UNIVERSAL FORMED HANDLEBAR GAUNTLETS KIT



P/N 2879796

Application
ALL

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

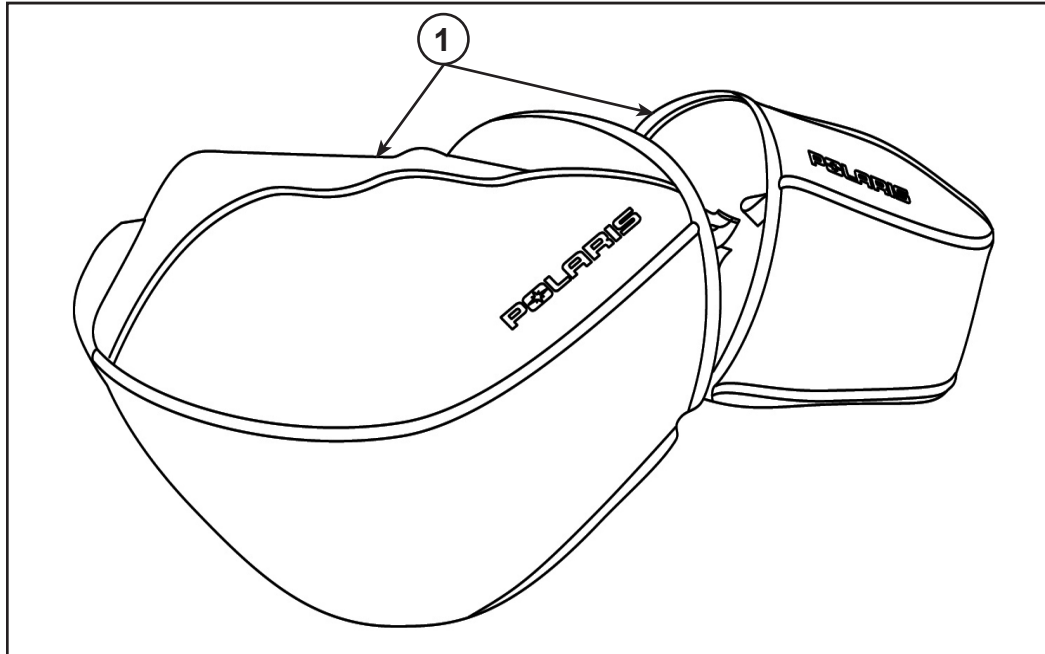

Kit Contents:

<u>Ref</u>	<u>Qty</u>	<u>Part Description</u>	<u>Part Number</u>
1	1	Handlebar Gauntlets	2879796
2	2	Plastic Tree Clip Assembly with Velcro	-
3	2	Filler Pad	-
	1	Instructions	9924788

APPROXIMATE ASSEMBLY TIME: 2 minutes

IMPORTANT: For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown. Before you begin, thoroughly review the instructions. Do not interface with operating components.

INSTALLATION INSTRUCTIONS:

1. Install the gauntlets (PN 2879796) on the handlebar and on the 2 up grab bar. Figure 1, Figure 2 and Figure 3.

NOTE: Filler pad is used for installation on narrow bar or over a cable.

2. For the 2 up application, peel the backing of self adhesive and attach to the bar. Attach the filler pad to the self adhesive and wrap with velcro strap around the bar and connect the velcro.
3. For the 2 up 1+1 application use the self adhesive velcro to hold the front edge up and use the lower velcro inside the gauntlets to attach the plastic tree clip.

NOTE: Filler pad is not required.

IMPORTANT: Use inner velcro wrap for installation of gauntlets on the bar end with the cup.

IMPORTANT: Use upper plastic/velcro wrap for installation of gauntlets with the tree clip into the end to handlebar.

