

MATRYX CONVERTIBLE COVER KIT



P/N 2884750

APPLICATION

Verify accessory fitment at www.polaris.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS



REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Polyester Cover 129-144	N/A

TOOLS REQUIRED

None

IMPORTANT

Your Matryx Convertible Cover Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION

GENERAL

1. Park snowmobile on a flat surface.
2. Push the engine stop switch down to the OFF position.
3. Turn the key to the OFF position and remove key.

ACCESSORY INSTALLATION

The Convertible Cover has a zippered section, that can be opened and expanded to accommodate the Lock & Ride Flex M2 Passenger Seat.

⚠ WARNING

If transporting the snowmobile on a non-enclosed trailer you **MUST** ensure that the cover is properly secured to the snowmobile. If the snowmobile is not equipped with the accessory passenger seat you **MUST** ensure that the expandable section and the fuel access port are zipped closed to minimize the amount of extra material exposed. Failure to comply may allow airflow, vibration, or other factors to cause damage to the cover or snowmobile and may cause the cover to separate from the snowmobile causing an accident resulting in personal injury or death.

1. Place the cover over the windshield and handle bar.
2. Next, place the cover ① over the front bumper and spindles



3. Once the cover is fitted over the front portion of the snowmobile, secure the hook-and-loop spindle straps ①, around the inside of the spindle on both sides of the snowmobile as shown below.




4. Stretch the cover over the rear of the snowmobile.

NOTICE

If applicable, open the expandable section, per your snowmobile's requirements for proper fit on the snowmobile.



5. Once the cover is fitted over the rear portion of the snowmobile, route the rear strap **B** underneath the tunnel and secure buckle.

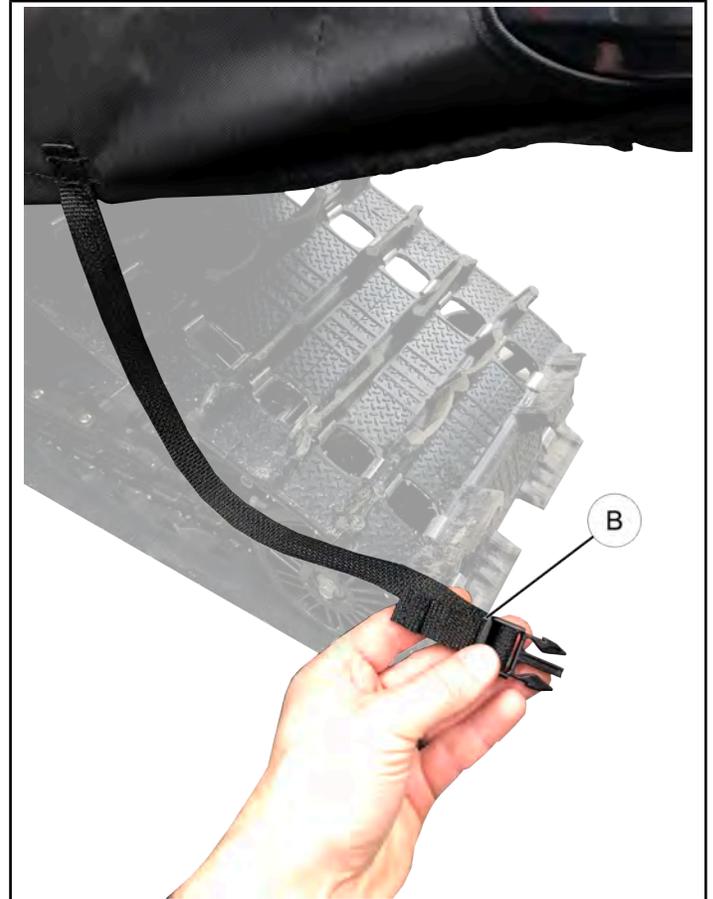

6. Next, attach the four cover hold down hooks (C), two on each side, located in the approximate locations below to the snowmobile and pull the quick straps down to tighten the cover.



7. Lastly, adjust the front handle bar/windshield strap (D) to take up any excess material between the handlebars and windshield.



8. Check all straps to ensure proper tension and adjust as necessary.
9. Verify cover is secure and fuel access port is fully zipped closed BEFORE transporting snowmobile. If there is no passenger seat installed, the expandable portion MUST also be fully zipped close BEFORE transport.

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

