

Assembly, Handlebar Mirrors, Snow KIT PN 2876297

Application

Polaris IQ Snowmobiles



POLARIS
The Way Out.®

This kit includes:

Qty	Description	Part Number
1	Asm.-Mirror, Handlebar, Mn, LH	2633522
1	Asm.-Mirror, Handlebar, Mn, RH	2633523
4	Spacer-Clamp Handlebar	5136011
2	Bracket Handlebar Clamp	5251171
1	Instruction	9921183



Tools Required


1/2" Socket Wrench 5/8" Hole Saw

IMPORTANT: For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence as shown on the attached instructions.


If machine is equipped with Rider Select adjustable steering, ensure that the handlebars are placed in the position most likely to be used while riding before beginning the installation of the mirrors

INSTALLATION INSTRUCTIONS


1. Remove existing handlebar pad.
2. Mark the holes on each side of handlebar pad using the measurements from Photo 1.
3. Place the handlebar pad over a board and using a 5/8" diameter hole saw, cut through the handlebar pad. Photo 2.

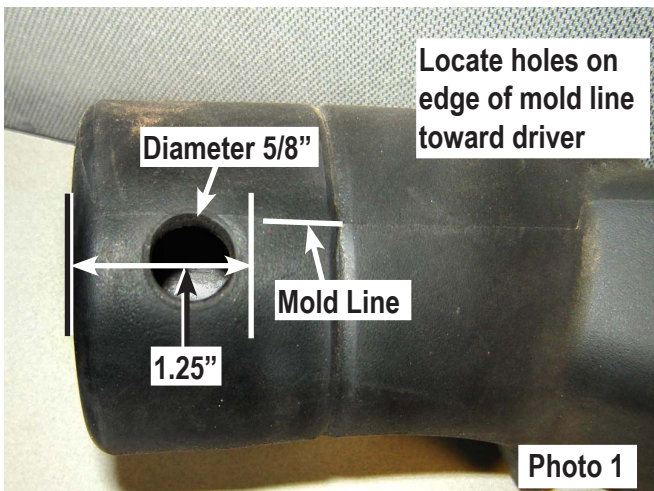


- Slide U-bracket over handlebar on the left hand control side. Photo 3.

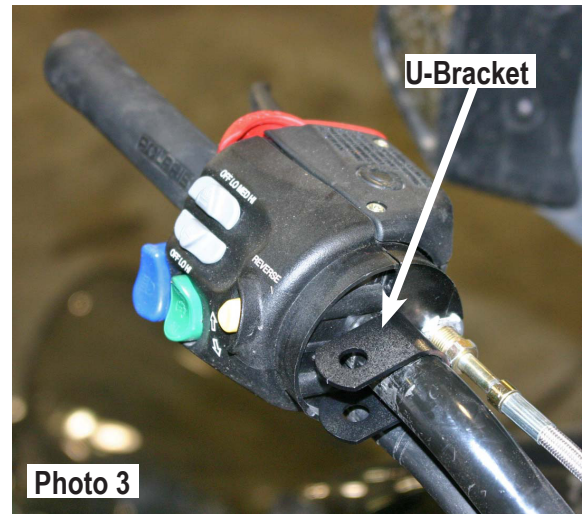

- Slide mirror through the handlebar pad and the top hole of the U-bracket. Insert the two lock spacers onto the mirror with the small diameters on the inside. Continue to slide the mirror through the bottom hole of U-bracket. Photo 4.

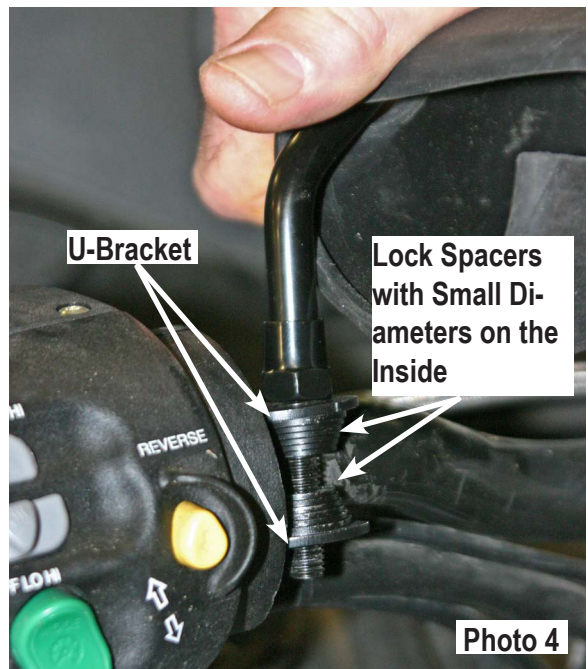


- Adjust the the top locknut so the mirror stud protrudes enough to allow at least two threads showing past the end of the nut. Photo 5.

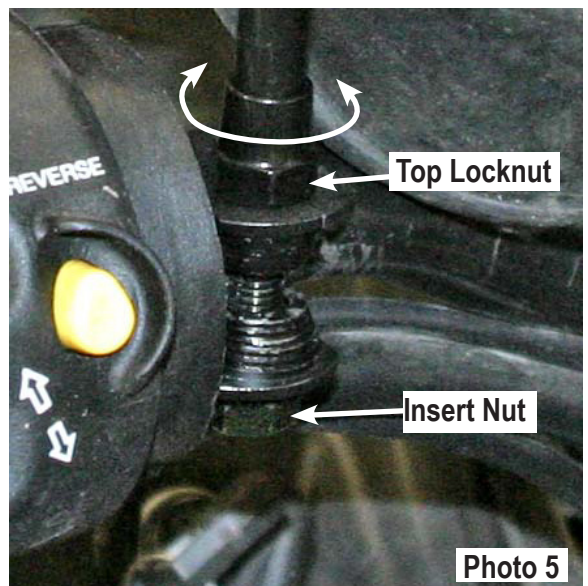


7. Move U-bracket close to left hand control. The U-bracket should be as level as possible. Photo 6. Loosely tighten nut, The Lock spacers will not meet together.
8. Adjust the mirror to be just in front of the hand grips.




9. Tighten nuts with socket wrench. Photo 7.

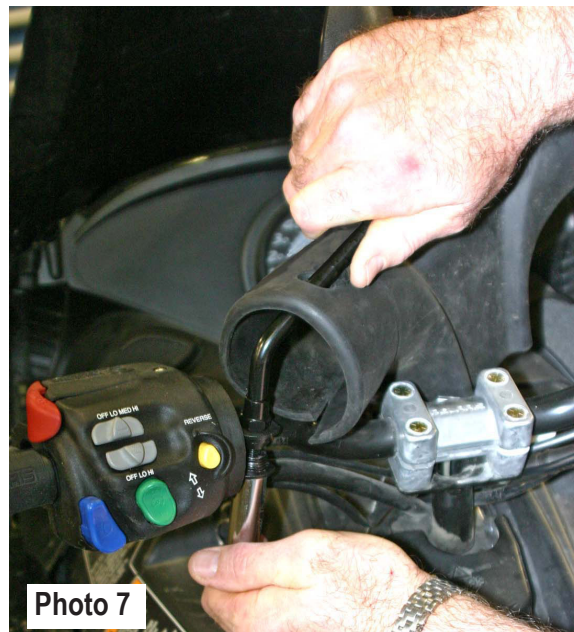

10. Repeat Steps 1-4 for the reverse side of the handlebar.
11. Move U-bracket over to throttle control. The U-bracket should be as horizontal as possible. Loosely tighten nut. The Lock spacers will not meet together.
12. Tighten nuts with socket wrench.

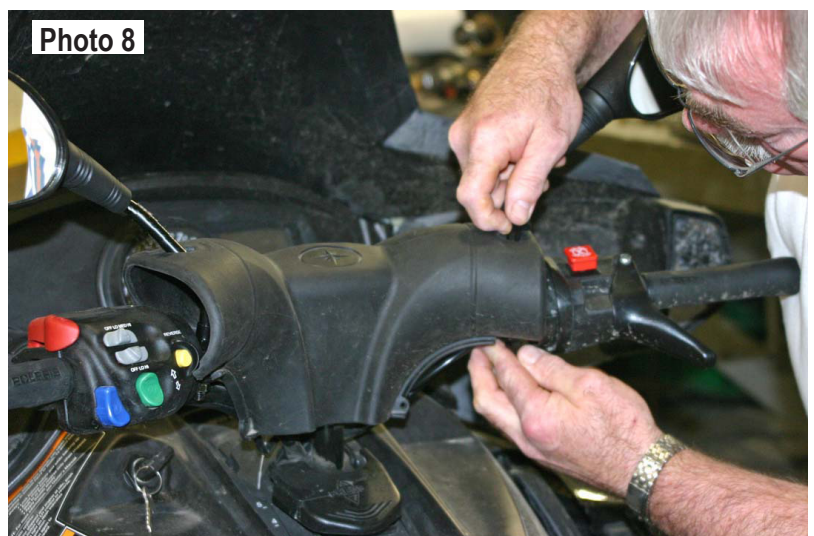

13. Reinsert the handlebar cover sliders for models with this feature.

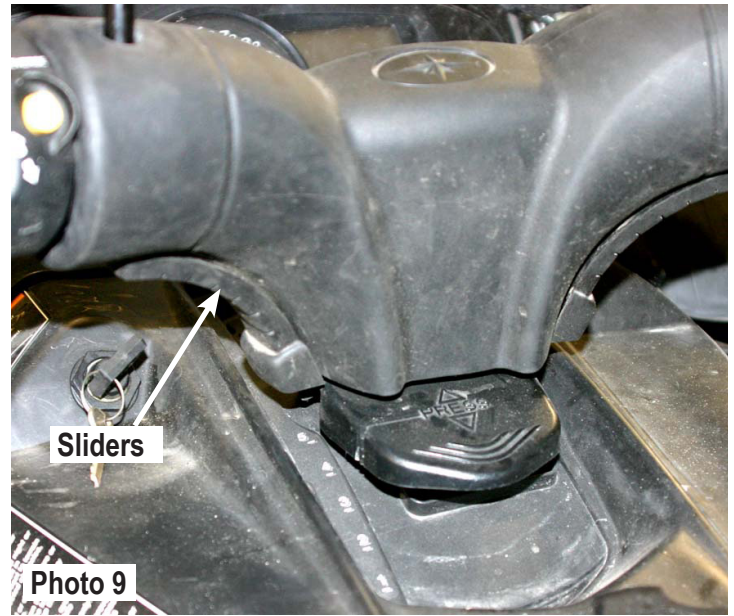

14. Adjust mirrors to personal fit.

