

ROX HANDLEBAR RISER KIT

P/N 2878740



POLARIS
The Way Out.®

Application

MY10 - MY12 600 & 800 RUSH,
MY12 600 & 800 Switchback

Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

This kit includes:

Qty	Part Description	Part Number
2.....	ROX Handlebar Riser	1823864
1.....	Instructions	9923603



Tools Required:

6 mm Allen Head Socket
13 mm Wrench
T-40 Torx Wrench
Torque Wrench
243 Blue Loctite™

IMPORTANT: For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence as shown on the attached instructions.

INSTALLATION INSTRUCTIONS

1. Remove left and right side panels.
2. Remove hood fasteners. Disconnect hood electrical connector and remove hood.
3. Remove four upper handlebar mounting bolts and gently move handlebar assembly forward.
4. Remove four lower handlebar mounting bolts and remove OEM handlebar riser from steering post.
5. Apply 243 Loctite™ on the lower riser mounting bolt threads. Loosely install left and right ROX handlebar riser on the steering post with the same spacing as the OEM handlebar riser. Adjustment levers must face outward. Figure 1.
6. Apply 243 Loctite™ on the upper riser mounting bolt threads. Loosely install handlebar on the top mount of the ROX handlebar riser. Center the handlebar on the handlebar riser and center the riser on the steering post. Figure 2.
7. Adjust handlebar and riser to a comfortable position.
8. Torque the top and bottom mounting clamp bolts to 16 ft. lbs.

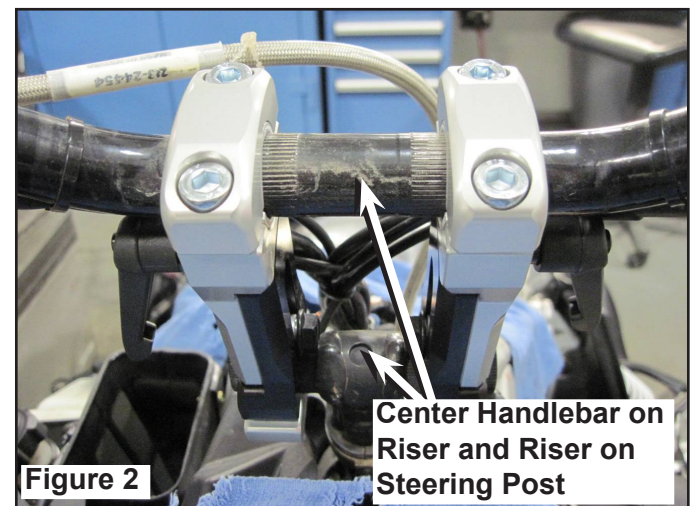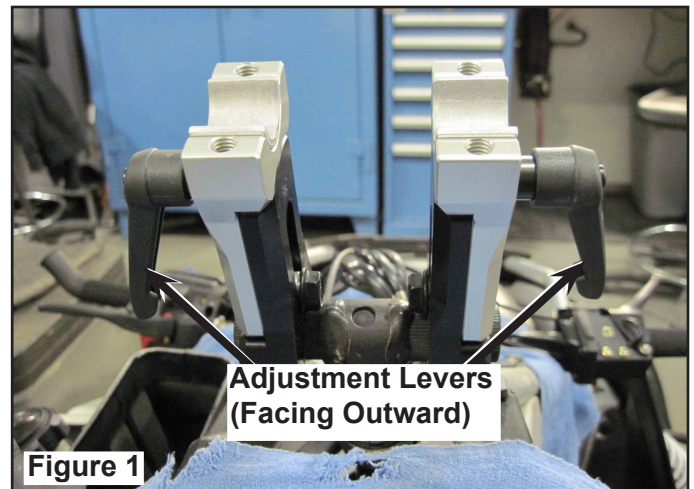

9. Adjust handlebar height by loosening the height adjustment levers and moving handlebars up or down. When a comfortable height is determined, tighten adjustment levers.
10. Pull outward on the adjustment levers and rotate the levers so they are pointing downward. Figure 3.
11. Reinstall hood. Reconnect hood electrical connector and reinstall hood fasteners.
12. Reinstall both side panels.
13. **IMPORTANT:** You must check the throttle cable length to make sure it is long enough for proper operation. To do this, securely support the machine using a jackstand or hoist. The track must be off the ground. Start the engine and make sure the engine RPMs don't change when the handlebars are turned full right and full left.

Repeat with the ROX risers in the extended position. Inspect the cable for proper routing.

NOTE: Optional throttle cables are available that are 1.5 inches longer (PN 7081711).

WARNING: If the engine RPMs change when the handlebars are turned, bring the machine to your dealer to correct the issue before riding. Failure to do so could result in serious injury or death.

