

LOCK AND RIDE REPLACEMENT KIT



P/N 2881260

APPLICATION


- 2880969: Burandt Adventure Tunnel Bag (Small) Kit
- 2880970: Burandt Adventure Tunnel Bag (Large) Kit
- 2881057: Ultimate Shovel Bag Kit
- 2879722: Burandt Flyer Lock and Ride Tunnel Bag Kit

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

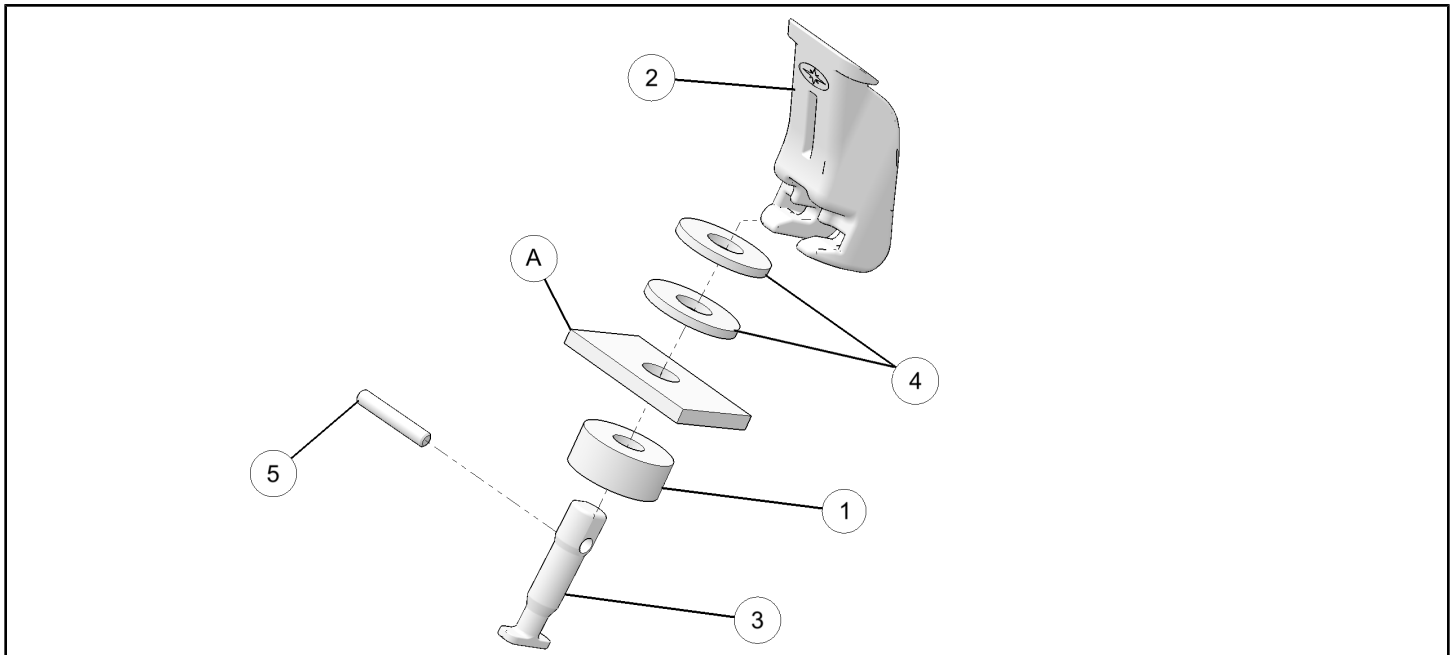

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	T-Slot, Rubber Bushing	5415542
2	1	Lock and Ride Handle	5438117
3	1	T-Slot, Anchor Shaft Left and Right	5633428
4	2	Washer, .390 X 1.00 X .093	7555893
5	1	Dowel Pin, 5/32" X 7/8"	7661970
	1	Instructions	9926177

A = Accessory Bag Position

TOOLS REQUIRED

- No Tool Required

IMPORTANT


Your LOCK AND RIDE REPLACEMENT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME


Approximately 10 minutes

INSTALLATION INSTRUCTIONS

1. Assemble Lock and Ride bag mount properly into mounting locations.
 - a. Place T-slot anchor ③ through rubber bushing ①.
 - b. Place T-slot anchor with bushing through base of tunnel bag (A).

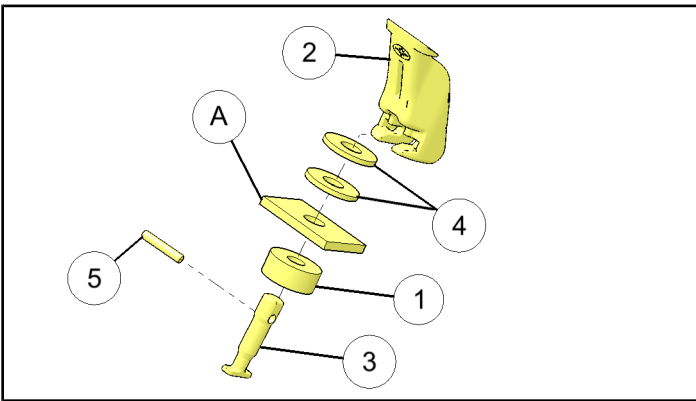

- c. Place both washers ④ onto to top of T-slot anchor.
- d. Place dowel pin ⑤ through opening in T-slot anchor.
- e. Fully clip Lock and Ride handle ② into dowel pin ⑤.

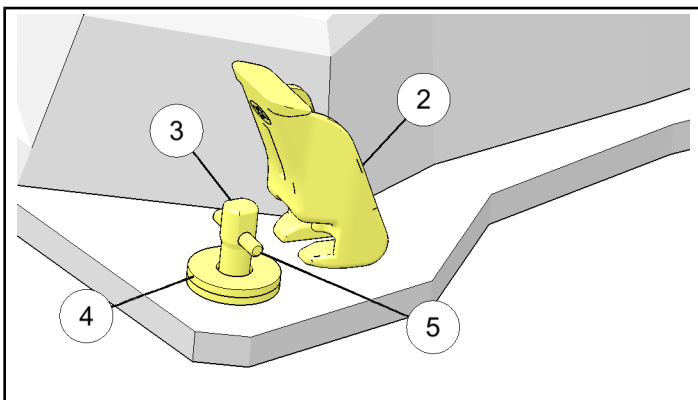

IMPORTANT
The dowel pin ⑤ must be fully seated into handle ② prior to locking onto snowmobile tunnel or damage may occur to the T-slot anchor ③. This can be checked with an audible click or seen on the underside of the handle where the dowel pin ⑤ is seated.

