



# Fuel Can Rack Installation Instructions

## KIT P/N 2876765

### Application

2008 Polaris 600/700/800 RMK, Switchback

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

### Kit Includes:

Qty	Description	Part No.
2	Spacer-Gas Can Rack	5135935
2	Bracket-Gas Can Rack	5251090
4	Self Tapping Torx Screw, 1/4-20 x 3/4	7515199
4	Carriage Bolt, 1/4-20 x 1	7512263
4	Washer, Flat, .28 x .750 x .062	7555859
4	Nut, 1/4-20 Nylok	7542122
4	Spacer	7555932
1	Instructions	9921564

### Tools Required:

7/16" Wrench or Socket  
#27 Torx Driver

1/2" Open End Wrench

**IMPORTANT:** For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence as shown on the attached instructions.

### Approximate Installation Time: 15 minutes

1. Assemble the rack by placing the round tubes in the correct location. Hold the tubes from spinning with a 1/2" wrench. Secure them with the self-tapping torx head screws (PN 7515199). Torque to 8-10 ft./lbs. Figure 1

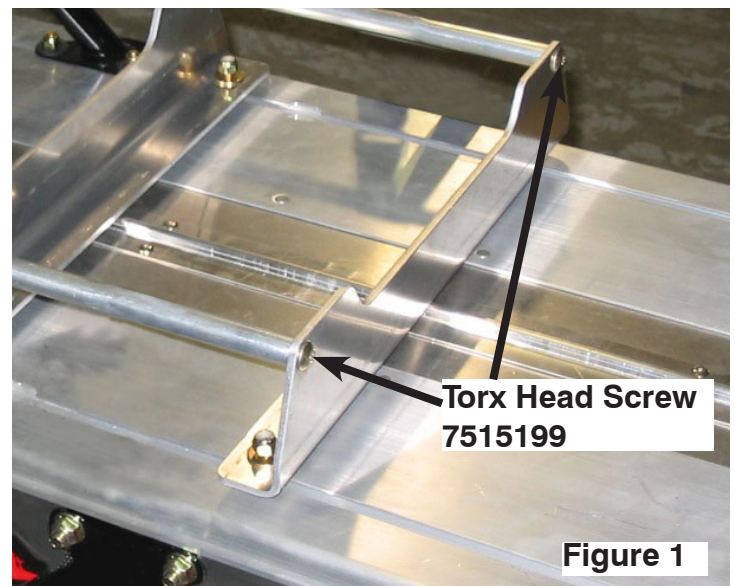


Figure 1

2. Slide the carriage bolts from the kit into the integrated T-slots of the tunnel. Two carriage bolts per side. Figure 2.



Figure 2

3. Install the rack on to the carriage bolts with spacers (7555932) under the rack. Keep the front of the rack within 3" of the seat bracket. Figure 3

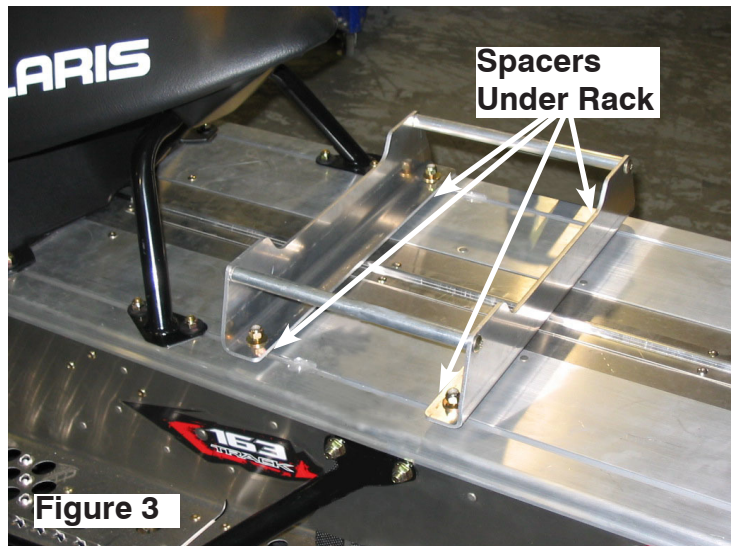


Figure 3

4. Install the washers and lock nuts on top of the carriage bolts and torque to 8 ft./lbs.
5. When placing the recommended fuel can (Polaris PN 2875249) into the rack, install the straps around the can and round tubes as shown. Tighten straps securely. Figure 4



Figure 4