

# HEATED DRIVER SEAT KIT



P/N 2884937


## APPLICATION

Verify accessory fitment at [www.polaris.com](http://www.polaris.com).

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

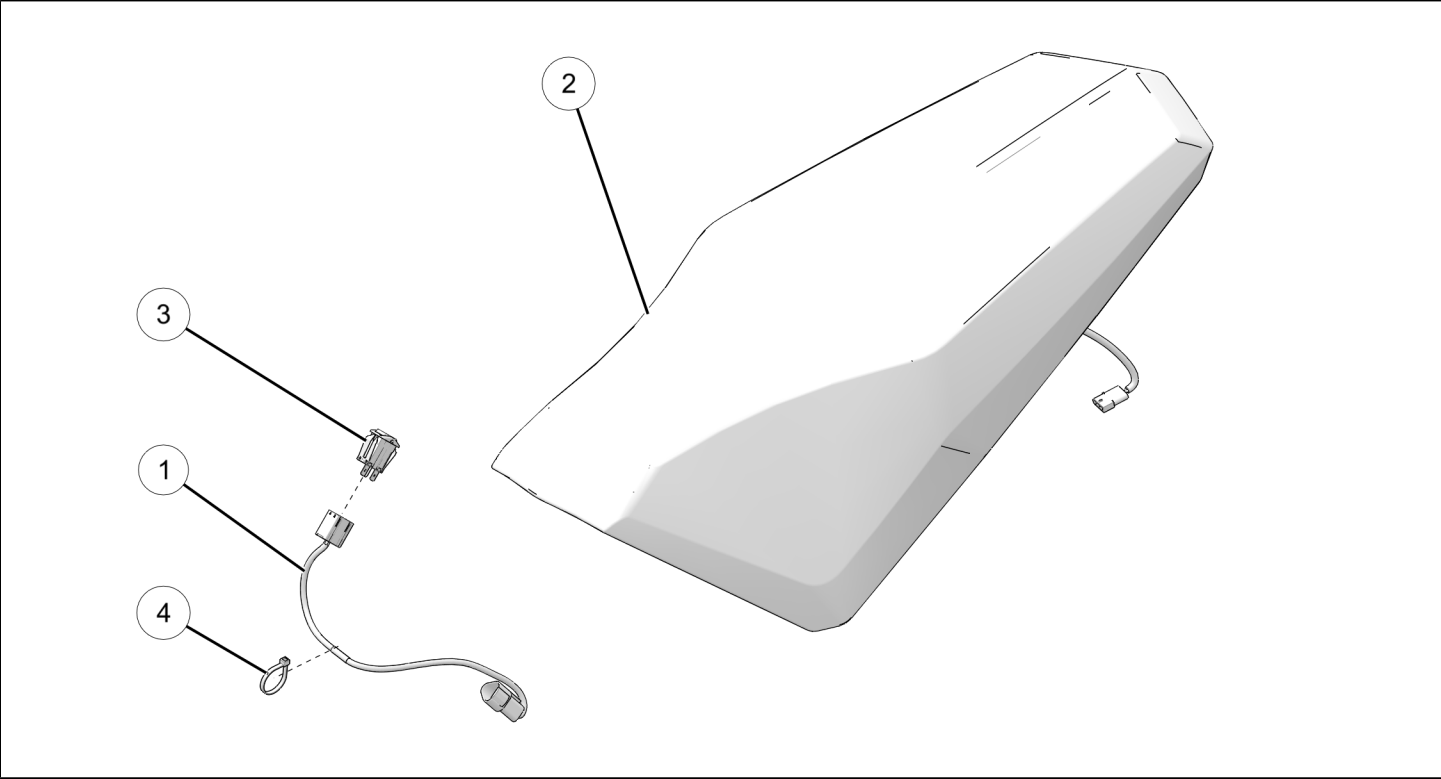

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Heated Seat Jumper Harness	2415790
2	1	Heated Seat	2690238
3	1	Heated Seat Switch	4017351
4	1	Cable Tie	7080138

## HARNESS DETAIL

### HEATED SEAT JUMPER HARNESS



REF	PART DESCRIPTION	PIN QTY/ GENDER	CONNECTS TO
1A	Main Harness Connector	3/Female	Main Harness
1B	Heated Seat Switch Connector	4/Female	Heated Seat Switch

### TOOLS REQUIRED

- Safety Glasses
- Cutting Tool
- Deburring Tool
- Drill
- Drill Bit:
  - 5/32 in (4 mm)
- Pliers, Push Pin Rivet
- Socket Set, Torx® Bit
- Torque Wrench

### IMPORTANT

Your Heated Driver Seat Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

# INSTALLATION INSTRUCTIONS


## VEHICLE PREPARATION

### GENERAL


#### IMPORTANT

Protect all finished surfaces during these operations.


1. Park snowmobile on a flat surface.
2. Push the engine stop switch down to the OFF position.
3. Turn the key to the OFF position and remove key.
4. Rotate the three 1/4 turn latches (A) and remove the side panel (B) by pulling the panel outward to release the tabs at the bottom. Repeat this step to remove the side panel from opposite side of the snowmobile.

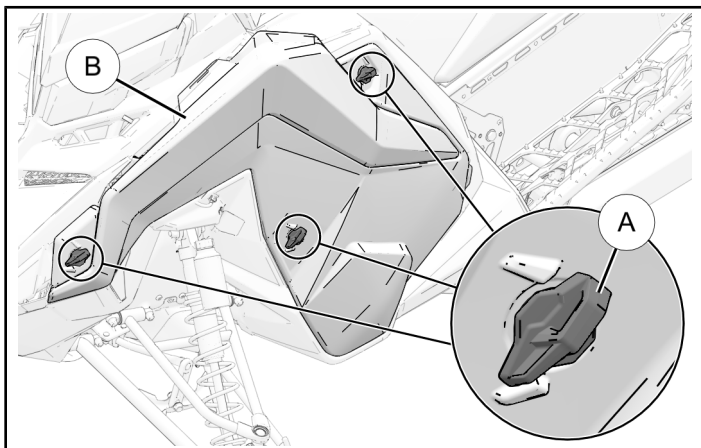


5. Rotate the 1/4 turn fasteners (C) at the rear corners of the hood.

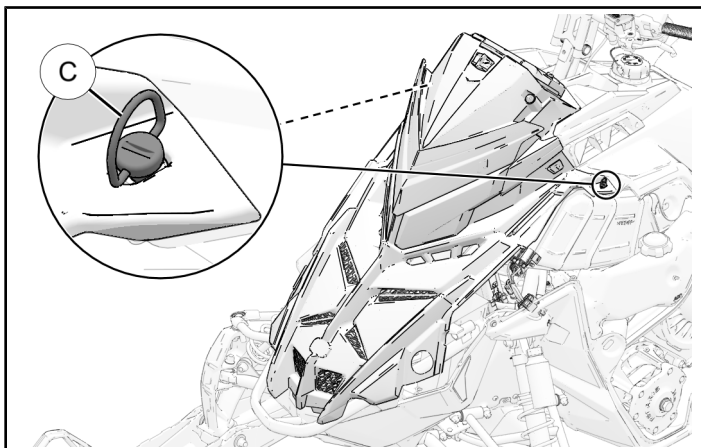


6. Disconnect the hood harness connector (D) from the main harness.

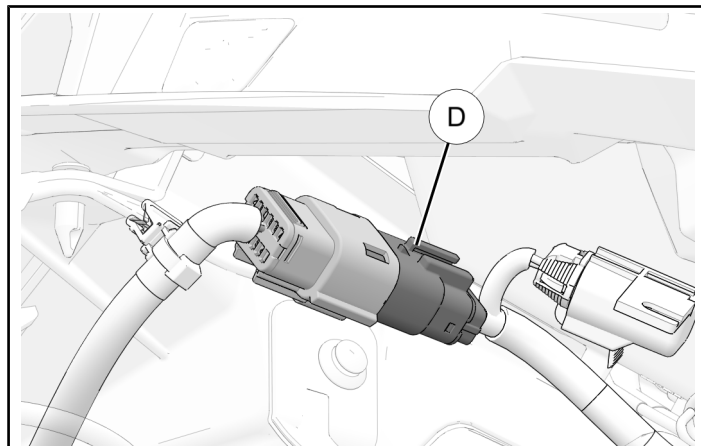


7. Remove the hood assembly (E).

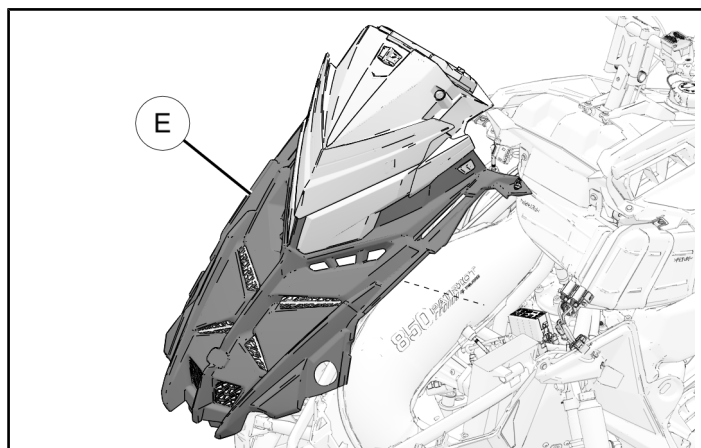


8. Turn the 1/4 turn latch at the rear of the seat and lift up to remove the seat.

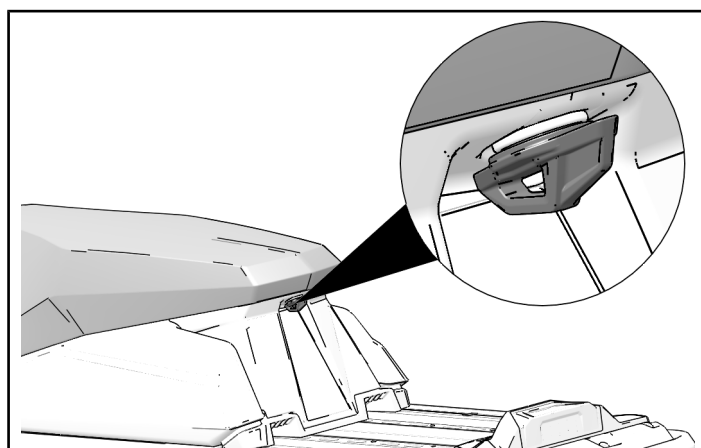


9. Remove the two fasteners ⑥ that secure the console and lower intake plenum to the over-structure.

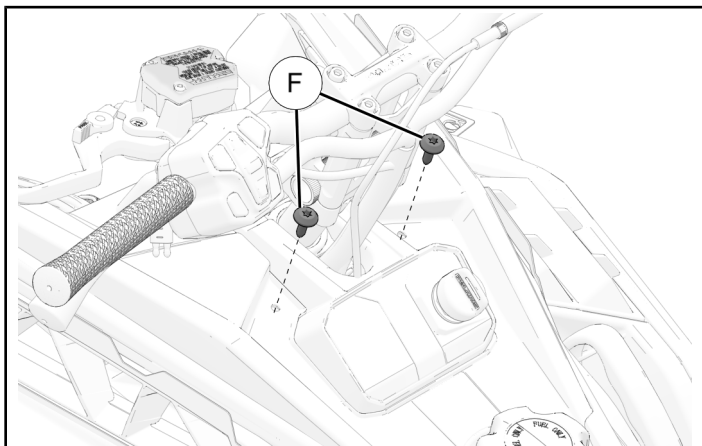


10. Remove the two push-pin rivets ⑥ that secure the front of the console to the lower intake plenum.

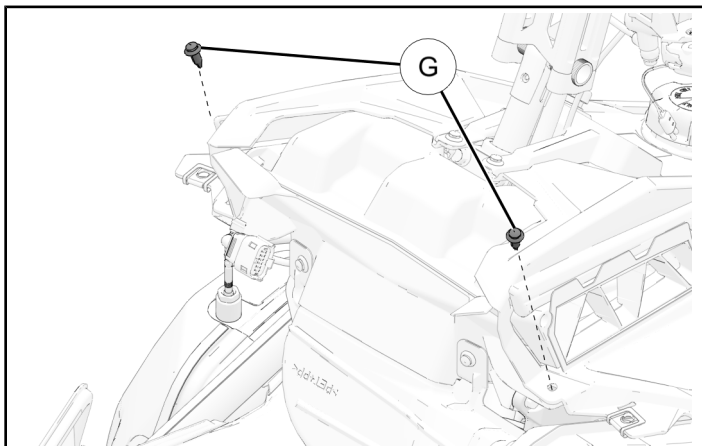


11. Remove the two fasteners ⑧, push-pin rivet ① and clutch tool ① that secure the lower portion of the console.

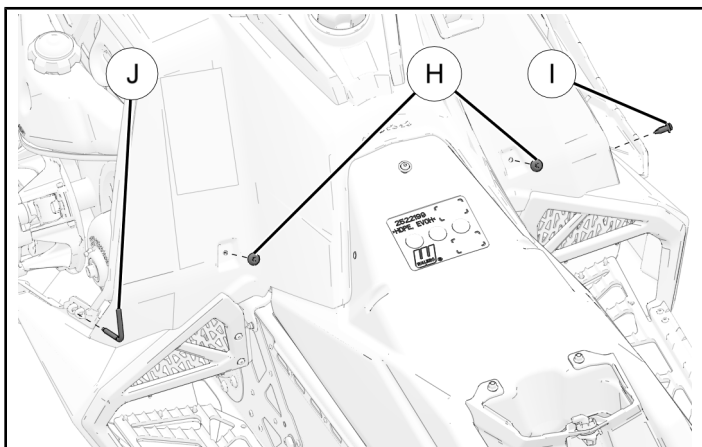


12. Remove fuel cap ⑫ and plastic fuel filler neck nut ⑬.

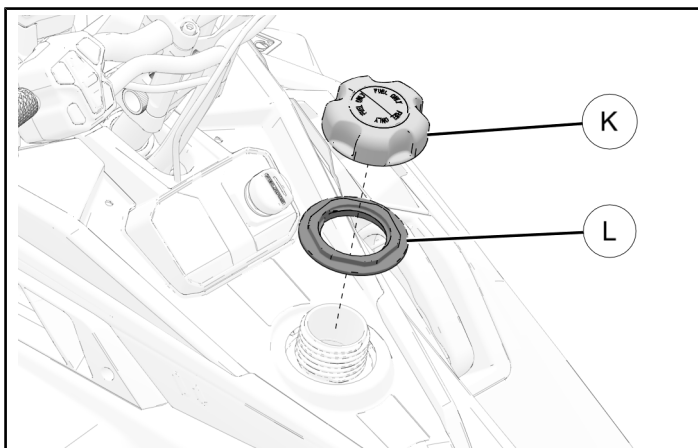

13. Lift up the center of the console and disconnect the key switch connector ⑭ from the key switch.

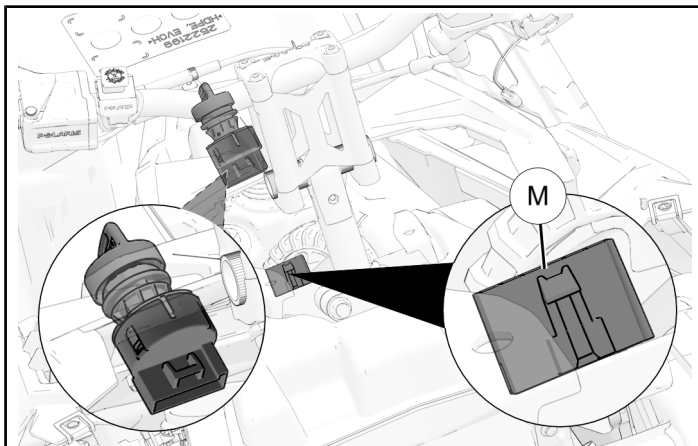


14. Carefully remove console ⑮ and set to the side with the starter rope still attached to the console.

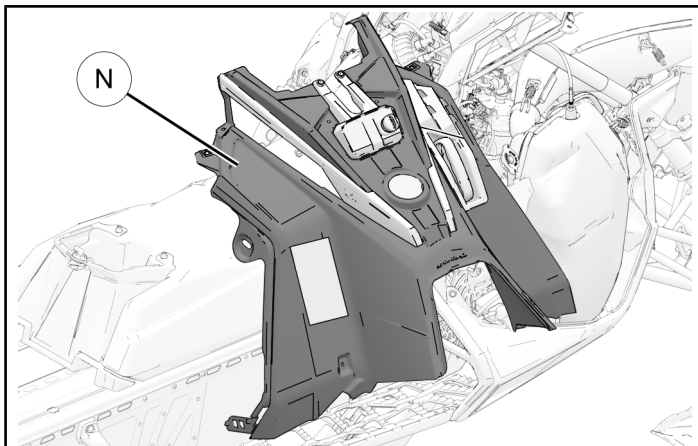


15. Reinstall the fuel cap.

## ACCESSORY INSTALLATION


1. Remove the cap from the driver seat heater switch.

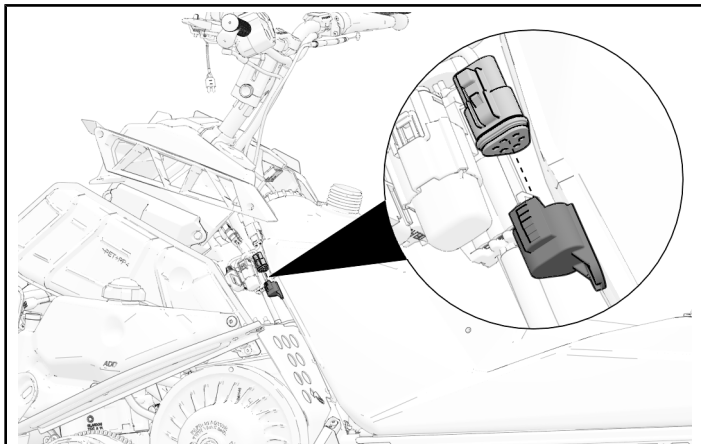

2. Connect the main harness connector **1A** of the heated seat jumper harness to the driver seat heater switch connector of the main harness.

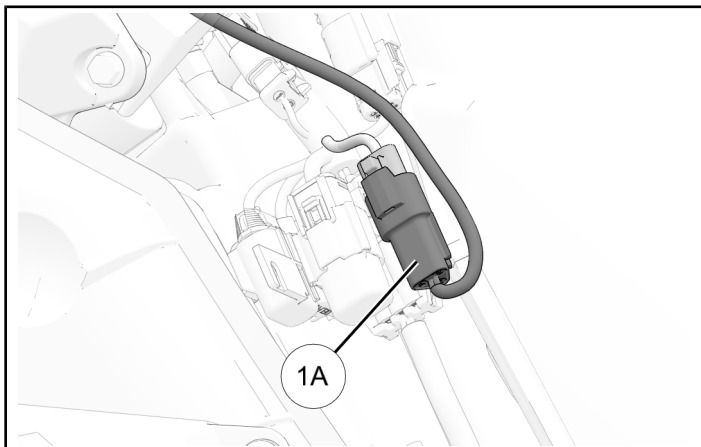


3. Carefully route the heated seat jumper harness ① upward and align the retention location tape of the jumper harness with the retention location of the main harness. Secure the heated seat jumper harness to the main harness with the provided cable tie ④.

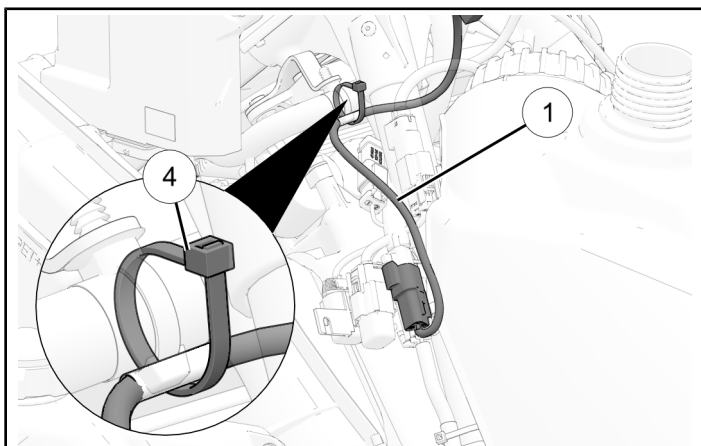


4. Next, flip the console over and locate the witness mark that shows where to put the switch. Using a drill and 5/32 in drill bit, drill around the witness mark.

### IMPORTANT

Control tool depth. Ensure tool is clear of all other parts and components to prevent damage to vehicle.

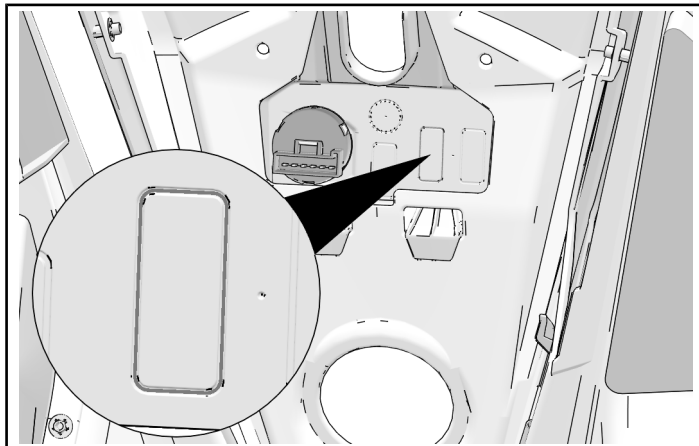

5. Remove remaining plastic with a suitable tool.
6. Use a deburring tool to clean up the edges until the heated seat switch ③ fits firmly into the hole.

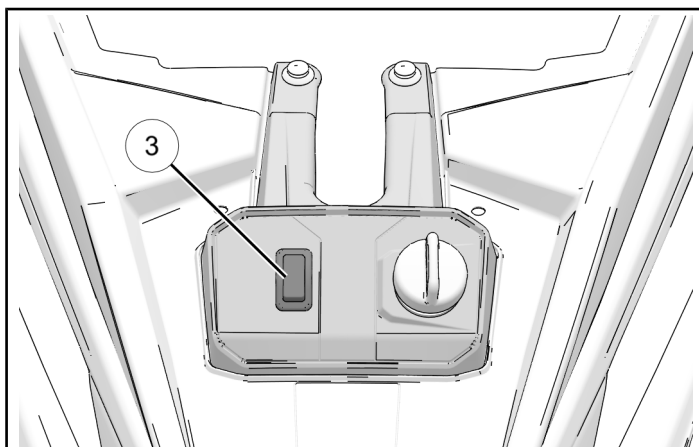





## VEHICLE REASSEMBLY

### GENERAL

1. Place console near its installed position and connect the heated seat switch ③ to the jumper harness heated seat switch connector 1B and the main harness key switch connector ① to the key switch.

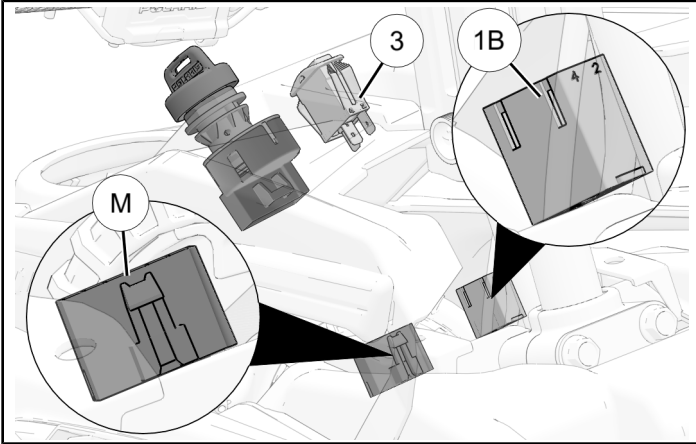


2. Remove the fuel cap and install the console into position. Install the plastic fuel filler neck nut ① and fuel cap ②.

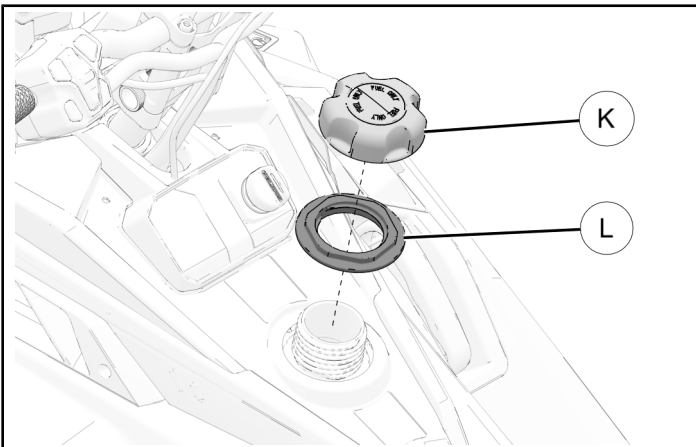


3. Install the two fasteners ④, push-pin rivet ⑤ and clutch tool ⑥ that secure the lower portion of the console. Torque fastener to specification.

#### TORQUE

Console Fasteners:  
**71 in-lbs (8 N·m)**

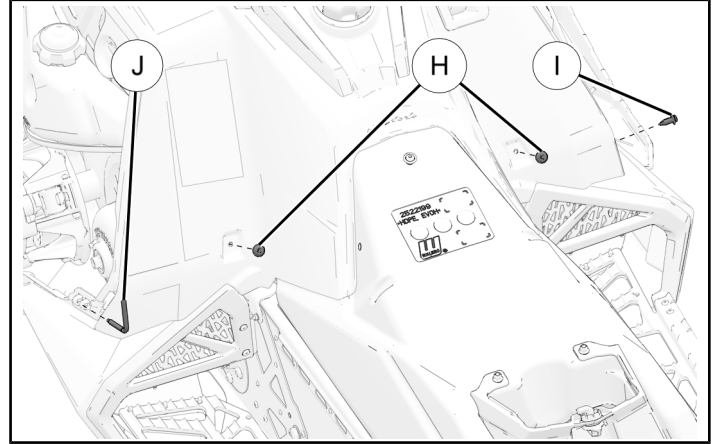


4. Install the two push-pin rivets ⑦ that secure the front of the console to the lower intake plenum.

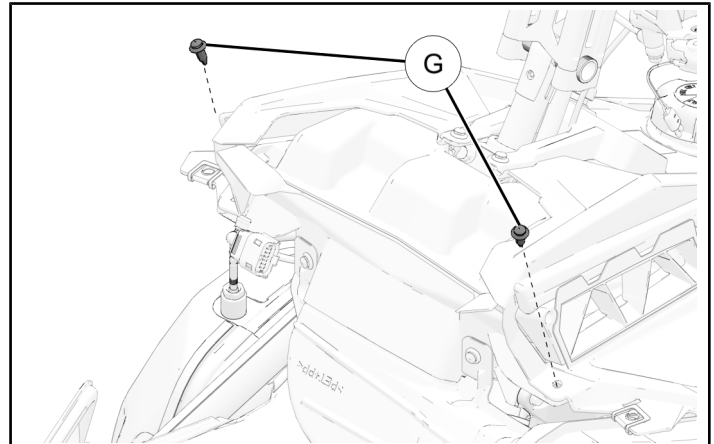


5. Install the two fasteners ⑥ that secure the console and lower intake plenum to the over-structure. Torque fastener to specification.

#### TORQUE

Console Fasteners:  
71 in-lbs (8 N·m)

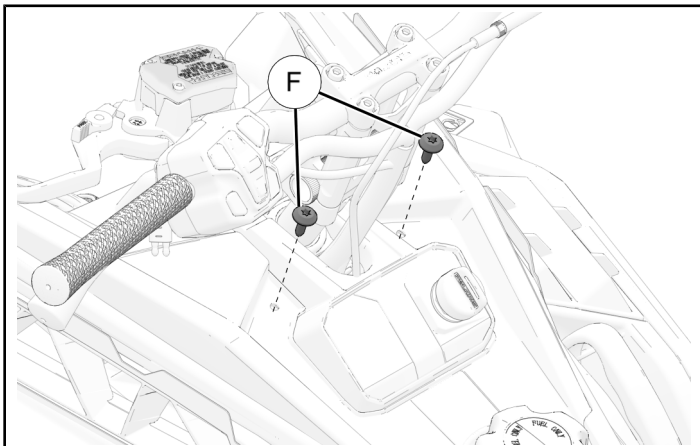


6. Install the hood ⑤ by inserting the front of the hood into the nosepan.

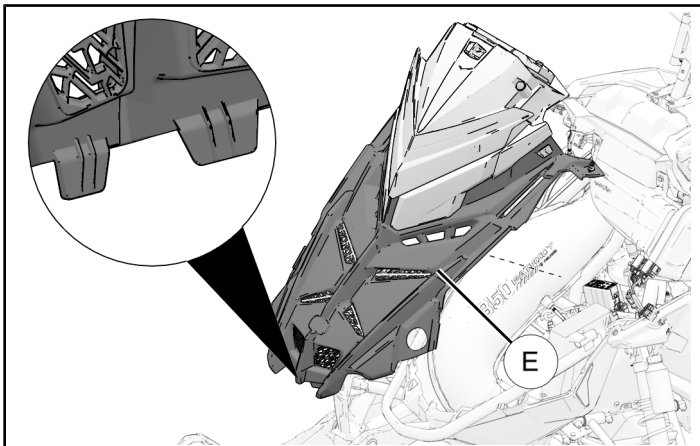


7. Connect the hood harness connector ④ to the main harness.

#### NOTICE


Verify the harness connectors are clean and dry prior to assembly.

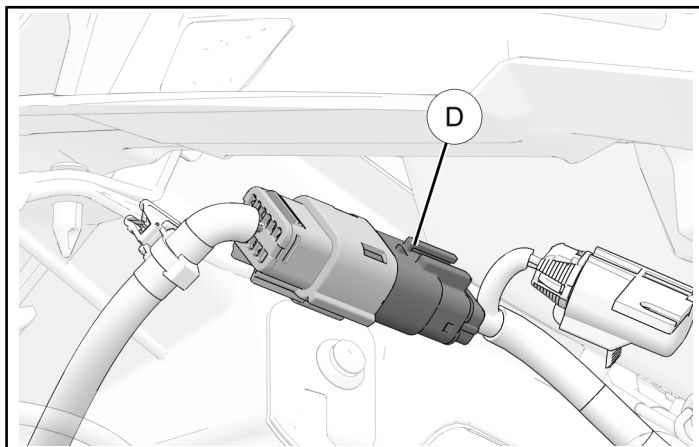


8. Rotate the 1/4 turn fasteners ③ at the rear corners of the hood to secure the rear of the hood to the console.

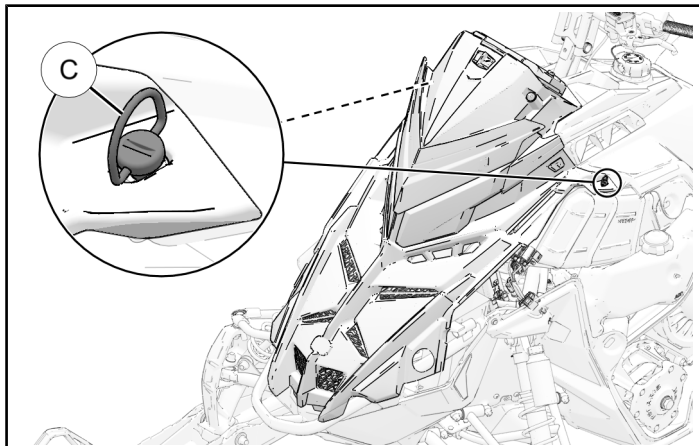


9. Align the tabs at the bottom of the side panel ② with the slots in the fender and carefully insert.

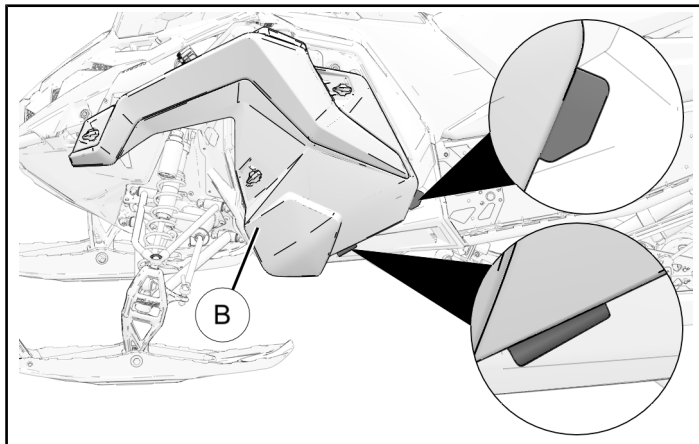

10. Close the side panel (B) and secure by rotating the three 1/4 turn latches (A). Repeat this step to install the side panel onto opposite side of the snowmobile.

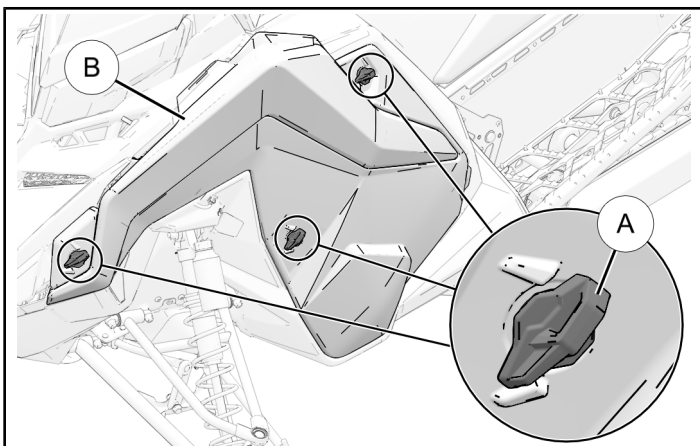

11. Place heated seat (2) near its installed position and plug in the heated seat harness connector (O) to the chassis harness connector (P) as shown.

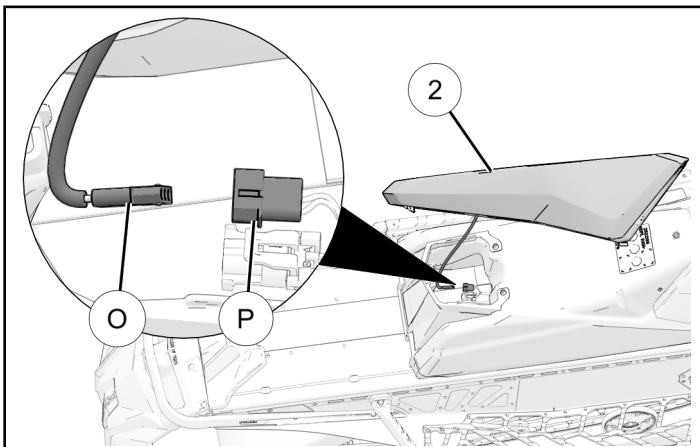


12. Install the seat and secure with 1/4 turn latch.

#### NOTICE

During installation, make sure the heated seat harness is not pinched between the seat or any chassis components.

#### OPERATION

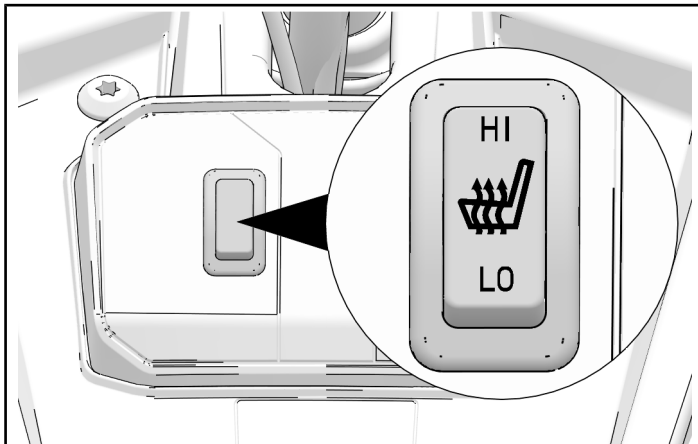

Push the switch up to activate the High heat setting or push the switch down to activate the Low heat setting. Return the switch to the middle position to turn the heated seat off.

#### INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

