

# SKI KIT



P/N 2877679; 2877680; 2880482

## APPLICATION


ALL POLARIS PRO-RIDE RUSH, PRO-RIDE SWITCHBACK, 550 INDY ADVENTURE, ALL VOYAGEUR, AND ALL AXYS MODELS

## BEFORE YOU BEGIN

Read these instructions thoroughly and make sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

**NOTE:** Due to the technical nature of this kit, Polaris recommends that the installation be performed by a Certified Polaris Technician. Check Dealer Application chart for correct skag.

## KIT CONTENTS

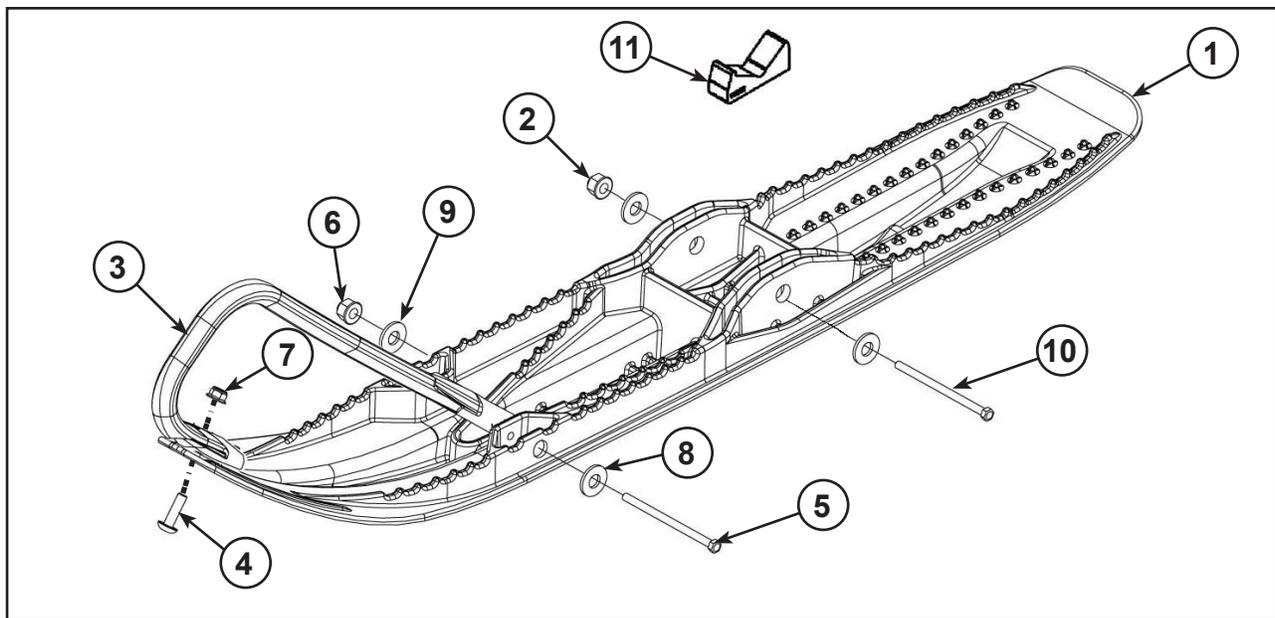

Ref	Qty	Part Description	Part Number		
			2877679	2879152	2880482
1	1	Ski Assembly	1822889	1823916	1824116-070
2	1	Nylon Lock Nut	7547263	7547423	7547313
3	1	Toe-Plastic Ski Black	5435681-070	5435681-070	5435681-070
4	1	Screw	7518070	7518906	7518906
5	1	Bolt	7518655	7519737	7519985
6	1	Nut Nyloc Flange	7542153	7547650	7547650
7	1	Nut Hex Flange	7542343	7547332	7547332
8	2	Washer	7558301	7556737	-
9	1	Washer	-	-	7556737
10	1	Bolt	-	-	7518668
11*	1	Ski Stop	5412794	5414375	5414375
	1	Instructions	9925407	9925407	9925407

ITEMS MARKED (\*) ARE NOT INCLUDED IN THE KIT ASSEMBLY.

## TOOLS NEEDED

Pliers

Screwdriver

Metric Wrench Set

Hammer

Torque Wrench

Standard Wrench Set

## APPROXIMATE ASSEMBLY TIME

25 mins

## IMPORTANT

Your Polaris SKI KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

1. Lift front of snowmobile and place support so the skis are suspended.

**WARNING:** Be sure the machine is stable and solidly supported before proceeding. Serious injury may result if machine tips or falls.

2. Remove nut and bolt from ski and discard nut.
3. Remove existing ski from snowmobile.
4. Install rubber ski stop (11), as shown in figure.
5. Install ski to spindle. From outside of ski assembly (1), install bolt (10), washers, nylon lock nut (2) as shown in figure. Torque to 36 ft. lbs. (48.8 Nm).

