

# BOGIE WHEEL KIT

P/N 2878251



**POLARIS®**

## Application

### All Pro-Ride RMK Models

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## Kit Contents:

| <u>Qty</u> | <u>Part Description</u>   | <u>Part Number</u> |
|------------|---------------------------|--------------------|
| 2          | Block-Wheel Mount         | 5631446            |
| 2          | Bogie-Wheel Assembly 5.62 | 1590434-070        |
| 2          | Screw, M8 1.25 x 25       | 7518952            |
| 2          | Screw, M8 1.25 x 80       | 7519217            |
| 4          | Nut, M8 x 1.25            | 7547332            |
| 2          | Washer, Spring            | 7556489            |
| 1          | Instructions              | 9922966            |

## Tools Required:

Metric Wrench Set

**APPROXIMATE ASSEMBLY TIME:** 20 minutes


**IMPORTANT:** For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence as shown on the attached instructions.

## INSTALLATION INSTRUCTIONS:

1. Install as illustrated, one set on the left rail and the other on the right rail. **NOTE:** Make certain they are installed directly across from each other. Make sure the wheels are located properly to the inside and outside of the rail as shown. Pro-Ride RMK without clicker shocks shown in Figure 1. Pro-Ride RMK/RMK Assault with clicker shocks shown in Figure 2.

## Pro-Ride RMK without Clicker Shocks

**NOTE:** When adding wheel kits, order and install two Bogie Wheel Kit (PN 2878251) for best results.

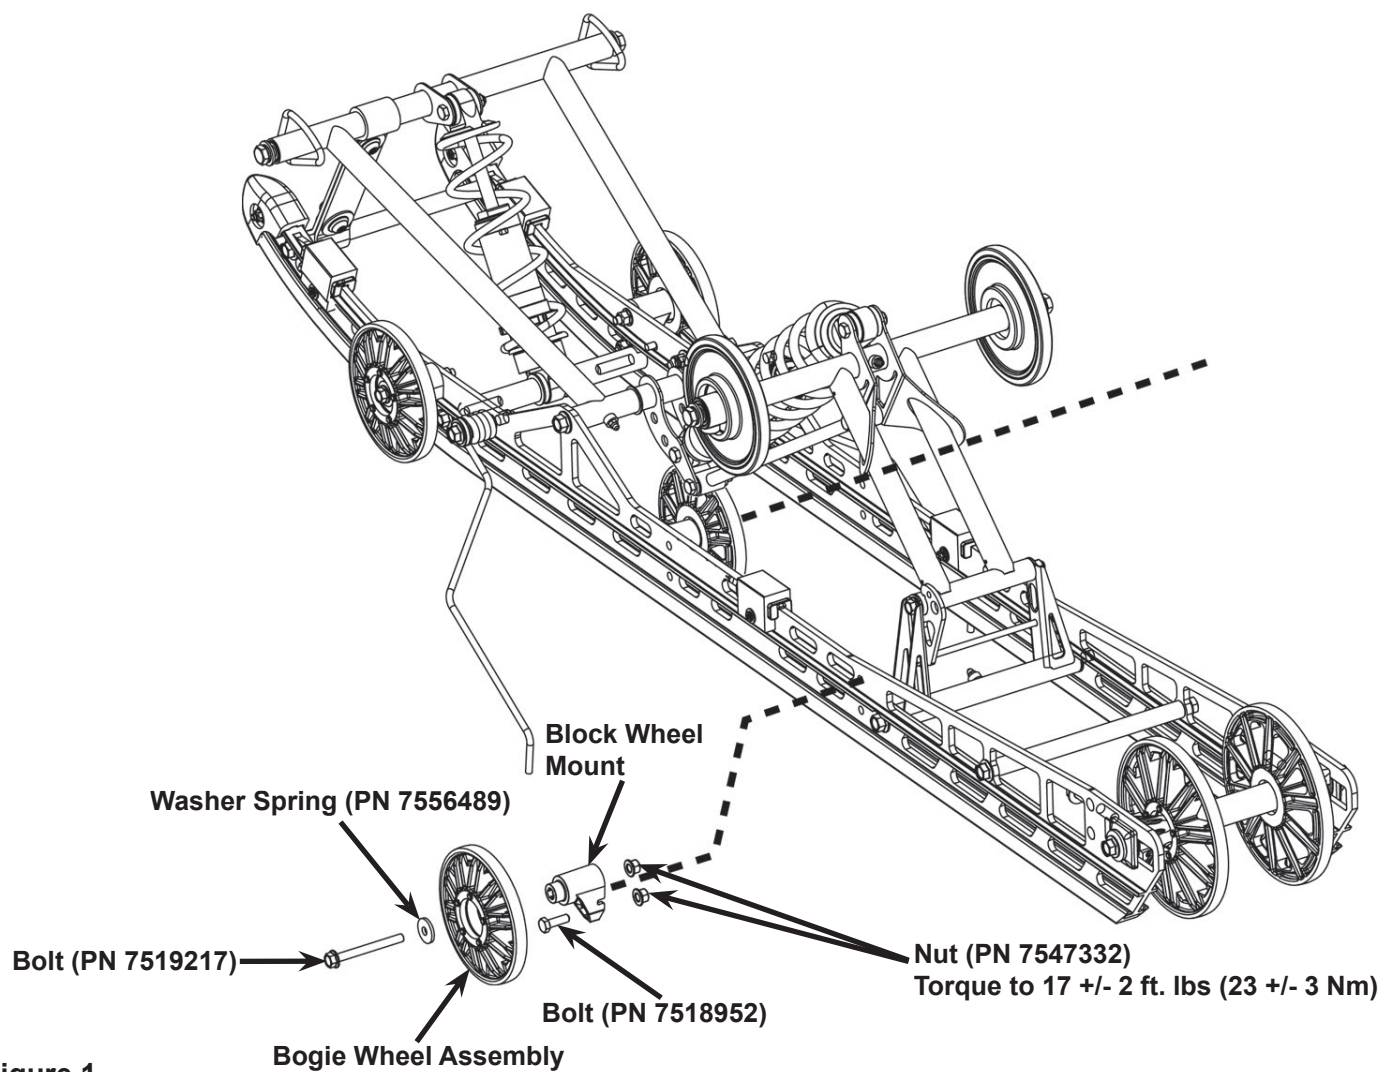

**Figure 1**

## Pro-Ride RMK/ RMK Assault with Clicker Shocks

**NOTE:** When adding wheel kits, order and install two Bogie Wheel Kit (PN 2878251) for best results. When a center set of wheels are installed, scratchers must be removed.

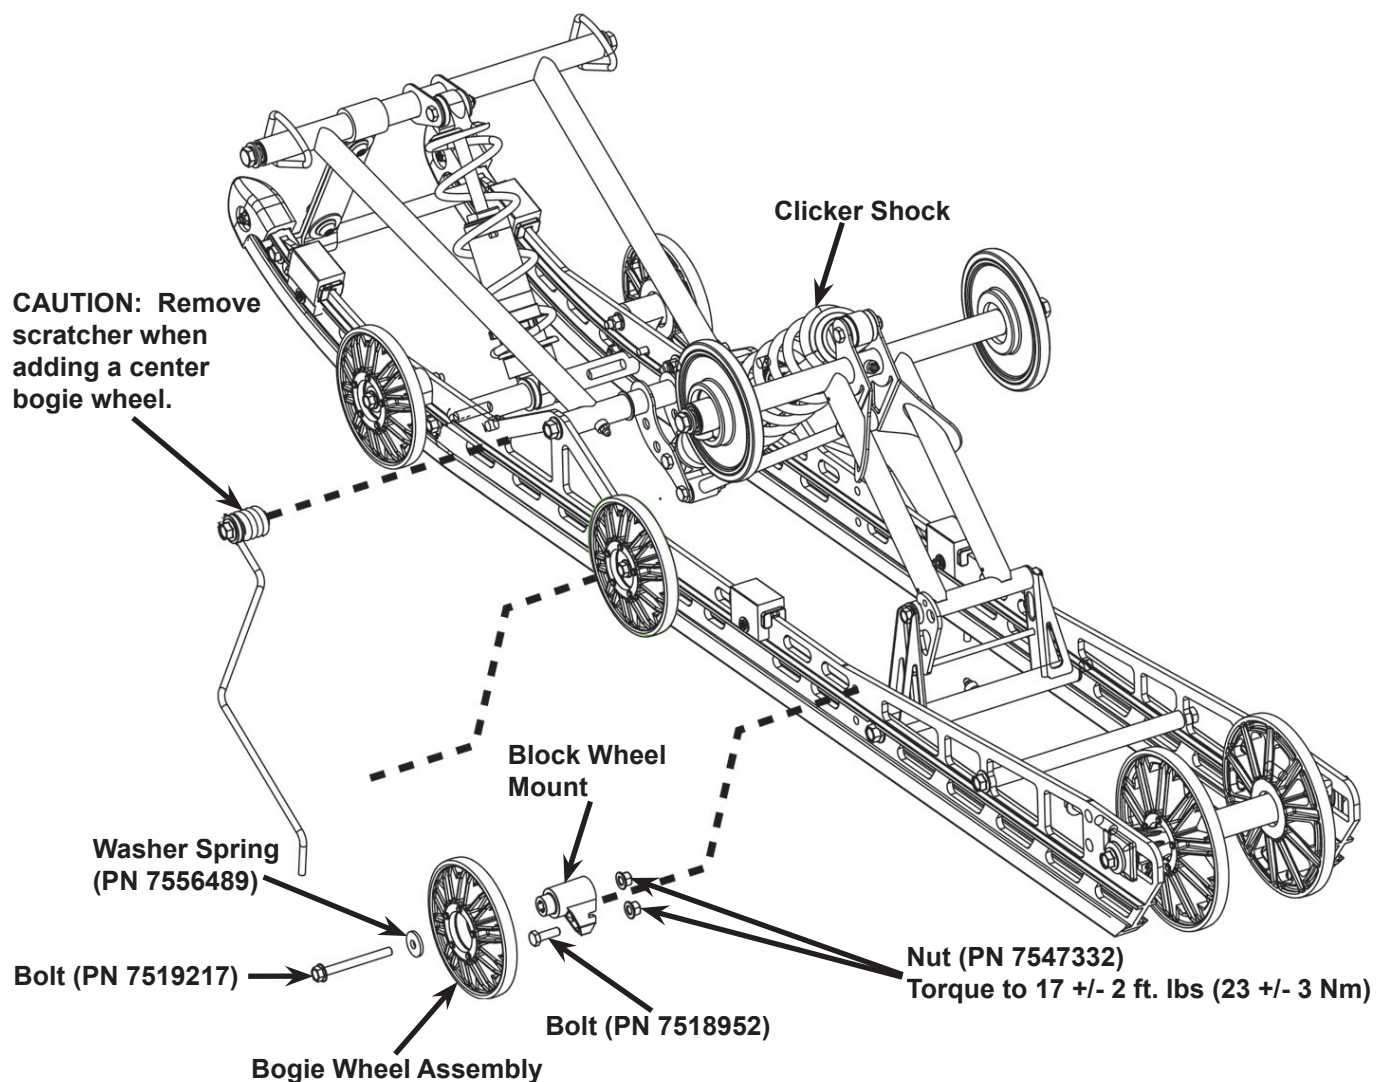


Figure 2